

Part No. 22-392



# Etching Solution Heater

## DIRECTIONS:

1. Place heater on rim of tank.  
Solution level should be approx. 1" below the rim of the tank.
2. WAIT 15 MINUTES to allow the thermostat to adjust itself to solution temperature.
3. Now insert the electrical outlet.
4. Turn knob on top of heater clockwise until pilot light just goes on.
5. Allow heater to operate at this point for AT LEAST ONE HOUR. (Do not allow temperature to rise above desired level.
6. If temperature is not at desired level...turn knob 1/4 turn right to increase...or left to decrease.
7. Again WAIT and keep checking your thermometer. Continue steps 6 and 7 until desired temperature is reached. Each heater must be adjusted to each individual tank.

## CAUTION:

Use in well ventilated area as fumes from warming etching solution will irritate eyes. Persons with sensitive skin should avoid direct contact area or wear rubber gloves.

REMEMBER ... accuracy takes patience ... there is no fast way.

NOTE: It is recommended that before removing heater from tank, it should be disconnected from the outlet and allowed to cool for ten minutes.