

Solar Man Robot

Components list is on PAGE 2.

 
1




Assemble right arm




Assemble left arm

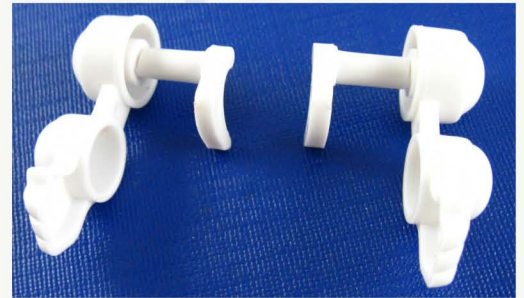


2

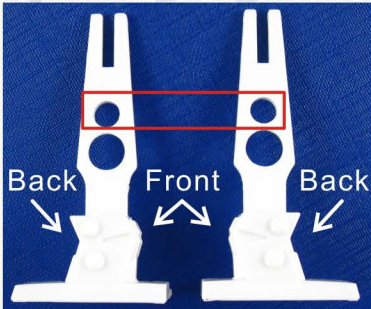 

 Please note to verify front and back, the holes in red rectangle are for this assembling step.

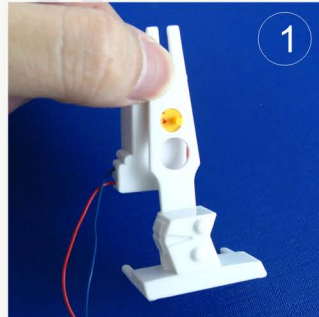


Install left leg

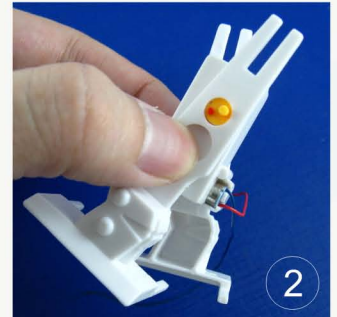 


Install right leg

 
3

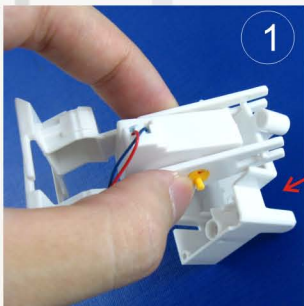

Firstly as picture shown, assemble the top of leg to the shaft of back cover.

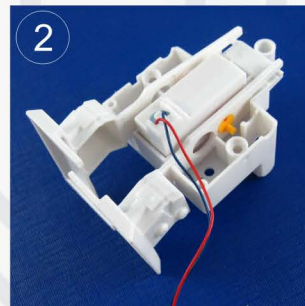 


Then fix motor and both legs.

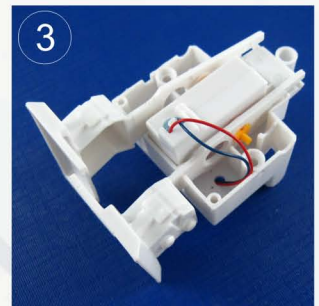 


Follow the picture, get the motor wire through out of the hole

 4

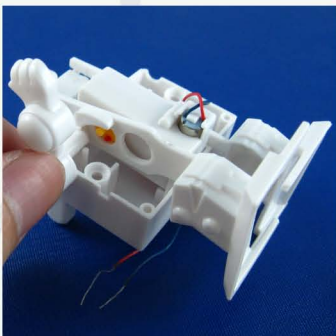


As picture shown, install the right arm to the motor shaft.

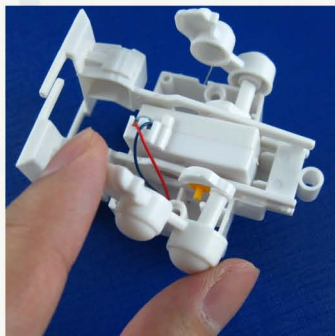 


Install the left arm the same as right arm.

 
5

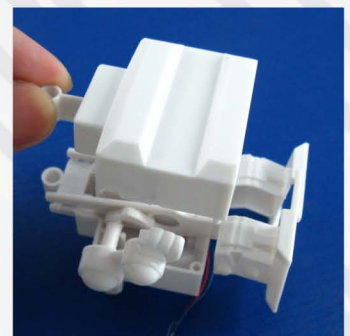


Install the front cover.

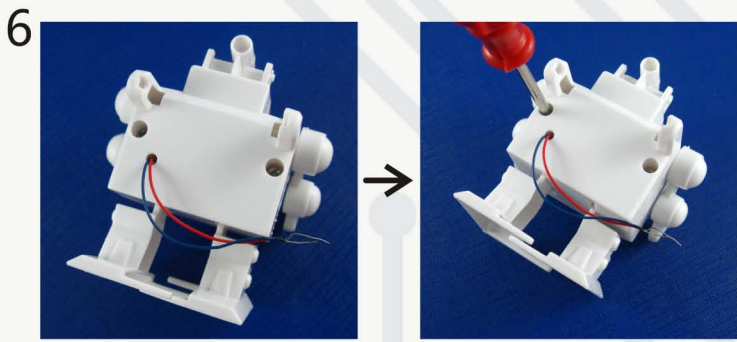 

 
Fix the front and back covers with screws.

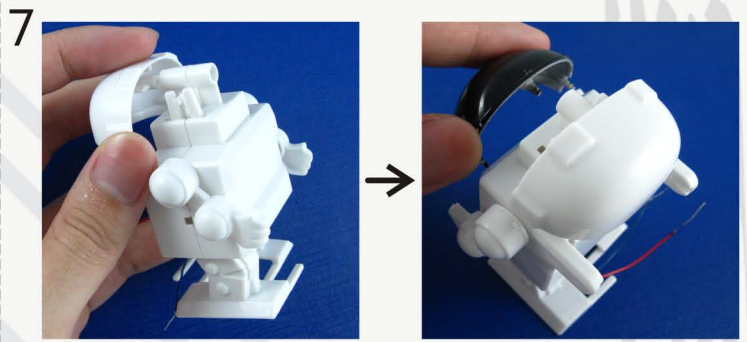

 Assemble the front and back covers of head.

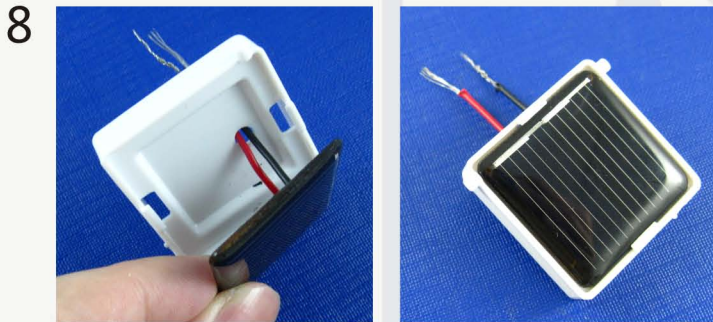



Install the solar board.

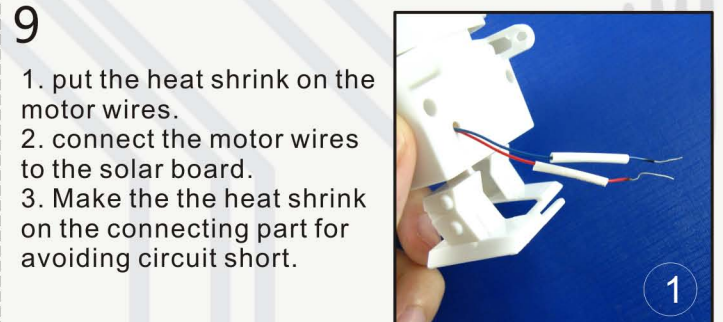 

9
1. put the heat shrink on the motor wires.
2. connect the motor wires to the solar board.
3. Make the the heat shrink on the connecting part for avoiding circuit short.



  10
Install the solar part as picture shown.

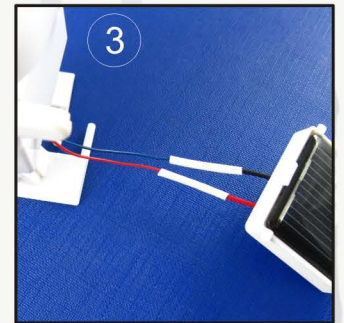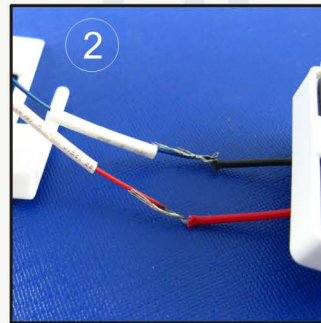

Assembling finished



Components diagram



Components list:

Front cover*1, Back cover*1, Left leg*1, Right leg*1, Left arm*1, Right arm*1, Left shoulder lever*1, Right shoulder lever*1, Front cover of head (black)*1, Back cover of head*1, Solar board*1, Solar board holder*1, Motor*1, Heat shrink*2, Screw*2 (M2.2*6), Screwdriver*1.