# **Spansion® Analog and Microcontroller Products**



The following document contains information on Spansion analog and microcontroller products. Although the document is marked with the name "Fujitsu", the company that originally developed the specification, Spansion will continue to offer these products to new and existing customers.

# **Continuity of Specifications**

There is no change to this document as a result of offering the device as a Spansion product. Any changes that have been made are the result of normal document improvements and are noted in the document revision summary, where supported. Future routine revisions will occur when appropriate, and changes will be noted in a revision summary.

#### **Continuity of Ordering Part Numbers**

Spansion continues to support existing part numbers beginning with "MB". To order these products, please use only the Ordering Part Numbers listed in this document.

#### **For More Information**

Please contact your local sales office for additional information about Spansion memory, analog, and microcontroller products and solutions.

# ASSP for Power Management Applications BIPOLAR

# Switching Regulator Controller (Switchable between push-pull and single-end functions)

MB3759

#### ■ DESCRIPTION

The MB3759 is a control IC for constant-frequency pulse width modulated switching regulators. The IC contains most of the functions required for switching regulator control circuits. This reduces both the component count and assembly work.

#### **■ FEATURES**


- Drives a 200 mA load
- Can be set to push-pull or single-end operation
- Prevents double pulses
- · Adjustable dead-time
- Error amplifier has wide common phase input range
- Built in a circuit to prevent misoperation due to low power supply voltage.
- · Built in an internal 5 V reference voltage with superior voltage reduction characteristics
- One type of package (SOP-16pin : 1 type)

# ■ Application


- Power supply module
- Industrial Equipment
- AC/DC Converter etc.



# **■ PIN ASSIGNMENT**

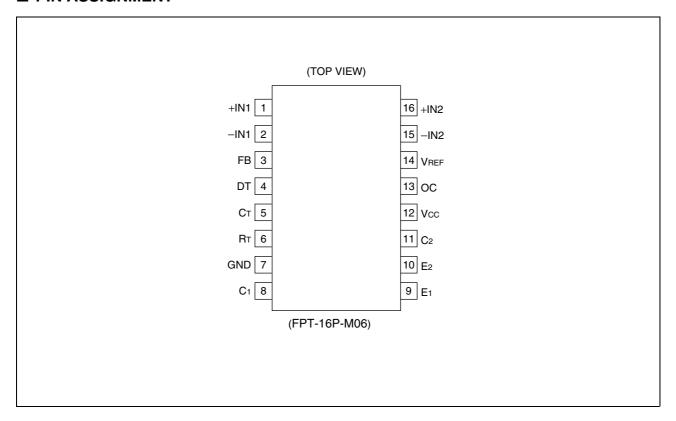

# **■ BLOCK DIAGRAM**

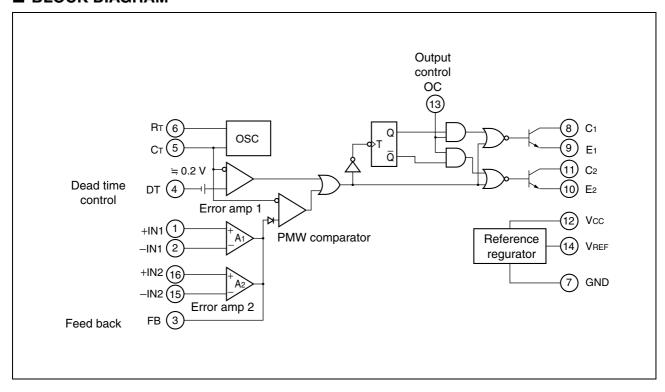

# ■ ABSOLUTE MAXIMUM RATINGS

Parameter		Symbol	Condition	Ra	Unit	
		Syllibol	Condition	Min	Max	Oilit
Power supply voltage		Vcc	_	_	41	V
Collector output voltage		VCE	_	_	41	V
Collector output current		Ice	_	_	250	mA
Amplifier input voltage		Vı	_	_	Vcc + 0.3	V
Power dissipation	SOP *	Po	Ta ≤ +25 °C	_	620	mW
Operating ambient temperature		Ta	_	-30	+85	°C
Storage temperature		Tstg	_	-55	+125	°C

<sup>\*:</sup> When mounted on a 4 cm square double-sided epoxy circuit board (1.5 mm thickness)
The ceramic circuit board is 3 cm x 4 cm (0.5 mm thickness)

WARNING: Semiconductor devices can be permanently damaged by application of stress (voltage, current, temperature, etc.) in excess of absolute maximum ratings. Do not exceed these ratings.

#### ■ RECOMMENDED OPERATING CONDITIONS

Parameter	Cumbal	Value				
Parameter	Symbol	Min	Тур	Max	Unit	
Power supply voltage	Vcc	7	15	32	V	
Collector output voltage	Vce	_	_	40	V	
Collector output current	Ice	5	_	200	mA	
Amplifier input voltage	VIN	-0.3	0 to V <sub>R</sub>	Vcc – 2	V	
FB sink current	Isink	_	_	0.3	mA	
FB source current	Isource	_	_	2	mA	
Reference section output current	IREF	_	5	10	mA	
Timing resistor	R⊤	1.8	30	500	kΩ	
Timing capacitor	Ст	470	1000	10 <sup>6</sup>	pF	
Oscillator frequency	fosc	1	40	300	kHz	
Operating ambient temperature	Ta	-30	+25	+85	°C	

Note: Values are for standard derating conditions. Give consideration to the ambient temperature and power consumption if using a high supply voltage.

WARNING: The recommended operating conditions are required in order to ensure the normal operation of the semiconductor device. All of the device's electrical characteristics are warranted when the device is operated within these ranges.

Always use semiconductor devices within their recommended operating condition ranges. Operation outside these ranges may adversely affect reliability and could result in device failure. No warranty is made with respect to uses, operating conditions, or combinations not represented on the data sheet. Users considering application outside the listed conditions are advised to contact their representatives beforehand.

# **■ ELECTRICAL CHARACTERISTICS**

 $(Vcc = 15 \text{ V}, Ta = +25 ^{\circ}C)$ 

Parameter		Sym-	Condition	Value			Unit	
		bol		Min	Тур	Max	Jill	
	Output voltage		V <sub>REF</sub>	lo = 1 mA	4.75	5.0	5.25	V
	Input regulation		$\Delta V_{R(IN)}$	7 V ≤ Vcc ≤ 40 V, Ta = +25 °C	_	2	25	mV
	Load regula	ation	$\Delta V_{\text{R(LD)}}$	1 mA ≤ lo ≤ 10 mA, Ta = +25 °C	_	-1	-15	mV
Reference section	Temperatur	e stability	ΔVR/ΔΤ	–20 °C ≤ Ta ≤ + 85 °C	_	±200	±750	μV/°C
	Short circuit output current		Isc	_	15	40	_	mA
	Reference lockout voltage		_	_	_	4.3	_	V
	Reference hysteresis voltage		_	_	_	0.3	_	V
	Oscillator frequency		fosc	$\begin{aligned} R_T &= 30 \text{ k}\Omega, \\ C_T &= 1000 \text{ pF} \end{aligned}$	36	40	44	kHz
Oscillator	Standard deviation of frequency		_	$\begin{aligned} R_T &= 30 \text{ k}\Omega, \\ C_T &= 1000 \text{ pF} \end{aligned}$	_	±3	_	%
section	Frequency change with voltage		_	7 V ≤ Vcc ≤ 40 V, Ta = +25 °C	_	±0.1	_	%
Frequency of temperature		change with e	Δfosc/ΔT	–20 °C ≤ Ta ≤ +85 °C		±0.01	_	%/°C
	Input bias current		lσ	$0 \le V_i \le 5.25 \ V$	_	-2	-10	μΑ
Dead-time	Maximum duty cycle (Each output)		_	V <sub>I</sub> = 0	40	45	_	%
control section	control section Input threshold	0% duty cycle	V <sub>DO</sub>	_		3.0	3.3	V
voltage	Max duty cycle	<b>V</b> DM	_	0	_	_	V	


(Continued)

# (Continued)


(Vcc = 15 V, Ta = +25 °C)

Parameter		Sym-		Value				
		bol	Condition	Min	Тур	Max	Unit	
	Input offset	voltage	Vio	Vo (pin3) = 2.5 V	_	±2	±10	mV
Input offset		current	lio	Vo (pin3) = 2.5 V	_	±25	±250	nA
	Input bias c	urrent	lı .	Vo (pin3) = 2.5 V	_	-0.2	-1.0	μΑ
	Common-mode input voltage		Vсм	7 V ≤ Vcc ≤ 40 V	-0.3	_	Vcc - 2	V
Error amplifier	Open-loop vamplification		Av	0.5 V ≤ V <sub>0</sub> ≤ 3.5 V	70	95	_	dB
section	Unity-gain b	andwidth	BW	Av = 1	_	800	_	kHz
	Common-m rejection rat		CMR	Vcc = 40 V	65	80	_	dB
	Outputsink	ISINK	Isink	$-5 \text{ V} \le \text{V}_{\text{ID}} \le -15$ mV, Vo = 0.7 V	0.3	0.7	_	mA
	current (pin 3)	ISOURCE	Isource	$15 \text{ mV} \leq V_{\text{ID}} \leq 5V,$ $V_0 = 3.5 \text{ V}$	-2	-10	_	mA
Collector leakage current Emitter leakage current		Ico	VcE = 40 V, Vcc = 40 V	_	_	100	μΑ	
		age current	leo	Vcc = Vc = 40 V, VE = 0		_	-100	μΑ
Output Collector emitter	Emitter grounded	V <sub>SAT(C)</sub>	V <sub>E</sub> = 0, I <sub>C</sub> = 200 mA	_	1.1	1.3	V	
	saturation voltage	Emitter follower	V <sub>SAT(E)</sub>	Vc = 15 V, IE = -200 mA	_	1.5	2.5	V
	Output control input current		Іорс	VI = VREF	_	1.3	3.5	mA
PWM	Input thresh	old voltage	V <sub>TH</sub>	0% Duty	_	4	4.5	V
comparator section	comparator section Input sink cu		Isink	Vo (pin3) = 0.7 V	0.3	0.7	_	mA
Power supply current		Icc	V(pin4) = 2 V, Refer to "■ TEST CIRCUIT"	_	8	_	mA	
Standby current		Iccq	V(pin6) = VREF, I/O open	_	7	12	mA	
	Rise time	grounded t <sub>F</sub>	<b>t</b> R	R <sub>L</sub> = 68 Ω	_	100	200	ns
	Fall time		tF	$R_L = 68 \Omega$	_	25	100	ns
characteristics	Rise time		<b>t</b> R	$R_L = 68 \Omega$	_	100	200	ns
Fall time	Fall time		tғ	$R_L = 68 \Omega$	_	40	100	ns

# **■ TEST CIRCUIT**

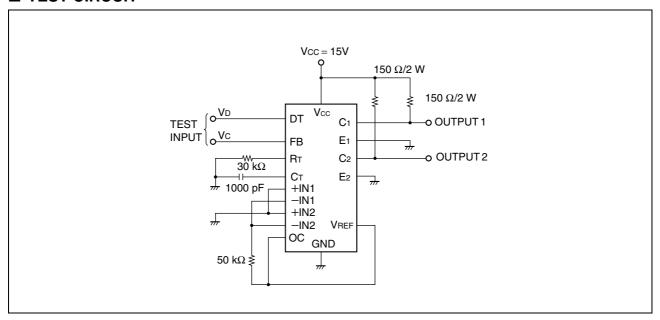

# **■ OPERATING TIMING**

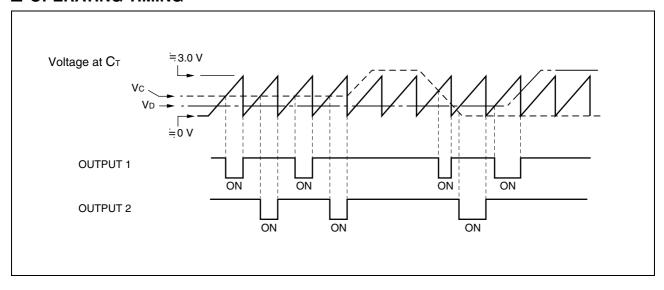

# **■ OSCILLATION FREQUENCY**

$$fosc = \frac{1.2}{RT \times CT}$$

$$RT : k\Omega$$


$$CT : \mu F$$

$$fosc : kHz$$


# **■ OUTPUT LOGIC TABLE**

Input (Output Control)	Output State
GND	Single-ended or parallel output
V <sub>REF</sub>	Push-pull

# **■ TYPICAL CHARACTERISTICS**

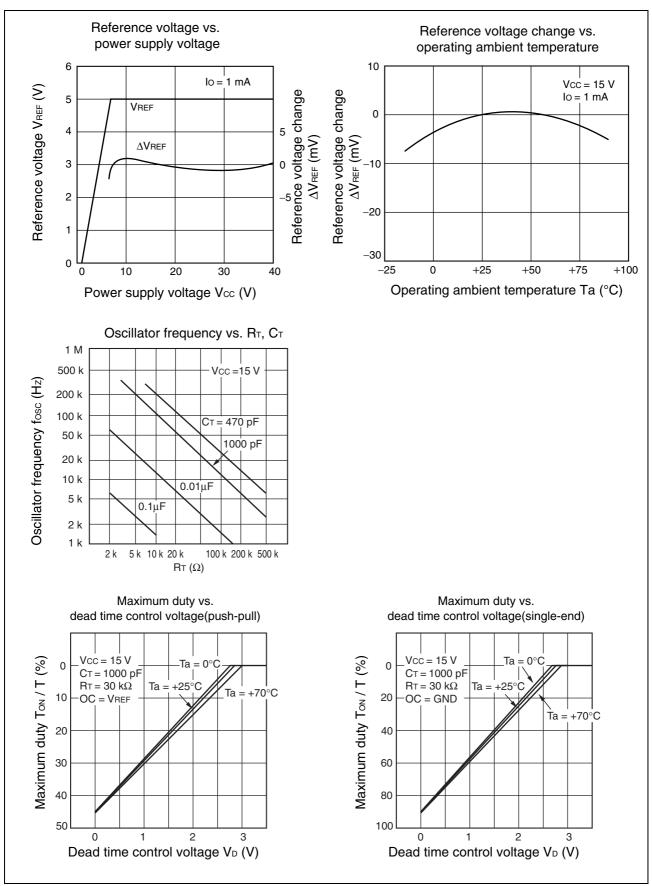



(Continued)

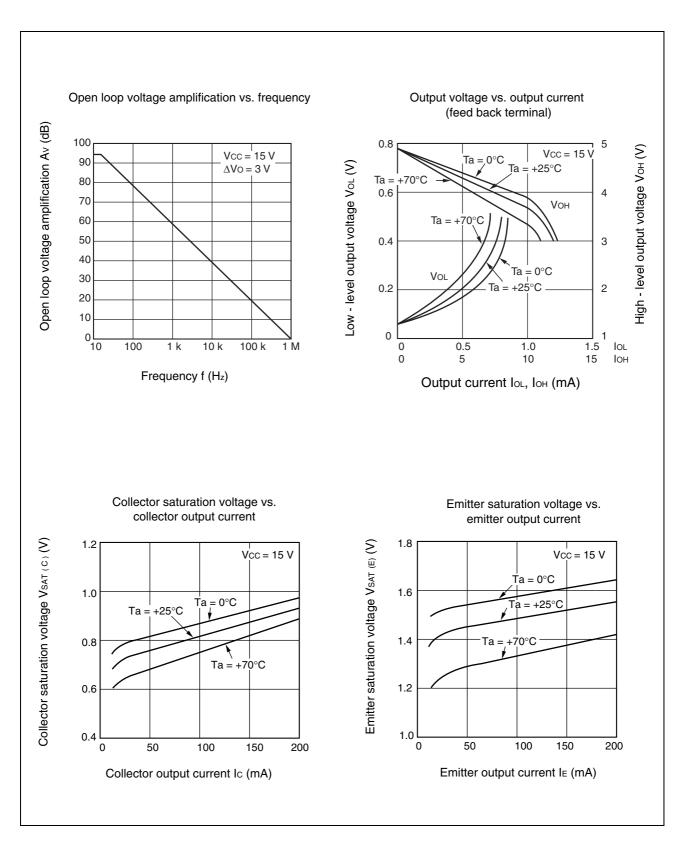


(Continued)

# (Continued)




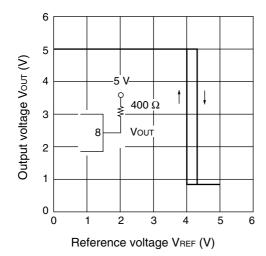


#### Power supply current vs. power supply voltage

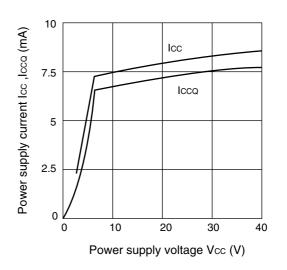

Power dissipation vs. power supply voltage

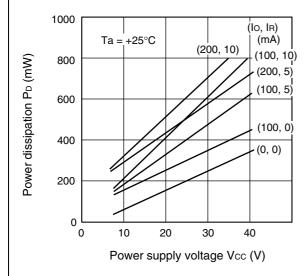

Power dissipation vs. Operating ambient temperature

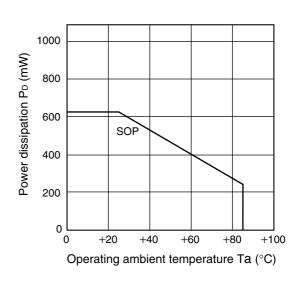

#### **■ BASIC OPERATION**


Switching regulators can achieve a high level of efficiency. This section describes the basic principles of operation using a chopper regulator as an example.

As shown in the diagram, diode D provides a current path for the current through inductance L when Q is off. Transistor Q performs switching and is operated at a frequency that provides a stable output. As the switching element is saturated when Q is on and cutoff when Q is off, the losses in the switching element are much less than for a series regulator in which the pass transistor is always in the active state.

While Q is conducting, the input voltage  $V_{IN}$  is supplied to the LC circuit and when Q is off, the energy stored in L is supplied to the load via diode D. The LC circuit smooths the input to supply the output voltage.

The output voltage Vo is given by the following equation.

$$V_0 = \frac{Ton}{Ton + Toff} V_{IN} = \frac{Ton}{T} V_{IN}$$

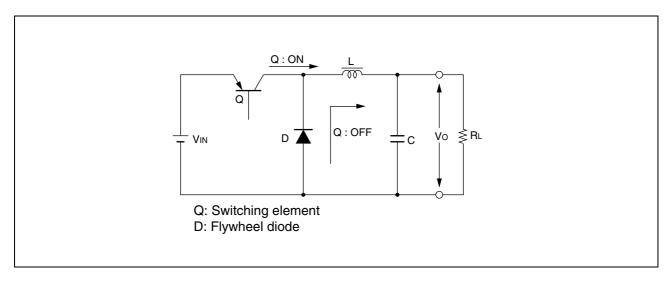

As indicated by the equation, variation in the input voltage is compensated for by controlling the duty cycle (Ton/T). If  $V_{IN}$  drops, the control circuit operates to increase the duty cycle so as to keep the output voltage constant.

The current through L flows from the input to the output when Q is on and through D when Q is off. Accordingly, the average input current  $I_{IN}$  is the product of the output current and the duty cycle for Q.

$$IIN = \frac{Ton}{T}Io$$

The theoretical conversion efficiency if the switching loss in Q and loss in D are ignored is as follows.

$$\begin{split} \eta &= \frac{PO}{PIN} \times 100 \text{ (\%)} \\ &= \frac{VO \times IO}{VIN \times IIN} \times 100 \\ &= \frac{VIN \times IO \times Ton / T}{VIN \times IO \times Ton / T} \times 100 \\ &= 100 \text{ (\%)} \end{split}$$

The theoretical conversion efficiency is 100%. In practice, losses occur in the switching element and elsewhere, and design decisions to minimize these losses include making the switching frequency as low as practical and setting an optimum ratio of input to output voltage.

#### **■ SWITCHING ELEMENT**

# 1. Selection of the Switching Transistor

It can be said that the success or otherwise of a switching regulator is determined by the choice of switching transistor. Typically, the following parameters are considered in selecting a transistor.


- · Withstand voltage
- Current
- Power
- Speed

For the withstand voltage, current, and power, it is necessary to determine that the area of safe operation (ASO) of the intended transistor covers the intended range for these parameters.

The speed (switching speed: rise time tr, storage time tstg, and fall time tf) is related to the efficiency and also influences the power.

The figures show the transistor load curve and  $V_{\text{CE}}$ -  $I_{\text{C}}$  waveforms for chopper and inverter-type regulators. The chopper regulator is a relatively easy circuit to deal with as the diode clamps the collector. A peak can be seen immediately after turn-on. However, this is due to the diode and is explained later.

In an inverter regulator, the diodes on the secondary side act as a clamp. Viewed from the primary side, however, a leakage inductance is present. This results in an inductive spike which must be taken account of as it is added to double the  $V_{\text{IN}}$  voltage.

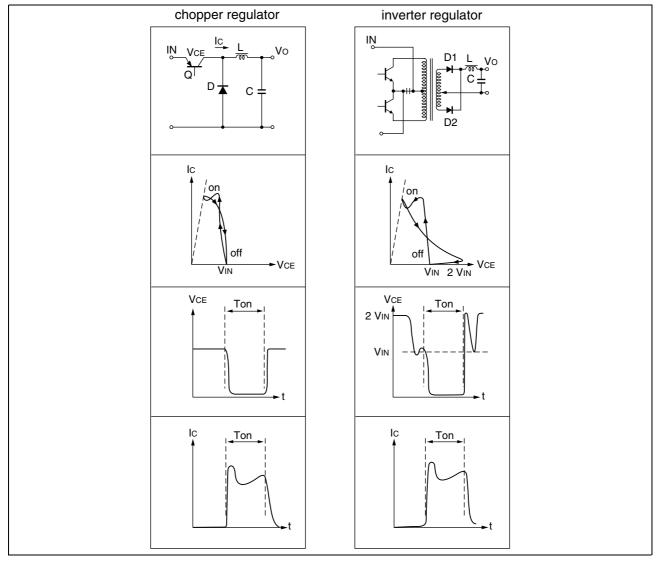


The figure below shows an example of the ASO characteristics for a forward-biased power transistor (2SC3058A) suitable for switching.

Check that the ASO characteristics for the transistor you intend to use fully covers the load curve. Next, check whether the following conditions are satisfied. If so, the transistor can be expected to perform the switching operation safely.

- The intended ON time does not exceed the ON-time specified for the ASO characteristic.
- The OFF-time ASO characteristic satisfies the intended operation conditions.
- Derating for the junction temperature has been taken into account.

For a switching transistor, the junction temperature is closely related to the switching speed. This is because the switching speed becomes slower as the temperature increases and this affects the switching losses.

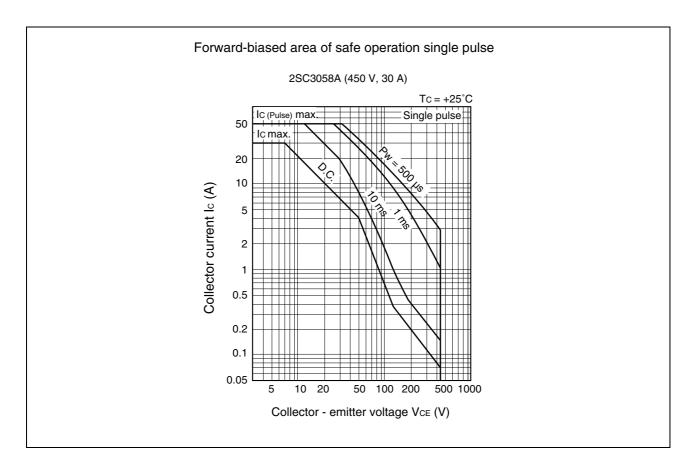

### 2. Selecting the Diode

Consideration must be given to the switching speed when selecting the diode. For chopper regulators in particular, the diode affects the efficiency and noise characteristics and has a big influence on the performance of the switching regulator.

If the reverse recovery time of the diode is slower than the turn-on time of the transistor, an in-rush current of more than twice the load current occurs resulting in noise (spikes) and reduced efficiency.

As a rule for diode selection, use a diode with a reverse recovery time  $t_{rr}$  that is sufficiently faster than the transistor  $t_{rr}$ .


#### ■ APPLICATION IN PRACTICAL CIRCUITS

# 1. Error Amplifier Gain Adjustment

Take care that the bias current does not become large when connecting an external circuit to the FB pin (pin 3) for adjusting the amplifier gain. As the FB pin (pin 3) is biased to the low level by a sink current, the duty cycle of the output signal will be affected if the current from the external circuit is greater than the amplifier can sink.

The figure below shows a suitable circuit for adjusting the gain.


It is very important that you avoid having a capacitive load connected to the output stage as this will affect the response time.

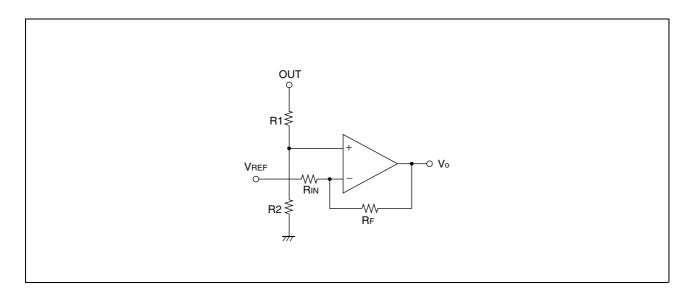

# 2. Synchronized Oscillator Operation

The oscillator can be halted by connecting the  $C_T$  pin (pin 5) to the GND pin (pin 7). If supplying the signal externally, halt the internal oscillator and input to the  $C_T$  pin (pin 5).

Using this method, multiple ICs can be used together in synchronized operation. For synchronized operation, set one IC as the master and connect the other ICs as shown in the diagram.

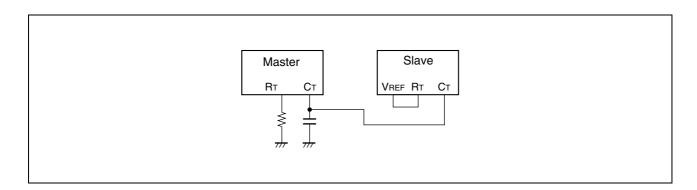

### 3. Setting The Idle Period

When the voltage at the FB pin may go lower than the triangular wave voltage due to load fluctuation, etc. In this case, the output transistor will be almost in full-on state. This can be prevented by setting the maximum duty for the output transistor. This is done by setting the DT pin (pin 4) voltage using resistance division of the  $V_{\text{REF}}$  voltage as illustrated below.

When the DT pin voltage is lower than the triangular waveform voltage, the output transistor is turned on. If the triangular waveform amplitude specified by the maximum duty calculation formula is 3.0V, and the lower voltage limit of the triangular waveform is 0.0 V, DT offset  $\pm$  0.2 V, the formula would be as follows:

• push pull


Maximum Duty(%) = 
$$\frac{3.0V - (Vdt + 0.2V)}{3.0V} \times 50 = \frac{2.8V - Vdt}{3.0V} \times 50$$

• single-end

Maximum Duty(%) = 
$$\frac{3.0V - (Vdt + 0.2V)}{3.0V} \times 100 = \frac{2.8V - Vdt}{3.0V} \times 100$$

Also, if no maximum duty setting is required, it is necessary to set the voltage to Vdt = 0.0 V.


### Setting the idle period at DT

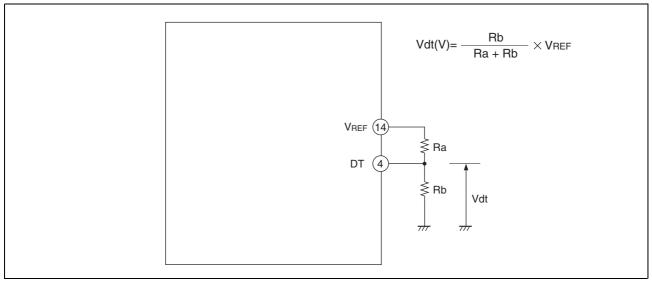


See "Maximum duty vs. dead time control voltage" in "■ TYPICAL CHARACTERISTICS" for details.

#### 4. Soft Start

A soft start function can be incorporated by using the dead-time control element (DT) pin (pin 4).

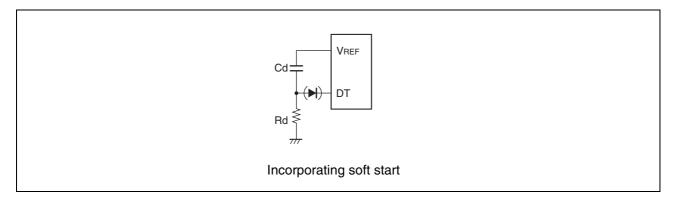


When the power is turned on, Cd is not yet charged and the DT input is pulled to the V<sub>REF</sub> pin (pin 14) causing the output transistor to turn off. Next, the input voltage to the DT pin (pin 4) drops in accordance with the Cd, Rd constant causing the output pulse width to increase steadily, providing stable control circuit operation. If you wish to use both dead-time and softstart, combine these in an OR configuration.

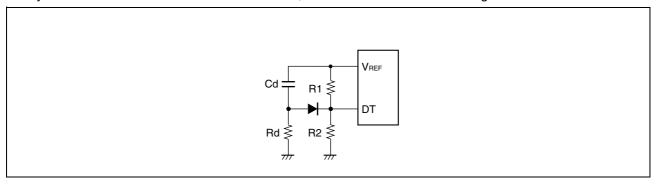

# 5. Output Current Limiting (Fallback system using a detection resistor inserted on the output side)

# (1) Typical example

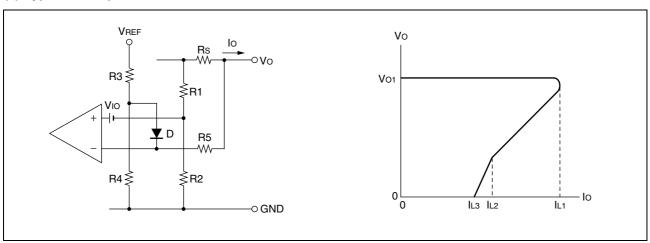

• Initial limit current I∟1

The condition for Vo is: 
$$Vo > \frac{R4}{R3 + R4} V_{REF}$$

As the diode is reverse biased,

Rs IL1 = 
$$\frac{R1}{R1 + R2}$$
 Vo – Vio  

$$\therefore IL1 = \frac{R1}{R1 + R2} \frac{Vo}{Rs} - \frac{Vio}{Rs}$$
 Eq. (1) (where R2 >> R1)

 $V_{\text{IO}}$  is the input offset voltage to the op-amp (-10 mV  $\leq$   $V_{\text{IO}} \leq$  +10 mV) and this causes the variation in  $I_{\text{L}}$ . Accordingly, if for example the variation in  $I_{\text{L}}$  is to be limited to  $\pm$ 10 %, using equation (1) and only considering the variation in the offset voltage gives the following:

$$Io = \frac{1}{Rs} \frac{R1}{R1 + R2} (Vo + VEE) - \frac{Vio}{Rs} (R2 >> R1)$$

This indicates a setting of 100 mV or more is required.

• Polarity change point IL2

As this is the point where the diode becomes forward biased, it can be calculated by substituting [R4/(R3+R4)  $V_{REF}$  -  $V_D$ ] for  $V_D$  in equation (where  $V_D$  is the forward voltage of the diode).

$$IL2 = \frac{R1}{R1 + R2} \frac{R4/(R3 + R4) \cdot VREF - VD}{Rs} - \frac{VIO}{Rs}$$

Final limit current IL3

The limit current for  $V_0 = 0$  when R2 >> R1 is the point where the voltages on either side of Rs and on either side of R5 are biased.

$$Rs IL3 = \frac{R4R5 \ VREF - R3R5 \ VD - R4R5 \ VD}{R3R4 + R3R5 + R4R5} - VIO$$

$$\therefore IL3 = \frac{1}{Rs} \frac{1}{1 + (R3 \ / R4) \ / R5} (\frac{R4}{R3 + R4} \ VREF - VD) - \frac{VIO}{Rs} (2) Eq.$$

R3//R4 is the resistance formed by R3 and R4 in parallel (R3R4/(R3 + R4)). When R3//R4 << R5, equation (2) becomes:

IL3 C = 
$$\frac{1}{Rs}$$
 ( $\frac{R4}{R3 + R4}$  VREF – VD) –  $\frac{Vlo}{Rs}$ 


In addition to determining the limit current  $I_{L3}$  for  $V_O = 0$ , R3, R4, R5, and diode D also operate as a starter when the power is turned on.

· Starter circuit


The figure below shows the case when the starter circuit formed by R3, R4, R5, and D is not present. The output current Io after the operation of the current limiting circuit is:

$$Io = \frac{R1}{R1 + R2} \frac{Vo}{Rs} - \frac{Vio}{Rs}$$

When  $V_0 = 0$  such as when the power is turned on, the output current  $I_0 = -V_{10}$  / Rs and, if the offset voltage  $V_{10}$  is positive, the output current is limited to being negative and therefore the output voltage does not rise. Accordingly, if using a fallback system with a detection resistor inserted in the output, always include a starter circuit, expect in the cases described later.

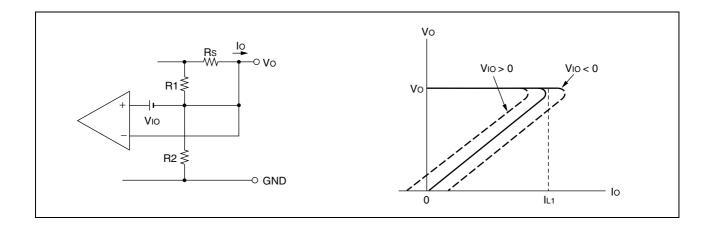

# (2) Example that does not use a diode

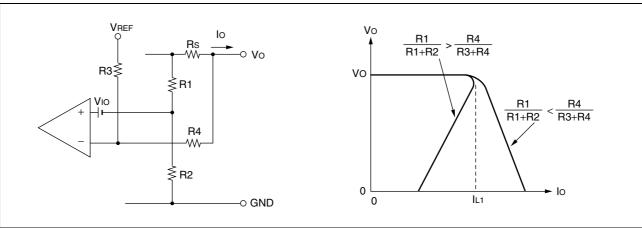

The output current lo after current limiting is:


18

Io = 
$$\frac{1}{Rs}$$
 [( $\frac{R1}{R1 + R2}$  -  $\frac{R4}{R3 + R4}$ ) Vo +  $\frac{R4}{R3 + R4}$ VREF - Vio ] (R2 >> R1)

In this case, a current flows into the reference voltage source via R3 and R4 if  $V_0 > V_{\text{REF}}$ . To maintain the stability of the reference voltage, design the circuit such that this does not exceed 200  $\mu$ A.

DS04-27200-10E

# (3) When an external stabilized negative power supply is present

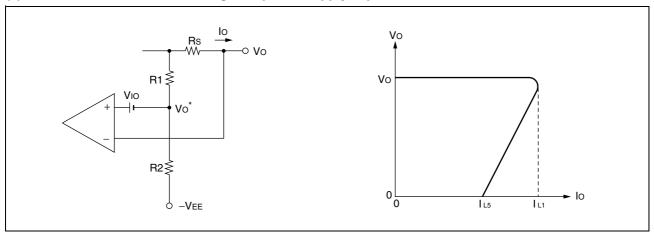


The output current lo after current limiting is:

$$Io = \frac{1}{Rs} \frac{R1}{R1 + R2} (Vo + VEE) - \frac{Vio}{Rs} (R2 >> R1)$$


If the output is momentarily shorted,  $Vo^*$  goes briefly negative. In this case, set the voltage across R1 to 300 mV or less to ensure that a voltage of less than -0.3 V is not applied to the op-amp input.

# 6. Example Power Supply Voltage Supply Circuit

# (1) Supplied via a Zener diode

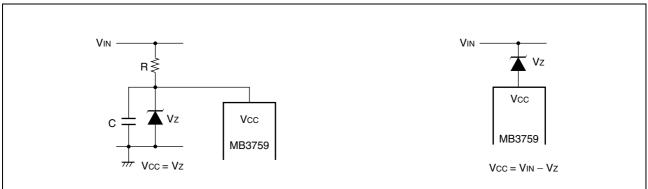

# (2) Supplied via a three-terminal regulator

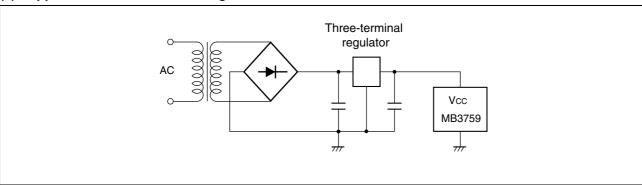


# 7. Example Protection Circuit for Output Transistor


Due to its monolithic IC characteristics, applying a negative voltage greater than the diode voltage ( $\pm$  0.5 V) to the substrate (pin 7) of the MB3759 causes a parasitic effect in the IC which can result in misoperation.

Accordingly, the following measures are required if driving a transformer or similar directly from the output transistor of the IC.


# (1) Protect the output transistor from the parasitic effect by using a Schottky barrier diode.

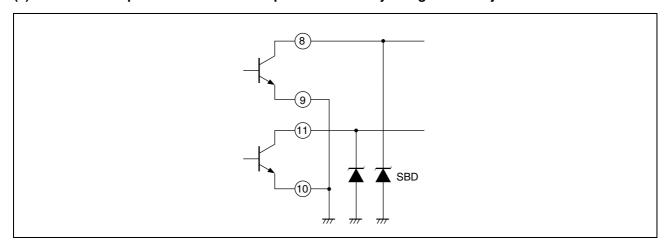

# (2) Provide a bias at the anode-side of the diode to clamp the low level side of the transistor.

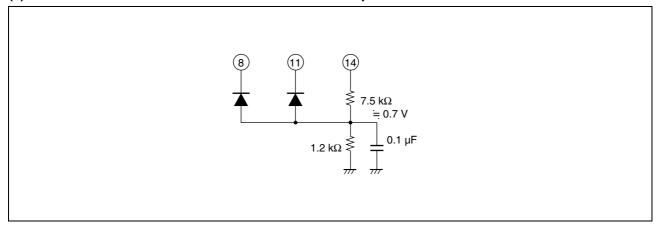


# (3) Drive the transformer via a buffer transistor.

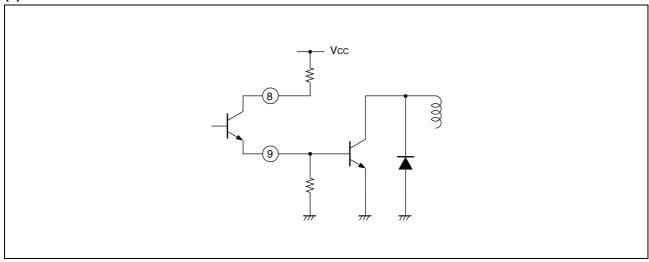


# 8. Typical Application

# (1)Chopper regulator

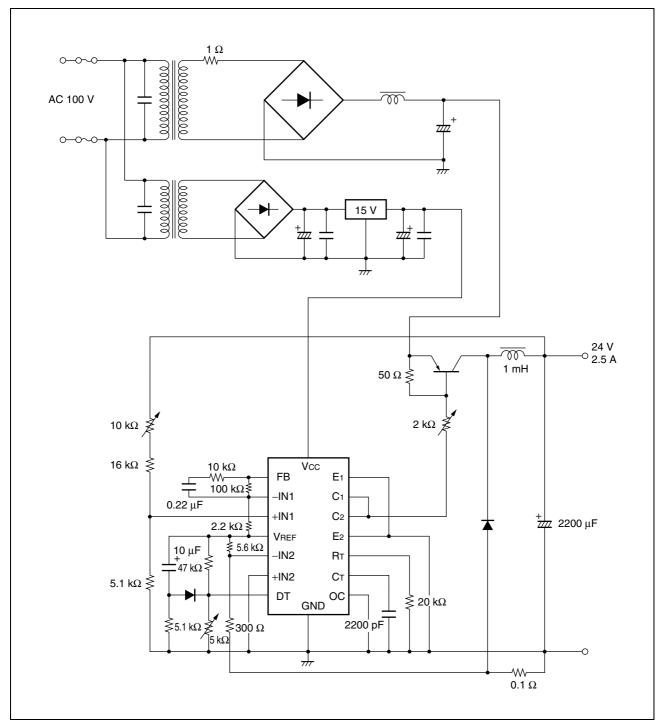

# (2) Inverter regulator

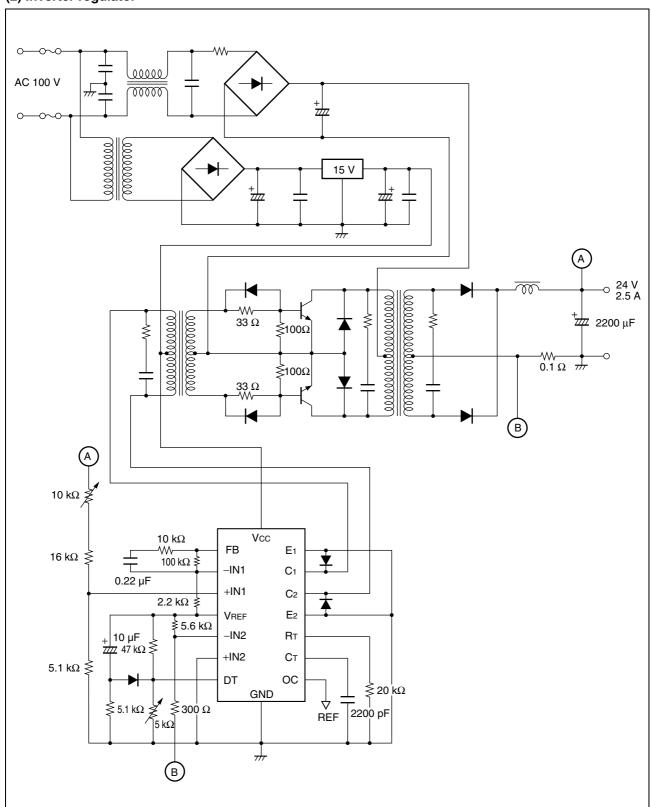

# **MB3759**

# **■ NOTES ON USE**

- Take account of common impedance when designing the earth line on a printed wiring board.
- Take measures against static electricity.
  - For semiconductors, use antistatic or conductive containers.
  - When storing or carrying a printed circuit board after chip mounting, put it in a conductive bag or container.
  - The work table, tools and measuring instruments must be grounded.
  - The worker must put on a grounding device containing 250 k $\Omega$  to 1 M $\Omega$  resistors in series.
- Do not apply a negative voltage
  - Applying a negative voltage of -0.3 V or less to an LSI may generate a parasitic transistor, resulting in malfunction.

# **■ ORDERING INFORMATION**


Part number	Package	Remarks
MB3759PF	16-pin plastic SOP (FPT-16P-M06)	

# ■ RoHS Compliance Information of Lead (Pb) Free version


The LSI products of FUJITSU SEMICONDUCTOR with "E1" are compliant with RoHS Directive, and has observed the standard of lead, cadmium, mercury, Hexavalent chromium, polybrominated biphenyls (PBB), and polybrominated diphenyl ethers (PBDE).

The product that conforms to this standard is added "E1" at the end of the part number.

# **■ MARKING FORMAT (Lead Free version)**

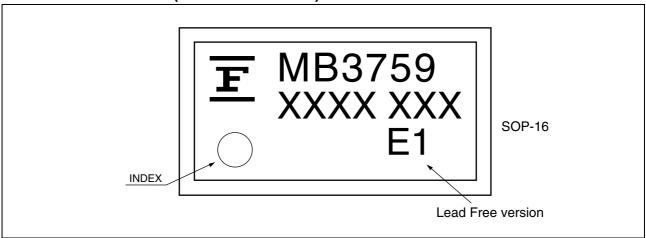

# ■ LABELING SAMPLE (Lead free version)

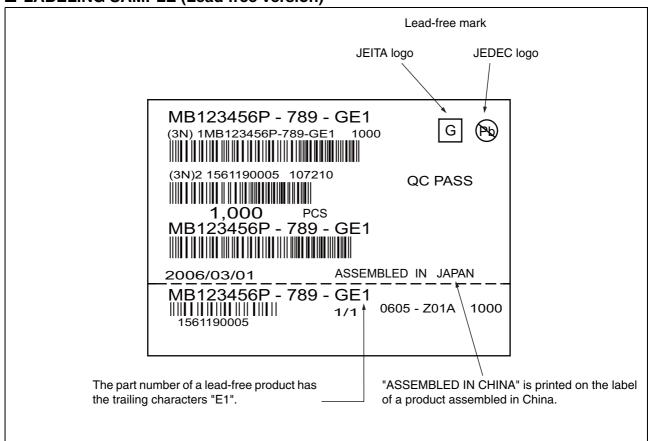


# ■ MB3759PF RECOMMENDED CONDITIONS OF MOISTURE SENSITIVITY LEVEL

Item	Condition				
Mounting Method	IR (infrared reflow), Manual soldering (partial heating method)				
Mounting times	2 times				
	Before opening	Please use it within two years after Manufacture.			
Storage period	From opening to the 2nd reflow	Less than 8 days			
	When the storage period after opening was exceeded	Please processes within 8 days after baking (125 °C, 24H)			
Storage conditions	5 °C to 30 °C, 70%RH or less (the lowest possible humidity)				

### [Temperature Profile for FJ Standard IR Reflow]

# (1) IR (infrared reflow)

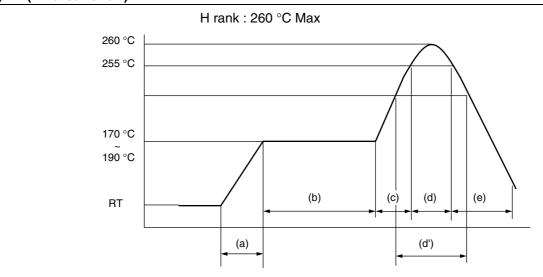

(a) Temperature Increase gradient : Average 1 °C/s to 4 °C/s

(b) Preliminary heating : Temperature 170 °C to 190 °C, 60s to 180s

(c) Temperature Increase gradient  $\,$ : Average 1  $\,$  °C/s to 4  $\,$  °C/s

(d) Actual heating : Temperature 260 °C Max; 255 °C or more, 10s or less

(d') : Temperature 230 °C or more, 40s or less

or

Temperature 225 °C or more, 60s or less

or

Temperature 220 °C or more, 80s or less

(e) Cooling : Natural cooling or forced cooling


Note: Temperature: the top of the package body


# (2) Manual soldering (partial heating method)

Conditions: Temperature 400 °C Max


Times : 5 s max/pin


# **■ PACKAGE DIMENSION**

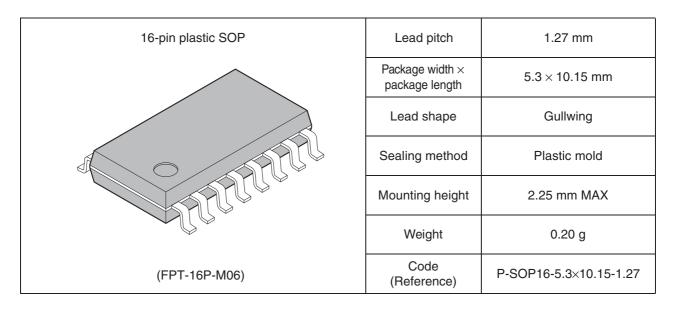


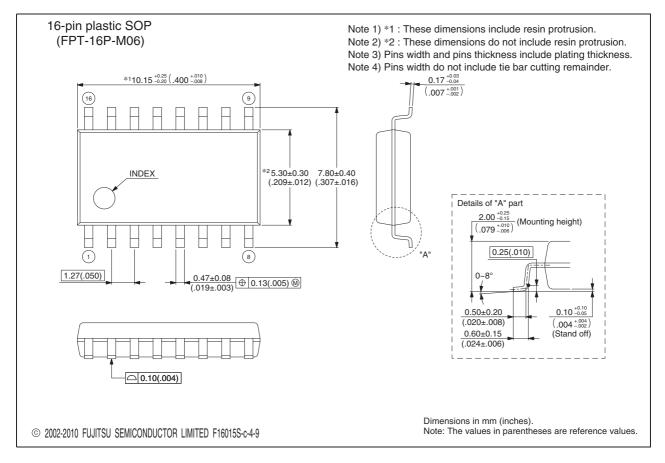

Please check the latest package dimension at the following URL. http://edevice.fujitsu.com/package/en-search/

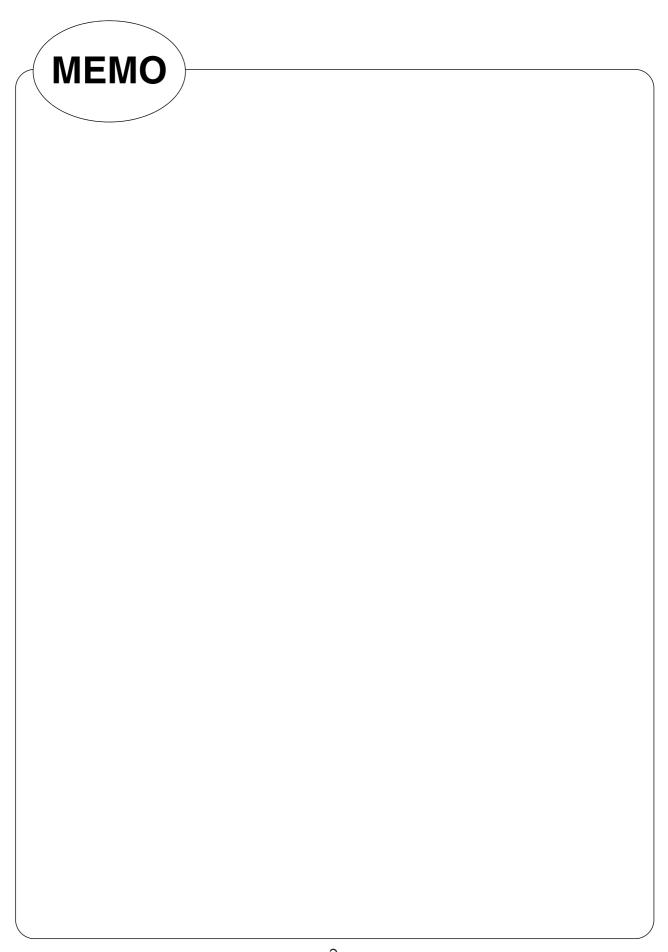

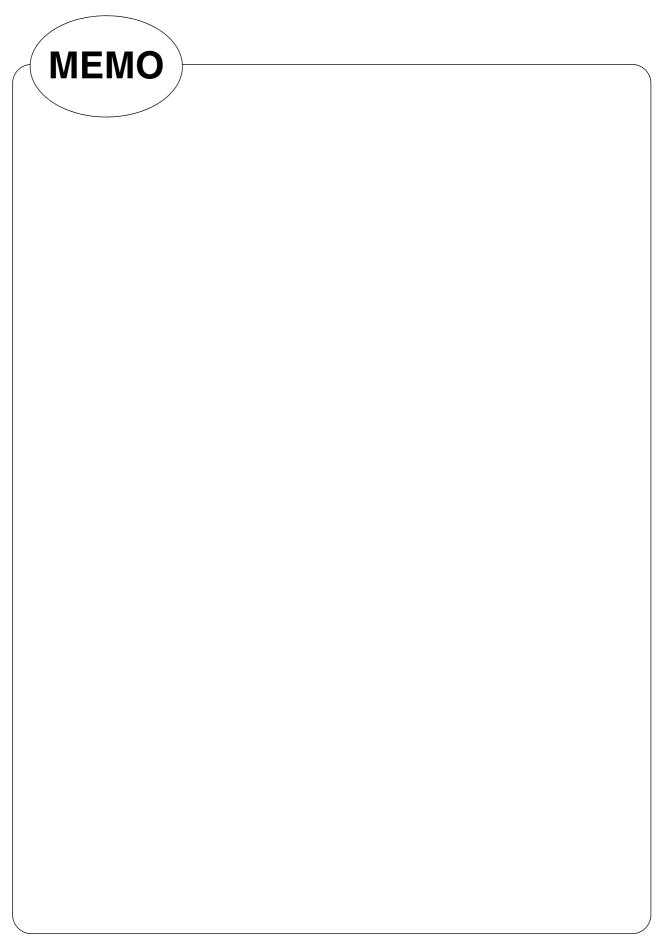

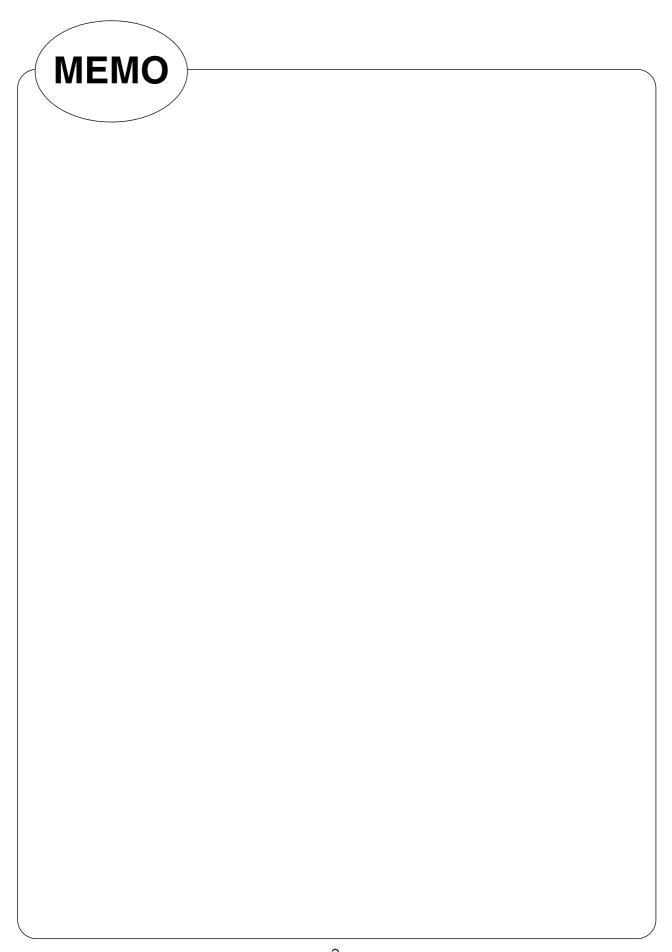

# **FUJITSU SEMICONDUCTOR LIMITED**

Nomura Fudosan Shin-yokohama Bldg. 10-23, Shin-yokohama 2-Chome, Kohoku-ku Yokohama Kanagawa 222-0033, Japan

Tel: +81-45-415-5858 http://jp.fujitsu.com/fsl/en/

For further information please contact:

#### North and South America

FUJITSU SEMICONDUCTOR AMERICA, INC. 1250 E. Arques Avenue, M/S 333 Sunnyvale, CA 94085-5401, U.S.A. Tel: +1-408-737-5600 Fax: +1-408-737-5999 http://us.fujitsu.com/micro/

#### **Europe**

FUJITSU SEMICONDUCTOR EUROPE GmbH Pittlerstrasse 47, 63225 Langen, Germany Tel: +49-6103-690-0 Fax: +49-6103-690-122 http://emea.fujitsu.com/semiconductor/

#### Korea

FUJITSU SEMICONDUCTOR KOREA LTD. 902 Kosmo Tower Building, 1002 Daechi-Dong, Gangnam-Gu, Seoul 135-280, Republic of Korea Tel: +82-2-3484-7111 http://kr.fujitsu.com/fsk/

#### **Asia Pacific**

FUJITSU SEMICONDUCTOR ASIA PTE. LTD.
151 Lorong Chuan,
#05-08 New Tech Park 556741 Singapore
Tel: +65-6281-0770 Fax: +65-6281-0220
http://www.fujitsu.com/sg/services/micro/semiconductor/

FUJITSU SEMICONDUCTOR SHANGHAI CO., LTD. Rm. 3102, Bund Center, No.222 Yan An Road (E), Shanghai 200002, China
Tel: +86-21-6146-3688 Fax: +86-21-6335-1605
http://cn.fujitsu.com/fss/

FUJITSU SEMICONDUCTOR PACIFIC ASIA LTD. 10/F., World Commerce Centre, 11 Canton Road, Tsimshatsui, Kowloon, Hong Kong Tel: +852-2377-0226 Fax: +852-2376-3269 http://cn.fujitsu.com/fsp/

Specifications are subject to change without notice. For further information please contact each office.

### All Rights Reserved.

The contents of this document are subject to change without notice.

Customers are advised to consult with sales representatives before ordering.

The information, such as descriptions of function and application circuit examples, in this document are presented solely for the purpose of reference to show examples of operations and uses of FUJITSU SEMICONDUCTOR device; FUJITSU SEMICONDUCTOR does not warrant proper operation of the device with respect to use based on such information. When you develop equipment incorporating the device based on such information, you must assume any responsibility arising out of such use of the information.

FUJITSU SEMICONDUCTOR assumes no liability for any damages whatsoever arising out of the use of the information.

Any information in this document, including descriptions of function and schematic diagrams, shall not be construed as license of the use or exercise of any intellectual property right, such as patent right or copyright, or any other right of FUJITSU SEMICONDUCTOR or any third party or does FUJITSU SEMICONDUCTOR warrant non-infringement of any third-party's intellectual property right or other right by using such information. FUJITSU SEMICONDUCTOR assumes no liability for any infringement of the intellectual property rights or other rights of third parties which would result from the use of information contained herein.

The products described in this document are designed, developed and manufactured as contemplated for general use, including without limitation, ordinary industrial use, general office use, personal use, and household use, but are not designed, developed and manufactured as contemplated (1) for use accompanying fatal risks or dangers that, unless extremely high safety is secured, could have a serious effect to the public, and could lead directly to death, personal injury, severe physical damage or other loss (i.e., nuclear reaction control in nuclear facility, aircraft flight control, air traffic control, mass transport control, medical life support system, missile launch control in weapon system), or (2) for use requiring extremely high reliability (i.e., submersible repeater and artificial satellite).

Please note that FUJITSU SEMICONDUCTOR will not be liable against you and/or any third party for any claims or damages arising in connection with above-mentioned uses of the products.

Any semiconductor devices have an inherent chance of failure. You must protect against injury, damage or loss from such failures by incorporating safety design measures into your facility and equipment such as redundancy, fire protection, and prevention of overcurrent levels and other abnormal operating conditions.

Exportation/release of any products described in this document may require necessary procedures in accordance with the regulations of the Foreign Exchange and Foreign Trade Control Law of Japan and/or US export control laws.

The company names and brand names herein are the trademarks or registered trademarks of their respective owners.

Edited: Sales Promotion Department