



# AGV Magnetic Guide Sensors

#### DESCRIPTION

AGV-TMR250V is an analog voltage output magnetic guide sensor, and the Vout voltage is linear to the distance between magnetic tape and sensor. It is available as standard with N pole, S pole and N/S pole magnetic operating modes including corresponding LED indicators. AGV-TMR250V provides branch selection function, enabling "straight", "left branch" and "right branch" three analog output modes by acquiring ground mark information to set the signals of SET1 and SET2 pins in advance. This sensor also supports magnetic tape presence status indication from STATE pin.

AGV-TMR250V sensor is adaptive to installation height and tape width with excellent protection against magnetic material interference. Incorporating tunneling magnetoresistance (TMR) technique, AGV-TMR250V sensors are designed for magnetic tape and marker detection to provide excellent temperature characteristics, good consistency, and high sensitivity performance.

#### FEATURES AND BENEFITS

- Analog voltage output
- Branch selection function
- Tape presence status detection
- Adaptive installation height
- Adaptive magnetic tape width
- Magnetic tape/marker detection
- N pole, S pole and N/S poles detection modes
- LED indicators for operating modes

#### **APPLICATIONS**

- Automated guided vehicle (AGV)
- Automated guided cart (AGC)
- Trackless mobile shelving
- Logistics sortation


AGV Magnetic Guide Sensors



#### SPECIFICATIONS

| Parameters            | Value  |  |
|-----------------------|--|--|
| Supply voltage        | 10 Vdc ~ 30 Vdc  |  |
| Supply current        | 50 mA  |  |
| Output type           | Analog voltage   |  |
| Voltage range         | 2V ~ 8V  |  |
| Center voltage        | 5V   |  |
| Voltage resolution    | 3 mV   |  |
| Detection height      | 20 mm~50 mm  |  |
| Load resistance       | 10 kΩ~100 kΩ   |  |
| Circuit protection    | reverse polarity protection, overload protection, surge suppression  |  |
| Operating mode        | N pole, S pole, N/S pole   |  |
| LED indicator         | N: red stay lit, S: green stay lit, N/S: red/green alternating blink |  |
| Magnetic field        | 5 Gs~25 Gs   |  |
| Operating temperature | -25℃~80℃   |  |
| Operating humidity    | 35%~95%  |  |
| Response time         | 1 ms   |  |
| Dimensions            | 178 mm*17 mm*50 mm   |  |
| Potting material      | AB glue  |  |
| Housing material      | Metal, Epoxy Resin   |  |
| Ingress Protection    | IP65   |  |


#### SENSOR INSTALLATION SCHEMATIC DIAGRAM

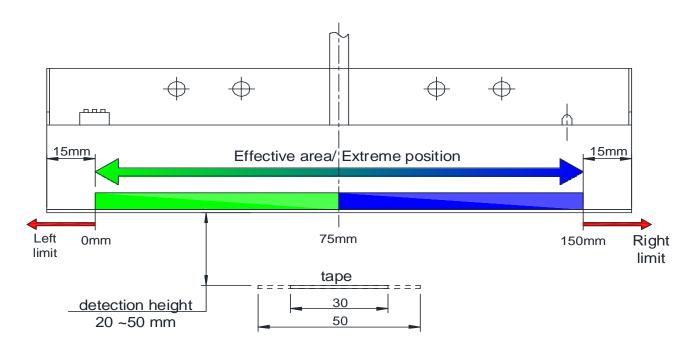

AGV Magnetic Guide Sensors



#### **DIP SWITCH OPERATING MODES**

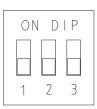

| 0 | 0 | 0 |
|---|---|---|
| 1 | 1 | 1 |


| Operating Modes Dialing Logic |     | LED indicator  |  |
|-------------------------------|-----|--|--|
| N/S pole                      | 000 | red/green LED alternating blink, low rate                |  |
| N pole only                   | 100 | red LED stay lit constantly                              |  |
| S pole only                   | 010 | green LED stay lit constantly                            |  |
| Zero field calibration        | XX1 | high rate alternating blink during calibration, off when |  |
|                               |     | completed  |  |

#### Note

1. Keep any magnetic materials at least 50 mm away from AGV sensor detection surface during calibration


2. Switch the third digit back to zero to enter the normal operation mode after calibration

#### **DIMENSIONS (mm)**

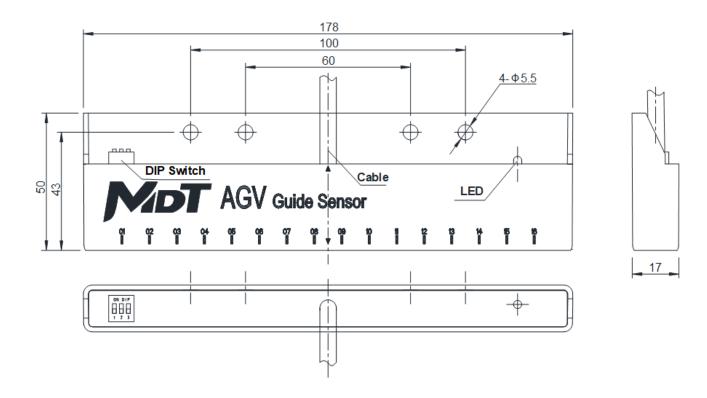

AGV Magnetic Guide Sensors

#### CONNECTION CONFIGURATION INSTRUCTIONS

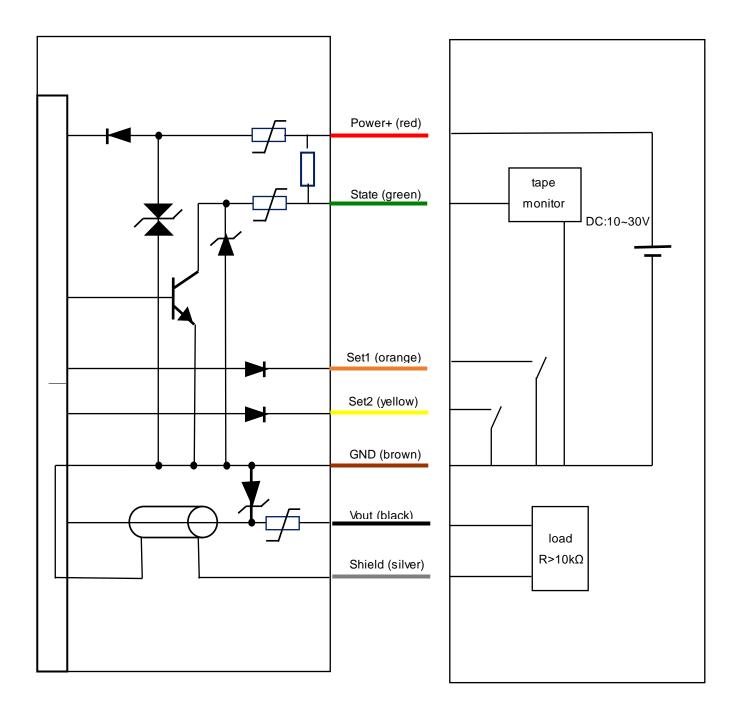


| MODE | Not selected | Straight | Right branch | Left branch |
|------|--------------|----------|--------------|-------------|
| SET1 | н            | L        | L            | н           |
| SET2 | Н            | L        | н            | L           |



AGV Magnetic Guide Sensors

#### **OUTPUT SIGNAL**

(1) Straight Mode

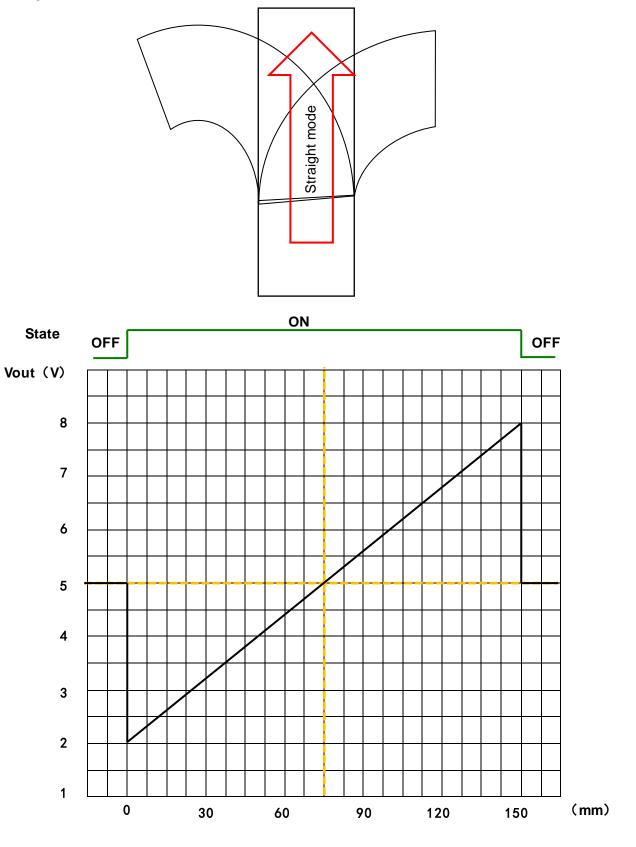




AGV Magnetic Guide Sensors




(2) left branch mode

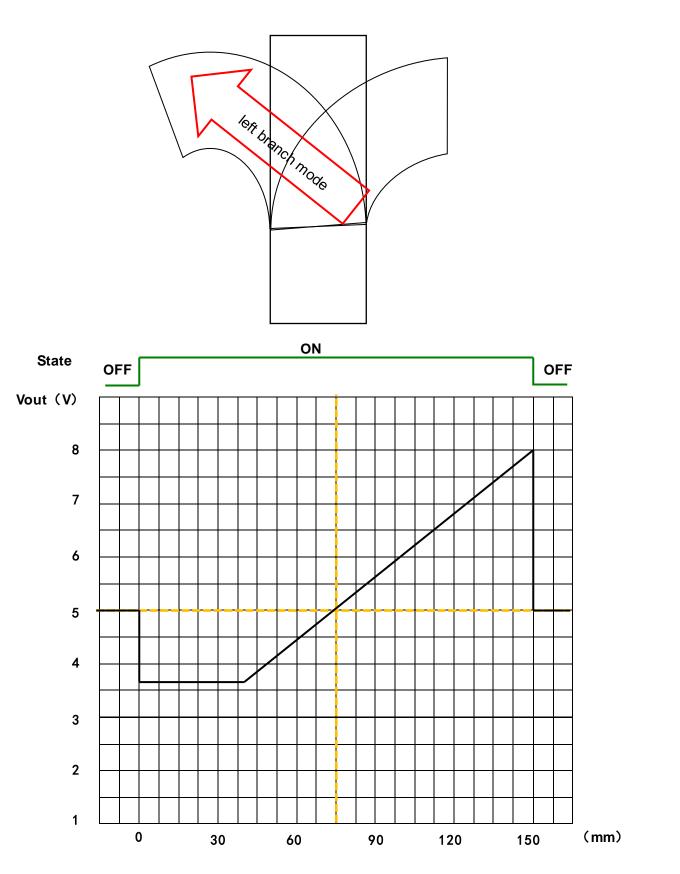

AGV Magnetic Guide Sensors



(3) right branch mode

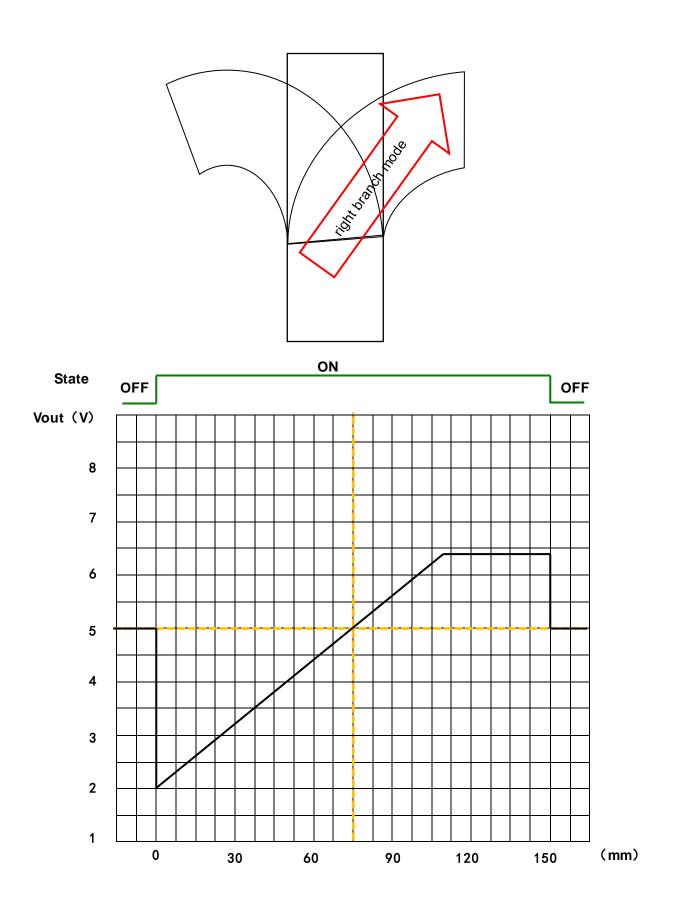



AGV Magnetic Guide Sensors

The information provided herein by MultiDimension Technology Co., Ltd. (hereinafter MultiDimension) is believed to be accurate and reliable. Publication neither conveys nor implies any license under patent or other industrial or intellectual property rights. MultiDimension reserves the right to make changes to product specifications for the purpose of improving product quality, reliability, and functionality. MultiDimension does not assume any liability arising out of the application and use of its products. MultiDimension's customers using or selling this product for use in appliances, devices, or systems where malfunction can reasonably be expected to result in personal injury do so at their own risk and agree to fully indemnify MultiDimension for any damages resulting from such applications.

Multi Dimension Technology Co., Ltd. No.7 Guangdong Road, Zhangjiagang Free Trade Zone Jiangsu, 215634, China <u>www.dowaytech.com/en</u> info@dowaytech.com

