CMM 100 / 200 male

STRAIGHT SMT

Part numbering :

"1" = Series 100
"2" = Series 200

Type : T-TL

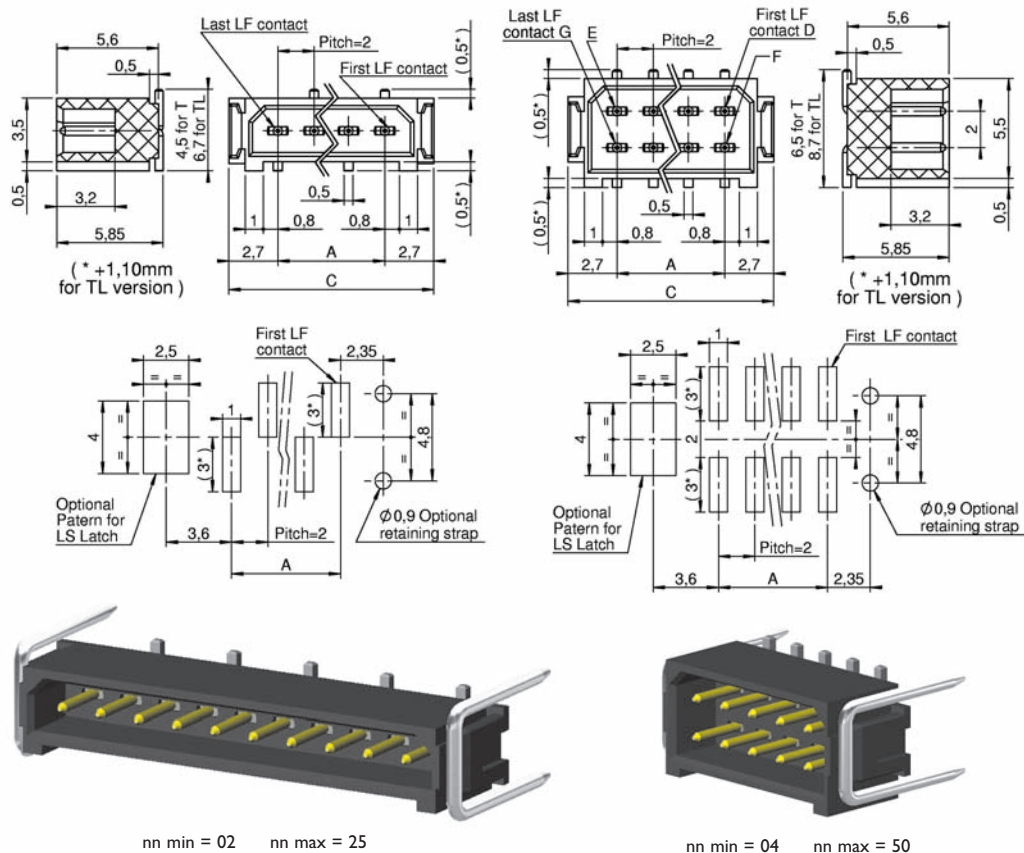☐ 0 I ☐ n n ☐

"LS", "L", "FL" = with latch page 22
" " = without latch

nn = number of LF contacts

Calculation :

CMM 100	CMM 200
A = (nn x 2) - 2	**A** = nn - 2
C = A + 5,4	**C** = A + 5,4

Refer to dimension table on cover page

nn min = 02   nn max = 25

nn min = 04   nn max = 50

90° SMT

Part numbering :

"1" = Series 100
"2" = Series 200

☐ 0 I R n n ☐

"LS", "L", "FL" = with latch page 22
" " = without latch

nn = number of LF contacts

Calculation :

CMM 100	CMM 200
A = (nn x 2) - 2	**A** = nn - 2
C = A + 5,4	**C** = A + 5,4

Refer to dimension table on cover page

nn min = 02   nn max = 25

nn min = 04   nn max = 50