TVP9900 VSB/QAM Receiver

Data Manual

Literature Number: SLEA064 March 2007

PRODUCTION DATA information is current as of publication date. Products conform to specifications per the terms of the Texas Instruments standard warranty. Production processing does not necessarily include testing of all parameters.





Contents

1 Introduction			. <u>7</u>	
	1.1	Feature	9S	. <u>7</u>
	1.2	Orderin	g Information	. <u>7</u>
2	Block	k Diagra	ım	. <u>8</u>
3	Term	inal Ass	signments	. 9
	3.1	Pinout.		. 9
	3.2	Termina	al Functions	<u>10</u>
4	Func	tional D	Description	12
	4.1		Front End	
	4.2	•	AM Demodulator	
	4.3		d Error Correction	
	4.4		Formatter	
	4.5	I ² C Hos	et Interface	14
		4.5.1	I ² C Write Operation	
		4.5.2	I ² C Read Operation	
	4.6	Tuner C	Control Interface	<u>17</u>
		4.6.1	Tuner Write Operation	<u>18</u>
		4.6.2	Tuner Read Operation	<u>18</u>
	4.7	Antenna	a Control Interface	<u>19</u>
		4.7.1	Antenna Interrogation/Initialization	<u>20</u>
		4.7.2	Transmit Data to Antenna Operation	<u>21</u>
		4.7.3	Receive Data from Antenna Operation	<u>21</u>
	4.8	Genera	I-Purpose IO (GPIO)	<u>21</u>
	4.9	Clock C	Circuits	<u>22</u>
	4.10	Power-l	Up Sequence	<u>22</u>
	4.11	Reset		<u>22</u>
	4.12		Down	
	4.13		Supply Voltage Requirements	
5	_		Design Recommendations	_
6	Host	Process	sor I ² C Register Summary	<u>25</u>
	6.1		ew	
	6.2	I ² C Reg	gister Definitions	<u>27</u>
		6.2.1	Receiver Control Register 1 / Soft Reset	
		6.2.2	Receiver Control Register 2	
		6.2.3	VSB Control Register	<u>28</u>
		6.2.4	AGC Control Register	<u>29</u>
		6.2.5	VSB FEC Time Counter Register 1	
		6.2.6	VSB FEC Time Counter Register 2	<u>30</u>
		6.2.7	VSB FEC Time Counter Register 3	
		6.2.8	QAM FEC Time Counter Register 1	
		6.2.9	QAM FEC Time Counter Register 2	
		6.2.10	QAM FEC Time Counter Register 3	
		6.2.11	VSB FEC Segment Error Count Threshold Register 1	
		6.2.12	VSB FEC Segment Error Count Threshold Register 2	
		6.2.13	Update Status Control Register	
		6.2.14	Receiver Status Register	
		6.2.15	AGC Status Register 1	
		6.2.16	AGC Status Register 2	
		6.2.17	AGC Status Register 3	
		6.2.18	NTSC Rejection Filter Status Register	<u>34</u>





SLEA064-MARCH 2007

VSB/QAM Receiver

		6.2.19	Timing Recovery Status Register 1	<u>34</u>
		6.2.20	Timing Recovery Status Register 2	<u>34</u>
		6.2.21	Timing Recovery Status Register 3	<u>35</u>
		6.2.22	Timing Recovery Status Register 4	<u>35</u>
		6.2.23	Timing Recovery Status Register 5	
		6.2.24	Timing Recovery Status Register 6	<u>35</u>
		6.2.25	Pilot Tracking Status Register 1	<u>36</u>
		6.2.26	Pilot Tracking Status Register 2	<u>36</u>
		6.2.27	Pilot Tracking Status Register 3	<u>36</u>
		6.2.28	Carrier Recovery Status Register 1	<u>36</u>
		6.2.29	Carrier Recovery Status Register 2	
		6.2.30	Carrier Recovery Status Register 3	<u>37</u>
		6.2.31	Carrier Recovery Status Register 4	<u>37</u>
		6.2.32	Carrier Recovery Status Register 5	<u>37</u>
		6.2.33	Carrier Recovery Status Register 6	<u>38</u>
		6.2.34	FEC Status Register 1	<u>38</u>
		6.2.35	FEC Status Register 2	<u>39</u>
		6.2.36	FEC Status Register 3	<u>39</u>
		6.2.37	FEC Status Register 4	<u>39</u>
		6.2.38	GPIO Alternate Function Select Register	<u>40</u>
		6.2.39	GPIO Output Data Register	<u>40</u>
		6.2.40	GPIO Output Enable Register	<u>41</u>
		6.2.41	GPIO Input Data Register	<u>41</u>
		6.2.42	MPEG Interface Output Enable Register 1	<u>42</u>
		6.2.43	MPEG Interface Output Enable Register 2	
		6.2.44	Tuner Control Interface – I ² C Slave Device Address Register	<u>43</u>
		6.2.45	Tuner Control Interface – Data Register 1 Through 8	43
		6.2.46	Tuner Control Interface – Control and Status Register	<u>44</u>
		6.2.47	Antenna Control Interface – Control and Status Register	<u>44</u>
		6.2.48	Antenna Control Interface – Transmit Data Register 1	<u>45</u>
		6.2.49	Antenna Control Interface – Transmit Data Register 2	<u>45</u>
		6.2.50	Antenna Control Interface – Receive Data Register 1	<u>45</u>
		6.2.51	Antenna Control Interface – Receive Data Register 2	
		6.2.52	Firmware ID – ROM Version Register	<u>46</u>
		6.2.53	Firmware ID – RAM Major Version Register	<u>46</u>
		6.2.54	Firmware ID – RAM Minor Version Register	<u>46</u>
		6.2.55	Device ID LSB Register	<u>47</u>
		6.2.56	Device ID MSB Register	<u>47</u>
		6.2.57	Miscellaneous Control Register	47
		6.2.58	Software Interrupt Raw Status Register	
		6.2.59	Software Interrupt Status Register	
		6.2.60	Software Interrupt Mask Register	
		6.2.61	Software Interrupt Clear Register	
7	Elect	rical Sp	ecifications	
	7.1	•	e Maximum Ratings	
	7.2		mended Operating Conditions	
	7.3		ctrical Characteristics	
	7.4		Input Characteristics	
	7.5	_	Characteristics	
		7.5.1	Crystal and Input Clock	
		7.5.2	Device Reset	
		7.5.3	MPEG Interface	
		7.5.3.1	Parallel Mode (Data Only)	

TVP9900

VSB/QAM Receiver



SLEA064-MARCH 2007

8	Application C	Circuit	60
	7.5.4	Host and Tuner I ² C Interface	<u>59</u>
	7.5.3.4	Serial Mode (Data With Redundancy)	<u>58</u>
	7.5.3.3	Parallel Mode (Data With Redundancy)	<u>57</u>
	7.5.3.2	Serial Mode (Data Only)	<u>56</u>





SLEA064-MARCH 2007

List of Figures

2-1	TVP9900 Block Diagram	. 8
4-1	Parallel Transport Stream Timing Diagram (Data Only)	<u>13</u>
4-2	Serial Transport Stream Timing Diagram (Data Only)	<u>13</u>
4-3	Parallel Transport Stream Timing Diagram (Data + Redundancy)	<u>14</u>
4-4	Serial Transport Stream Timing Diagram (Data + Redundancy)	<u>14</u>
4-5	Tuner Control Interface System	<u>17</u>
4-6	Antenna Control Interface System	<u>19</u>
4-7	25-MHz Crystal Oscillation	22
4-8	4-MHz Clock Input	<u>22</u>
5-1	Thermal Land Size and Via Array	<u>24</u>
7-1	Crystal or Clock Timing Waveform	<u>54</u>
7-2	Device Reset Signal Timing Waveforms	<u>54</u>
7-3	MPEG Interface – Parallel Mode (Data Only) Timing Waveforms	<u>55</u>
7-4	MPEG Interface – Serial Mode (Data Only) Timing Waveforms	<u>56</u>
7-5	MPEG Interface – Parallel Mode (Data With Redundancy) Timing Waveforms	<u>57</u>
7-6	MPEG Interface – Serial Mode (Data with Redundancy) Timing Waveforms	<u>58</u>
7-7	I ² C SCL and SDA Timing Waveforms	<u>59</u>
7-8	I ² C Start and Stop Conditions Timing Waveforms	59

VSB/QAM Receiver

SLEA064-MARCH 2007



List of Tables

3-1	Terminal Functions	<u>10</u>
4-1	MPEG-2 Transport Stream Interface	<u>13</u>
4-2	MPEG-2 Transport Stream Output Clock Frequency	<u>14</u>
4-3	I ² C Terminal Description	<u>15</u>
4-4	I ² C Host Interface Device Write Addresses	<u>15</u>
4-5	I ² C Host Interface Device Read Address	<u>16</u>
4-6	Tuner Control Interface Registers	<u>17</u>
4-7	Antenna Control Interface Registers	<u>19</u>
4-8	Antenna Control Interface Pins	<u>20</u>
6-1	I ² C Host Interface Registers	<u>25</u>
7-1	Crystal and Input Clock Timing	<u>54</u>
7-2	Device Reset Timing	<u>54</u>
7-3	Parallel Mode (Data Only) Timing	<u>55</u>
7-4	Serial Mode (Data Only) Timing	<u>56</u>
7-5	Parallel Mode (Data With Redundancy) Timing	<u>57</u>
7-6	Serial Mode (Data With Redundancy) Timing	<u>58</u>
7-7	Host and Tuner L ² C Interface Timing	59



1 Introduction

The TVP9900 is a cost-effective digital TV (DTV) front-end IC targeted for low-cost high-volume DTV receivers. The TVP9900 is a system-on-chip (SoC) device that integrates the main functions of a DTV front-end system, including programmable gain amplifier (PGA), A/D converter, VSB demodulator, ATSC forward error correction (FEC), QAM demodulator, and ITU-T Annex B FEC. It provides rich peripheral support including AGC control, tuner control, CEA-909 antenna control, and host I²C interface. The TVP9900 supports processing of ATSC VSB or ITU-T Annex B QAM IF inputs.

1.1 Features

- ATSC 8-VSB Demodulation and FEC
- ITU-J.83B Compliant 64/256 QAM Demodulation and FEC
- Direct 44-MHz IF Sampling Eliminates Need for External Downconverter
- Integrated IF PGA
- Integrated High-Speed 10-bit A/D Converter
- Integrated Digital Filter Relaxes External Tuner Filters
- Sigma-Delta DAC for AGC Control
- Adjacent Channel Filter
- NTSC Co-Channel Rejection Filter
- All Digital Timing Recovery
- Pilot Tracking Loop With Lock Status Indicator Signal
- Decision-Directed Carrier Phase Tracking Loop
- Field and Segment Synchronization With Sync Status Indicator Signal

- Host Interrupt for Remote Monitoring of Signal Quality
- SNR Monitor
- BER Monitor
- Integrated De-Interleaver RAM
- Parallel/Serial MPEG Output Interface With Error Packet Indicator
- Direct Tuner Control Interface
- EIA/CEA-909 Antenna Control Interface
- Option for 4-MHz Clock Input Driven by MOP IC in Tuner, So No Quartz Crystal Required for Demodulator
- External DAC and VCXO for Clock Recovery Not Required
- Equalizer Covers Echo Profile Required by ATSC A.74 Guideline
- Superior Multipath Performance Demodulating for Brazil Ensembles A Through E
- Power-Down Mode
- 80-Pin TQFP Package

1.2 Ordering Information⁽¹⁾

т	PACKAGED DEVICES	PACKAGE OPTION	
'A	80-Pin TQFP-PowerPAD	PACKAGE OF HON	
0°C to 70°C	TVP9900PFP	Tray	
0-0 10 70-0	TVP9900PFPR	Tape and Reel	

(1) For the most current package and ordering information, see the Package Option Addendum at the end of this document, or see the TI Web site at www.ti.com.



Please be aware that an important notice concerning availability, standard warranty, and use in critical applications of Texas Instruments semiconductor products and disclaimers thereto appears at the end of this document.



2 Block Diagram


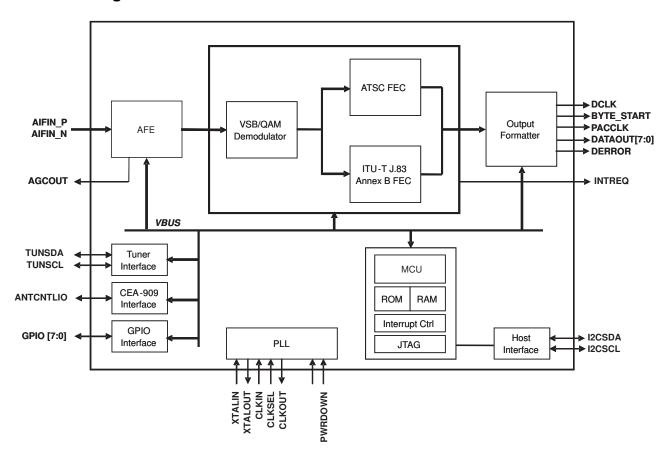


Figure 2-1. TVP9900 Block Diagram



3 Terminal Assignments

3.1 Pinout

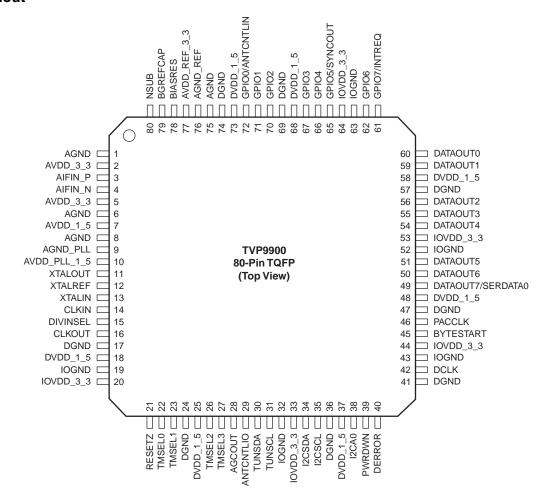



3.2 Terminal Functions

Table 3-1. Terminal Functions

TERMINAL					
NAME NO.		I/O	DESCRIPTION		
IF INTERFACE					
AIFIN_P	3	I	Analog positive differential IF input		
AIFIN_N	4	I	Analog negative differential IF input		
TRANSPORT STREAM IN	ITERFACE				
DCLK	42	0	MPEG-2 data clock output		
BYTE_START	45	0	MPEG-2 Byte Start signal. An active high output signal that indicates the first byte of a transport stream data packet.		
PACCLK	46	0	MPEG-2 interface packet framing signal. An active high output signal that remains high for the entire length of the valid data packet.		
DERROR	40	0	MPEG-2 interface data error. An active high output signal that indicates an error in the data output packet. Indicates an error in the input data. This pin should be tied low if not in use.		
DATAOUT7/SERDATA0	49	0	 MPEG-2 parallel data output. Bit 7 is the first bit of the transport stream. MPEG-2 serial data output 		
DATAOUT[6:0]	50, 51, 54, 55, 56, 59, 60	0	MPEG-2 parallel data output bits 6-0.		
CLOCK SIGNALS					
XTALIN	13	I	Crystal input. Input to the on-chip oscillator from an external crystal. The required cryst frequency is 25 MHz. This input can also be driven by an external clock source instead a crystal. When using an external clock source, a 4 MHz or 25 MHz clock must be use NOTE: If an external clock source is used, the input can only be used with 1.5-V signal levels.		
XTALOUT	11	0	Crystal output. Output from the on-chip oscillator to an external crystal.		
XTALREF	12	1	External crystal reference. This pin is used for the external crystal capacitor ground reference.		
CLKIN	14	I	Test clock input. For normal operation, this input should be tied low.		
DIVINSEL	15	I	PLL VCO divider default input select. This input is used to select the default VCO divider value for the PLL. If a 25-MHz crystal or clock is used for XTALIN, then DIVINSEL should be driven low. If a 4-MHz crystal or clock is used for XTALIN, then DIVINSEL should be driven high.		
CLKOUT	16	0	Test clock output. For normal operation, this output is not used.		
MISCELLANEOUS SIGNA	ALS				
AGCOUT	28	0	AGC control Delta-Sigma DAC output.		
ANTCNTLIO	29	I/O	Smart antenna control interface input/output.		
TUNSDA	30	I/O	Tuner I ² C serial data input/output. NOTE: The output functions as an open-drain.		
TUNSCL	31	I/O	Tuner I ² C serial clock. NOTE: The output functions as an open-drain.		
GPIO7/INTREQ	61	I/O	General purpose I/O Interrupt request output		
GPIO6	62	I/O	General purpose I/O Reserved		
GPIO5/SYNCOUT	65	I/O	General purpose I/O Sync output		
GPIO[4:2]	66, 67, 70	I/O	General purpose I/O		
GPIO1	71	0	Dedicated to Smart Antenna support. Outputs direction of signal on pin 29 in Sma Antenna 1-pin mode. 0 = Signal input from antenna to TVP9900, pin 29 1 = Signal output from TVP9900 pin 29 to antenna		






Table 3-1. Terminal Functions (continued)

TERMINAL			DECORPORTION		
NAME	NO.	I/O	DESCRIPTION		
GPIO0/ANTCNTLIN	72	I/O	General purpose I/O Antenna Control Input		
RESETZ	21	I	System reset. An active-low asynchronous input that initializes the device to the default state.		
PWRDOWN	39	I	Power down terminal. An active high signal puts the device in a low power state.		
TMSEL[3:0]	22, 23, 26, 27	I	Test mode select. Tie low for normal operation.		
HOST INTERFACE					
I2CSDA	34	I/O	Host I ² C serial data input/output. NOTE: The pin functions as an open-drain output.		
I ² CSCL	35	I/O	Host I ² C serial clock. NOTE: The pin functions as an open-drain output.		
I ² CA0	38	I	Host I^2C device address select. Determines address for I^2C (sampled during reset). A pullup or pulldown 10-k Ω resistor is needed to program the terminal to the desired address. $0 = \text{Address}$ is $0 \times B8h$ $1 = \text{Address}$ is $0 \times B8h$		
POWER SUPPLIES					
DVDD_1_5	18, 25, 37, 48, 58, 68, 73	Р	Digital power supply. Connect to 1.5-V digital supply.		
DGND	17, 24, 36, 41, 47, 57, 69, 74	Р	Digital power supply return. Connect to digital ground.		
IOVDD_3_3	20, 33, 44, 53, 64	Р	IO power supply. Connect to 3.3-V digital supply.		
IOGND	19, 32, 43, 52, 63	Р	IO power supply return. Connect to digital ground.		
AVDD_3_3	2, 5	Р	Analog power supply. Connect to 3.3-V analog supply.		
AVDD_1_5	7	Р	Analog power supply. Connect to 1.5-V analog supply.		
AGND	1, 6, 8, 75	Р	Analog power supply return. Connect to analog ground.		
AVDD_PLL_1_5	10	Р	PLL power supply. Connect to 1.5-V analog supply.		
AGND_PLL	9	Р	PLL power supply return. Connect to analog ground.		
NSUB	80	Р	Die substrate. Connect to PCB ground.		
AVDD_REF_3_3	77	Р	Analog reference power supply. Connect to 3.3-V analog supply.		
AGND_REF	76	Р	Analog reference ground. Connect to analog ground.		
BGREFCAP	79	0	Band-gap reference capacitor connection		
BIASRES	78	0	Analog bias register. Connect through a 24-kΩ resistor to PCB ground.		



4 Functional Description

4.1 Analog Front End

The TVP9900 receiver has an analog input channel that accepts one differential or single-ended 44-MHz center frequency IF input, which are ac-coupled. The receiver supports a maximum input differential voltage range of 1 Vpp with PGA setting at unity gain. The programmable gain amplifier (PGA) and the AGC circuit work together and ensure that the input signal is amplified sufficiently to ensure the proper input range for the ADC. The ADC has 10 bits of resolution. The clock input for the ADC comes from the PLL. An external downconverter is not required to use this IF direct sampling method. The analog front end and adjacent digital filter can potentially relax the requirement for external analog filters, and only one external SAW filter is required.

4.2 VSB/QAM Demodulator

The VSB/QAM demodulator is designed for 8-VSB demodulation compliant with ATSC, and 64/256 QAM demodulation compliant with ITU-T J83 Annex B. The VSB/QAM demodulator in the TVP9900 is composed of the following blocks:

- · Automatic gain control
- Adjacent channel filter
- NTSC rejection filter
- Timing recovery
- Pilot tracking
- Matched filter
- Decision feedback equalizer
- Carrier recovery

The all-digital demodulator architecture does not require an external downconverter, AGC control DAC, clock recovery VCXO, or carrier recovery VCXO. This architecture makes a low-cost system implementation possible.

4.3 Forward Error Correction

Forward Error Correction (FEC) in the TVP9000 includes the following blocks:

- QAM FEC
 - Trellis decoder
 - Synchronizer
 - De-randomizer
 - De-interleaver
 - Reed Solomon decoder
 - MPEG deframer
- VSB FEC
 - Trellis decoder
 - Synchronizer
 - De-interleaver
 - Reed Solomon decoder
 - De-randomizer

The Trellis decoder is designed for help protect against short-burst interference. The VSB synchronizer performs segment and frame synchronization and outputs the synchronization signal with data. An internal RAM is shared by both VSB and QAM modes, and additional external RAM is not required.



4.4 Output Formatter

The TVP9900 transport stream interfaces directly to the back-end IC, which provides transport stream compliance with ISO/IEC 13818-1 in parallel or serial modes. The details of the transport stream interface are shown in Table 4-1. In serial mode, DATAOUT[7] is used as the serial data output, with the MSB output first. The maximum output rate is 42.1 Mbit/s in serial mode. The polarity of DCLK, BYTE_START, DERROR, and PACCLK is programmable.

Table 4-1. MPEG-2 Transport Stream Interface

TERMINAL	TYPE	TYPE DESCRIPTION	
DCLK O Parallel/serial clock output		Parallel/serial clock output	
DATAOUT[7:0]	0	Parallel/serial data output DATAOUT7 is the first bit of the transport stream in parallel mode. DATAOUT7 is the serial data output in serial mode.	
BYTE_START	0	Packet sync, indicates the start byte of a transport packet	
PACCLK	0	Packet enable, indicates the valid packet data	

Figure 4-1 and Figure 4-2 show the parallel and serial transport stream timing diagrams in data-only mode. In data-only mode, 188 bytes of data is transferred from the transport stream interface continuously. PACCLK is always kept high.

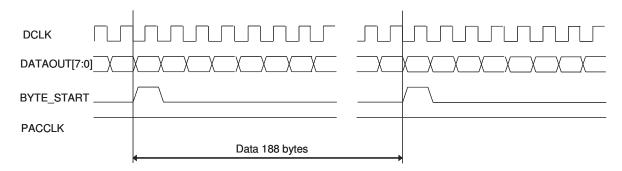


Figure 4-1. Parallel Transport Stream Timing Diagram (Data Only)

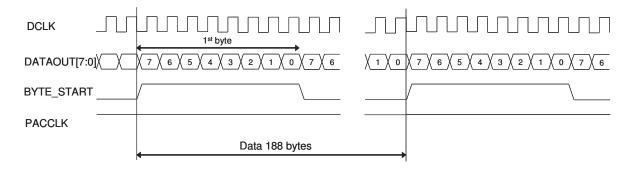


Figure 4-2. Serial Transport Stream Timing Diagram (Data Only)

Figure 4-3 and Figure 4-4 show the parallel and serial transport stream timing diagrams in data and redundancy mode. In data and redundancy mode, 188 bytes of data is transferred from the transport stream interface with redundant data bytes. PACCLK only becomes high when the data is valid. Redundancy data is 20 bytes in the ATSC standard and 16 bytes in ITU-T J.83 Annex B.

Submit Documentation Feedback



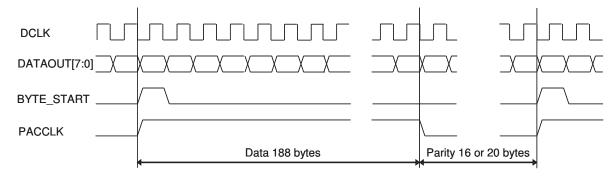


Figure 4-3. Parallel Transport Stream Timing Diagram (Data + Redundancy)

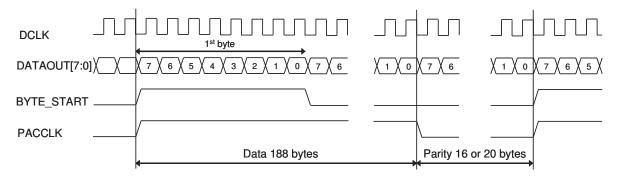


Figure 4-4. Serial Transport Stream Timing Diagram (Data + Redundancy)

Table 4-2 shows the transport stream clock frequency in each mode.

Table 4-2. MPEG-2 Transport Stream Output Clock Frequency

	BIT RATE	DATA ONLY		DATA + REDUNDANCY	
MODE	(Mbps)	SERIAL CLOCK (MHz)	PARALLEL CLOCK (MHz)	SERIAL CLOCK (MHz)	PARALLEL CLOCK (MHz)
8VSB	19.39266	19.39266	2.42408	21.45571	2.68196
64QAM	26.97035	26.97035	3.37129	29.26570	3.65821
256QAM	38.81070	38.81070	4.85133	42.11374	5.26422

4.5 I²C Host Interface

14

Communication with the TVP9900 receiver is via an I²C host interface. The I²C standard consists of two signals, the serial input/output data (I2CSDA) line and the input/output clock line (I2CSCL), which carry information between the devices connected to the bus. A 1-bit control signal (I2CA0) is used for slave address selection. Although an I²C system can be multi-mastered, the TVP9900 can function as a slave device only. Since I2CSDA and I2CSCL are kept open-drain at logic high output level or when the bus is not driven, the user should connect I2CSDA and I2CSCL to IOVDD_3.3 via a pullup resistor on the board. At the trailing edge of reset, the status of the I2CA0 line is sampled to determine the device address used. Table 4-3 summarizes the terminal functions of the I²C-mode host interface. Table 4-4 and Table 4-5 show the device address selection options.

Functional Description Submit Documentation Feedback



Table 4-3. I²C Terminal Description

SIGNAL	TYPE	DESCRIPTION
I2CA0	I	Slave address selection
I2CSCL	I/O (open drain)	Input/output clock line
I2CSDA	I/O (open drain)	Input/output data line

Table 4-4. I²C Host Interface Device Write Addresses

I2CA0	WRITE ADDRESS
0	B8h
1	BAh

Data transfer rate on the bus is up to 400 kbits/s. The number of interfaces connected to the bus is dependent on the bus capacitance limit of 400 pF. The data on the SDA line must be stable during the high period of the SCL, except for start and stop conditions. The high or low state of the data line can only change with the clock signal on the SCL line being low. A high-to-low transition on the SDA line while the SCL is high indicates an I²C start condition. A low-to-high transition on the SDA line while the SCL is high indicates an I²C stop condition.

Every byte placed on the SDA must be 8 bits long. The number of bytes that can be transferred is unrestricted. Each byte must be followed by an acknowledge bit. The acknowledge-related clock pulse is generated by the I^2C master.

4.5.1 I²C Write Operation

Data transfers occur utilizing the following illustrated formats. An I²C master initiates a write operation to the TVP9900 receiver by generating a start condition (S), followed by the TVP9900 I²C address (as shown below), in MSB first bit order, followed by a 0 to indicate a write cycle. After receiving an acknowledge from the TVP9900 receiver, the master presents the sub-address of the register or the first of a block of registers it wants to write, followed by one or more bytes of data, MSB first. The TVP9900 receiver acknowledges each byte after completion of each transfer. The I²C master terminates the write operation by generating a stop condition (P).

Step 1	0							
I ² C Start (master)	S]						
Step 2	7	6	5	4	3	2	1	0
I ² C General address (master)	1	0	1	1	1	0	Х	0
Step 3	9	1						
I ² C Acknowledge (slave)	А]						
Step 4	7	6	5	4	3	2	1	0
I ² C Write register address (master)	Addr							
Step 5	9	1						
I ² C Acknowledge (slave)	A							
Step 6	7	6	5	4	3	2	1	0
I ² C Write data (master)	Data							
Step 7 ⁽¹⁾	9]						
I ² C Acknowledge (slave)	А							
Step 8	0	1						
I ² C Stop (master)	Р	1						

⁽¹⁾ Repeat steps 6 and 7 until all data have been written.



4.5.2 PC Read Operation

The read operation consists of two phases. The first phase is the address phase. In this phase, an I²C master initiates a write operation to the TVP9900 receiver by generating a start condition (S) followed by the TVP9900 I²C address, in MSB first bit order, followed by a 0 to indicate a write cycle. After receiving acknowledges from the TVP9900 receiver, the master presents the sub-address of the register or the first of a block of registers it wants to read. After the cycle is acknowledged, the master terminates the cycle immediately by generating a stop condition (P).

Table 4-5. I²C Host Interface Device Read Address

I2CA0	READ ADDRESS
0	B8h
1	BAh

The second phase is the data phase. In this phase, an I²C master initiates a read operation to the TVP9900 receiver by generating a start condition, followed by the TVP9900 I²C address (as shown below for a read operation), in MSB-first bit order, followed by a 1 to indicate a read cycle. After an acknowledge from the TVP9900 receiver, the I²C master receives one or more bytes of data from the TVP9900 receiver. The I²C master acknowledges the transfer at the end of each byte. After the last data byte desired has been transferred from the TVP9900 receiver to the master, the master generates a not acknowledge, followed by a stop.

Read	Phase	1

Step 1	0							
I ² C Start (master)	S							
Step 2	7	6	5	4	3	2	1	0
I ² C General address (master)	1	0	1	1	1	0	Х	0
Step 3	9							
I ² C Acknowledge (slave)	A							
Step 4	7	6	5	4	3	2	1	0
I ² C Write register address (master)	Addr							
Step 5	9							
I ² C Acknowledge (slave)	A							
Step 6	0							
I ² C Stop (master)	Р							
Read Phase 2								
Step 7	0							
I ² C Start (master)	S							
Step 8	7	6	5	4	3	2	1	0
I ² C General address (master)	1	0	1	1	1	0	Х	0
Step 9	9							
I ² C Acknowledge (slave)	А							
Step 10	7	6	5	4	3	2	1	0
I ² C Read data (slave)	Data							
Step 11 ⁽¹⁾	9							
I ² C Not Acknowledge (master)	A							
Step 12	0]						
I ² C Stop (master)	Р	1						
	1							

(1) Repeat steps 10 and 11 for all bytes read. Master does not acknowledge the last read data received.



4.6 Tuner Control Interface

The TVP9900 has an I²C-compatible two-wire serial interface that can be used by the host processor for tuner control. This dedicated tuner interface can be used by the host processor to transfer data to/from the tuner in order to isolate the tuner from the main system I²C bus. As a result, noise coupling to the tuner from host processor I²C bus transfers should be minimized.

The TVP9900 tuner control interface operates as an I^2C bus master and supports both 100-kbps and 400-kbps data transfer rates. The mode and transfer rate is set in the Tuner Control Interface – Control and Status Register (5Eh), bit 0. The device does not support a multi-master bus environment (bus arbitration is not supported).

To transfer data to/from the tuner, the host processor first writes the transaction to a set of registers in the TVP9900 via the host processor I²C interface. Then the TVP9900 internal MCU transfers the data to/from the tuner via the tuner control interface.

TUNSCL and TUNSDA need to be pulled up to the 3.3-V supply (IOVDD) and not to a 5-V supply.

Figure 4-5 shows the block diagram of the tuner control interface system.

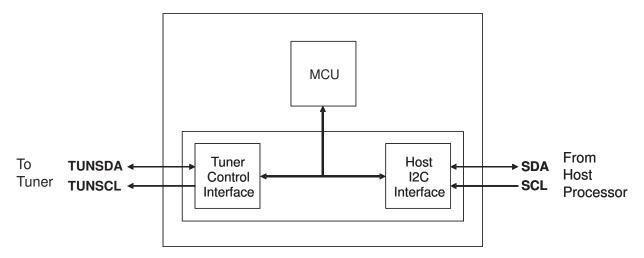


Figure 4-5. Tuner Control Interface System

Table 4-6 lists the I²C registers and their functions used to control the tuner interface.

Table 4-6. Tuner Control Interface Registers

REGISTER	FUNCTION
55h	Tuner I ² C slave address and R/W control
56h to 5Dh	Data registers 1 through 8
5Eh	Byte Count, Transaction Start, and I ² C Mode
F9, FB, FD, FFh	Software Interrupt Raw Status, Status, Mask, and Clear – Transaction Error and Done Status

When the TVP9900 tuner I²C interface is used, rather than controlling the tuner over the host processor I²C bus interface, two status bits are provided in the TVP9900 to indicate a transaction error or the completion of a successful transaction. The TCIERROR bit in the TVP9900 Software Interrupt Status Register (FBh) gets set as a result of a transaction error. The TCIDONE bit in the same register gets set at the end of a normal transaction; it does not get set for an abnormal transaction. The TVP9900 can be configured so that setting the TCIERROR or TCODONE status bits can assert the INTREQ output of the TVP9900; this requires the mask bits to be configured correctly in the TVP9900 Software Interrupt Mask Register (FDh).



If the host INTREQ is not used, the TCIDONE and TCIERROR interrupts should be masked and the host should poll the TCIDONE status bit to determine when the transaction is complete, and the host should poll the TCIERROR status bit to determine when an error has occurred.

Tuner data transfers occur utilizing the following illustrated formats.

4.6.1 Tuner Write Operation

The following steps are required to initiate a write operation to the tuner. The host processor first writes the required transaction data to a set of registers in the TVP9900 via the host processor I²C interface.

Step 1	
Register 55h	Set tuner I ² C slave address (bits 7:1) and read/write control (bit 0 = 0)
Step 2	
Registers 56h to 5Dh	Write data bytes to be sent to tuner; 56h is first byte sent
Step 3	
Register 5Eh	Set byte count (bits 7:5) and I ² C mode (bit 0) Set bit 2 to 1 to start transaction to tuner
Step 4	
Register FBh	Check state of bits 1:0 or INTREQ pin to verify successful transaction

After the transaction has been initiated, the TVP9900 internal MCU transfers the data to the tuner via the tuner control interface. Acting as the I²C master, the TVP9900 initiates a write operation to the tuner (as shown below), by generating a start condition, followed by the tuner I²C address, in MSB-first bit order, followed by a 0 to indicate a write cycle. After receiving an acknowledge from the tuner, the TVP9900 presents the sub-address of the register, if needed, followed by one or more bytes of data, MSB first. The tuner acknowledges each byte after completion of each transfer. The TVP9900 terminates the write operation by generating a stop condition.

TVP9900/Tuner Write Operation

SDA	Start	Device Address	W	Ack	Base Address	Ack	Data 1	Ack		Data N	Ack	Stop	
-----	-------	-------------------	---	-----	-----------------	-----	--------	-----	--	--------	-----	------	--

4.6.2 Tuner Read Operation

The following steps are required to initiate a read operation from the tuner. The host processor first writes the required transaction data to a set of registers in the TVP9900 via the host processor I²C interface, then reads the data bytes received from the tuner stored in TVP9900 registers.

Step 1	
Register 55h	Set tuner I ² C slave address (bits 7:1) and read/write control (bit 0 = 1)
Step 2	
Register 5Eh	Set byte count (bits 7:5) and I ² C mode (bit 0) Set bit 2 to 1 to start transaction to tuner
Step 3	
Register FBh	Check state of bits 1:0 or INTREQ pin to verify successful transaction
Step 4	
Registers 56h to 5Dh	Read data bytes from tuner; 56h is first byte received

After the transaction has been initiated, the TVP9900 internal MCU transfers the data from the tuner via the tuner control interface. The read operation consists of two phases, as shown below. The first phase is the address phase. In this phase, the TVP9900 I²C master initiates a write operation to the tuner by generating a start condition, followed by the tuner I²C address, in MSB-first bit order, followed by a 0 to indicate a write cycle. After receiving an acknowledge from the tuner, the TVP9900 presents the sub-address of the register, if needed. After the cycle is acknowledged, the master terminates the cycle immediately by generating a stop condition.



The second phase is the data phase. In this phase, the TVP9900 I²C master initiates a read operation to the tuner by generating a start condition, followed by the tuner I²C address, in MSB-first bit order, followed by a 1 to indicate a read cycle. After an acknowledge from the tuner, the TVP9900 receives one or more bytes of data from the tuner. The TVP9900 acknowledges the transfer at the end of each byte. After the last data byte desired has been transferred from the tuner to the TVP9900, the TVP9900 generates a not acknowledge, followed by a stop.

TVP9900/Tuner Set Start Address, Then Read Operation

SDA	Start	Device Address	W	Ack	Base Address	Ack	Stop			
SDA	Start	Device Address	R	Ack	Data 1	Ack		Data N	Ack	Stop

4.7 Antenna Control Interface

The TVP9900 has an antenna control interface compliant with EIA/CEA-909. The TVP9900 receives the antenna parameters from the host processor via I²C, and sends a modulated PWM signal to the antenna. The antenna parameters include antenna direction, antenna polarization, preamplifier gain and channel number. This interface can be used to automatically optimize the signal by adjusting the antenna configuration for the best possible reception.

Figure 4-6 shows the block diagram of the antenna control interface system.

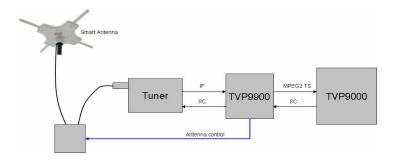


Figure 4-6. Antenna Control Interface System

Table 4-7 lists the I²C registers and their functions used with the antenna control interface.

Table 4-7. Antenna Control Interface Registers

REGISTER	FUNCTION
4Fh	GPIO Alternate Function Select
5Fh	Antenna Control Interface – Control and Status
60h to 61h	Antenna Control Interface – Transmit Data
62h to 63h	Antenna Control Interface – Receive Data
F9, FB, FD, FFh	Software Interrupt Raw Status, Status, Mask, and Clear – Transaction Complete and Timeout Status

The TVP9900 supports two modes of antenna control: Mode A for basic control (transmit transaction only) and Mode B for advanced control (transmit and receive transactions) as defined in the CEA-909 standard. For Mode B operation, the TVP9900 supports both 1-pin and 2-pin operation. In 1-pin mode, the data input and output are muxed into one pin (pin 29), and in 2-pin mode the input and output use separate pins (pin 29 for output, pin 72 for input.) The desired pin mode is selected by setting register 5Fh, bit 0.



Table 4-8 lists the TVP9900 pins and their functions used with the antenna control interface.

Table 4-8. Antenna Control Interface Pins

PIN	NAME	FUNCTION	
29 ANTCNTLIO Antenna control interface input/output			
71	71 GPIO1 Signal direction of pin 29 in 1-pin mode		
72 GPIO0/ANTCNTLIN Antenna control input for 2-pin mode			

The GPIO1 pin provides dedicated smart antenna control support, and in 1-pin mode this pin outputs the direction of the signal on pin 29:

GPIO1 = 0 indicates signal input from antenna to TVP9900 pin 29

GPIO1 = 1 indicates signal output from TVP9900 pin 29 to antenna

Four status bit are provided in the TVP9900 to indicate the completion of a successful receive or transmit transaction, or if a transaction timeout has occurred.

- The ACIRXCT bit in the TVP9900 Software Interrupt Status Register (FBh) gets set when the receive transaction from a Mode B antenna is complete.
- The ACITXCT bit in the same register gets set when the transmit transaction to the antenna is complete.
- The ACIRXTO bit in the same register gets set when an interface timeout has occurred due to no reply form the antenna following a transmit transaction, or an incomplete receive transaction from the antenna
- The RXERR bit in the Antenna Control Interface Control and Status Register (5Fh) is set if an
 incomplete receive transaction occurs.

The TVP9900 can be configured so that setting the ACIRXCT, ACITXCT, or ACIRXTO status bits can assert the INTREQ output of the TVP9900; this requires the mask bits to be configured correctly in the TVP9900 Software Interrupt Mask Register (FDh).

If the host INTREQ is not used, the ACIRXCT, ACITXCT, and ACIRXTO interrupts should be masked and the host should poll the ACIRXCT and ACITXCT status bits to determine when the transactions are complete, and the host should poll the ACIRXTO and RXERR status bits to determine when a receive timeout or error has occurred.

Antenna control data transfers occur utilizing the following illustrated formats.

4.7.1 Antenna Interrogation/Initialization

The following steps are required to interrogate and initialize a smart antenna. The host processor first writes the required transaction data to a set of registers in the TVP9900 via the host processor I²C interface.

- 1. The system host processor transmits to the antenna a basic Mode A 14-bit serial data stream with an RF channel number of zero.
- 2. The system tri-states the line and waits 100 ms for a reply message from the antenna controller. If no response is received, a timeout occurs, and the antenna controller is assumed to be a Mode A system. The system uses only transmit operations for antenna control.
- 3. If the antenna responds with a 10-bit program identifier, the antenna controller is assumed to be a Mode B system, and the system uses transmit and receive operations for antenna control.

This initialization is optional. If the system has only Mode A enabled, with no Mode B support, then this initialization step may be omitted.



4.7.2 Transmit Data to Antenna Operation

The following steps are required to transmit data to the antenna. The host processor writes the required transaction data to a set of registers in the TVP9900, as described below, via the host processor I²C interface.

Step 1	
Register 5Fh	Set TXRXSEL (bit 2 = 1) to select a transmit data transaction, and set MODE (bit 4 = 1) to enable auto receive mode
Step 2	
Registers 60h to 61h	Load 14-bit data value to be transmitted to antenna
Step 3	
Register 5Fh	Set TXSTART (bit 3) to 1 to start transmit transaction to tuner
Step 4	
Register FBh	Check state of bit 4 or INTREQ pin to verify successful transaction

4.7.3 Receive Data from Antenna Operation

After an antenna transmit transaction is executed, a Mode B antenna should respond with a 10-bit data value within 100 ms. If the receive data is not received within 100 ms, then a receive timeout occurs. The following steps are required to receive data from the antenna. The host processor first writes the required transaction data to a set of registers in the TVP9900, as described below, via the host processor I²C interface, then reads the data bytes received from the antenna stored in TVP9900 registers.

Step 1	
Register 5Fh	Set TXRXSEL (bit 2 = 0) to select a receive data transaction, and set MODE (bit 4 = 1) to enable auto receive mode
Step 2	
Register FBh	Check state of bit 5 or INTREQ pin to verify successful transaction, or wait for timeout interrupt (bit 3) to occur
Step 3	
Registers 62h to 63h	Read 10-bit data value received from antenna
Step 4	
Register 5Fh	Read RXERR value (bit 5)

The RXERR bit is set to 1 to indicate an error occurred when receiving data from a Mode B antenna. If a non-zero data value was received from the antenna and no error occurred, then the data is valid and the antenna is a Mode B antenna. If the data value is zero and no error occurred, then a receive transaction did not occur and it is assumed that the antenna is a Mode A antenna.

4.8 General-Purpose IO (GPIO)

The TVP9900 has eight general-purpose IO pins, GPIO0–GPIO7. GPIO1 is a dedicated pin for Smart Antenna support. GPIO0, GPIO5, GPIO6, and GPIO7 are shared pins and can be programmed as the following dedicated functions. See register 4Fh description for details about selecting these alternate functions. All pins are configured as inputs at device power-up.

- GPIO0 Antenna control input
- GPIO5 Sync output
- GPIO6 Reserved
- GPIO7 Interrupt request output



4.9 Clock Circuits

An internal PLL generates all clocks required in the chip. A 25-MHz clock is required to derive the PLL. Most tuner devices have a 4-MHz crystal oscillator that can be output to the demodulator as a clock source. In the TVP9900, a 4-MHz clock input also can be used as the clock source. A 4-MHz clock is input to the TVP9900 receiver on terminal 13 (XTALIN), or a crystal of 25-MHz fundamental resonant frequency may be connected across terminals 13 (XTALIN) and 11 (XTALOUT). Figure 4-7 shows the reference clock configuration of 25-MHz crystal oscillation. NOTE: The oscillator input, XTALIN, is not 3.3-V tolerant and only works at 1.5-V signal levels.

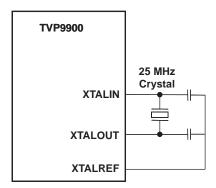


Figure 4-7. 25-MHz Crystal Oscillation

Figure 4-8 shows the reference clock configuration of 4-MHz clock input.

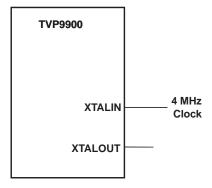


Figure 4-8. 4-MHz Clock Input

4.10 Power-Up Sequence

No specific power-supply sequence is required, as long as all power supplies are ramped to valid operating levels within 500 ms of one another. Output or bidirectional buffers power-up with the output buffers in tri-state mode.

4.11 Reset

The reset signal, RESETZ, is an active-low asynchronous reset that is used to initialize the device at power-up. The RESETZ signal may be low during power-up but must remain active low for a minimum of 1 ms after all power-supply voltages are stable at the recommended operating voltage. Internal circuits synchronize the power-on reset with internal clocks; therefore, the RESETZ signal must remain active low for a minimum of 1 µs after the crystal oscillator and clocks are stable.

Reset may be asserted any time after power up and stable crystal oscillation and must remain asserted for at least 1 μ s. A minimum of 200 μ s must be allowed after reset before commencing I²C operations.





SLEA064-MARCH 2007

4.12 Power Down

There is no required power-down sequence for the TVP9900.

4.13 Power-Supply Voltage Requirements


The digital core uses a 1.5-V power supply. The digital IO cells use a 3.3-V power supply. Note that the exception is for the oscillator input, XTALIN, which is not 3.3-V tolerant and only works at 1.5-V signal levels. The analog circuitry uses both a 1.5-V and a 3.3-V power supply.



5 High-K PCB Design Recommendations

In order to effectively transfer heat out of the package and to keep the die junction temperature below 105°C, the TVP9900 is packaged in the thermal PowerPAD™ package, which has an exposed metal pad on the bottom of the device. To effectively use this package, the following PCB design requirements must be followed.

- An array of thermal vias should be placed in the board at the placement location of the TVP9900, as shown in Figure 5-1.
- The ideal thermal land size is 10 mm \times 10 mm, and the ideal thermal via pattern is a 6 \times 6 array.
- The vias should be connected to the PCB ground plane.
- The exposed metal pad of the TVP9900 should be soldered to these vias.
- The copper trace thickness should be 0.071 mm (2 oz), if possible.

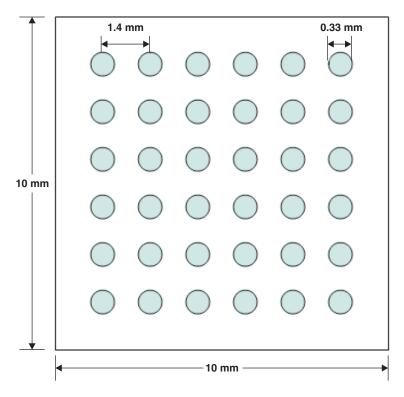

10-mm × 10-mm thermal land size

6 × 6 array of vias

1.4-mm via spacing

0.33-mm via diameter

Figure 5-1. Thermal Land Size and Via Array

Each of these recommendations is important to maximize the heat-sinking characteristics of the PCB. Refer to the Texas Instruments application report, *PowerPAD™ Thermally Enhanced Package* (literature number SLMA002), for more detailed information.



6 Host Processor I²C Register Summary

6.1 Overview

The TVP9900 IC is controlled by a host processor by using a set of control and status registers. Access to these registers by the host processor is via an I²C serial interface. A summary of the I²C host interface registers is given in Table 6-1.

Table 6-1. I²C Host Interface Registers

ADDRESS	REGISTER NAME	DEFAULT	R/W
00h	Receiver Control Register 1 / Soft Reset	20h	R/W
01h	Receiver Control Register 2	11h	R/W
02h	Reserved		
03h	VSB Control Register	02h	R/W
04h	AGC Control Register	07h	R/W
05h-1Ah	Reserved		
1Bh	VSB FEC Time Counter Control Register 1	BCh	R/W
1Ch	VSB FEC Time Counter Control Register 2	64h	R/W
1Dh	VSB FEC Time Counter Control Register 3	00h	R/W
1Eh	QAM FEC Time Counter Control Register 1	00h	R/W
1Fh	QAM FEC Time Counter Control Register 2	08h	R/W
20h	QAM FEC Time Counter Control Register 3	00h	R/W
21h	VSB FEC Segment Error Count Threshold 1	05h	R/W
22h	VSB FEC Segment Error Count Threshold 2	00h	R/W
23h-24h	Reserved		
25h	Update Status Control Register	N/A	R/W
26h	Receiver Status Register	N/A	R
27h	AGC Status Register 1 – AGC LF Accumulator Output (7:0)	N/A	R
28h	AGC Status Register 2 – AGC LF Accumulator Output (15:8)	N/A	R
29h	AGC Status Register 3 – AGC LF Accumulator Output (19:16)	N/A	R
2Ah	NTSC Rejection Filter Status Register	N/A	R
2Bh	Timing Recovery Status Register 1 – DTR LF Accumulator Output (7:0)	N/A	R
2Ch	Timing Recovery Status Register 2 – DTR LF Accumulator Output (15:8)	N/A	R
2Dh	Timing Recovery Status Register 3 – DTR LF Accumulator Output (23:16)	N/A	R
2Eh	Timing Recovery Status Register 4 – DTR LF Accumulator Output (31:24)	N/A	R
2Fh	Timing Recovery Status Register 5 – DTR LF Accumulator Output (39:32)	N/A	R
30h	Timing Recovery Status Register 6 – DTR LF Accumulator Output (43:40)	N/A	R
31h-33h	Reserved		
34h	Pilot Tracking Status Register 1 – DPT LF Accumulator Output (7:0)	N/A	R
35h	Pilot Tracking Status Register 2 – DPT LF Accumulator Output (15:8)	N/A	R
36h	Pilot Tracking Status Register 3 – DPT LF Accumulator Output (19:16)	N/A	R
37h-38h	Reserved		
39h	Carrier Recovery Status Register 1 – DCL Average Error (7:0)	N/A	R
3Ah	Carrier Recovery Status Register 2 – DCL Average Error (15:8)	N/A	R
3Bh	Carrier Recovery Status Register 3 – DCL Average Error (19:16)	N/A	R
3Ch	Carrier Recovery Status Register 4 – QAM DCL LF Accumulator Output (7:0)	N/A	R
3Dh	Carrier Recovery Status Register 5 – QAM DCL LF Accumulator Output (15:8)	N/A	R
3Eh	Carrier Recovery Status Register 6 – QAM DCL LF Accumulator Output (19:16)	N/A	R
3Fh-40h	Reserved		



SLEA064-MARCH 2007

Table 6-1. I²C Host Interface Registers (continued)

ADDRESS	REGISTER NAME	DEFAULT	R/W
41h	Forward Error Correction Status Register 1	N/A	R
42h	Reserved		
43h	Forward Error Correction Status Register 2 – FEC Segment Error Count (7:0)	N/A	R
44h	Forward Error Correction Status Register 3 – FEC Segment Error Count (11:8)	N/A	R
45h	Forward Error Correction Status Register 4	N/A	R
46h–4Eh	Reserved		
4Fh	GPIO Alternate Function Select Register	00h	R/W
50h	GPIO Output Data Register	00h	R/W
51h	GPIO Output Enable Register	FFh	R/W
52h	GPIO Input Data Register	00h	R
53h	MPEG Interface Output Enable Register 1	00h	R/W
54h	MPEG Interface Output Enable Register 2	00h	R/W
55h	Tuner Control Interface – I ² C Slave Device Address	00h	R/W
56h	Tuner Control Interface – Data Register 1	00h	R/W
57h	Tuner Control Interface – Data Register 2	00h	R/W
58h	Tuner Control Interface – Data Register 3	00h	R/W
59h	Tuner Control Interface – Data Register 4	00h	R/W
5Ah	Tuner Control Interface – Data Register 5	00h	R/W
5Bh	Tuner Control Interface – Data Register 6	00h	R/W
5Ch	Tuner Control Interface – Data Register 7	00h	R/W
5Dh	Tuner Control Interface – Data Register 8	00h	R/W
5Eh	Tuner Control Interface – Control and Status Register	00h	R/W
5Fh	Antenna Control Interface – Control and Status Register	00h	R/W
60h	Antenna Control Interface – Transmit Data Register 1	00h	R/W
61h	Antenna Control Interface – Transmit Data Register 2	00h	R/W
62h	Antenna Control Interface – Receive Data Register 1	00h	R/W
63h	Antenna Control Interface – Receive Data Register 2	00h	R/W
64h-6Fh	Reserved		
70h	Firmware ID – ROM Version	02h	R
71h	Firmware ID – RAM Major Version	00h	R
72h	Firmware ID – RAM Minor Version	00h	R
73h-7Fh	Reserved		
80h	Device ID LSB	00h	R
81h	Device ID MSB	99h	R
82h-EDh	Reserved		
EEh	Miscellaneous Control Register	00h	R/W
EFh-F8h	Reserved		
F9h	Software Interrupt Raw Status Register	00h	R
FAh	Reserved		
FBh	Software Interrupt Status Register	00h	R
FCh	Reserved		
FDh	Software Interrupt Mask Register	00h	R/W
FEh	Reserved		
FFh	Software Interrupt Clear Register	00h	W



6.2 I²C Register Definitions

6.2.1 Receiver Control Register 1 / Soft Reset

Any write to this register causes a soft reset, which puts the receiver back into signal acquisition, and enables any changes made to registers 01h to 22h. Recommend performing soft reset after channel change.

Address	00h							
Default	20h							
Bit	7	6	5	4	3	2	1	0
Mnemonic	RDNSEL	MPEGSEL	DCLKPS	BYSTPS	DERRPS	PCLKPS	DMC	SEL
Туре	R/W	R/W	R/W	R/W	R/W	R/W	R/W	
Default	0	0	1	0	0	0	00	

BIT	MNEMONIC	NAME	DESCRIPTION
7	RDNSEL	MPEG interface redundancy select	The MPEG interface redundancy select is used by the host processor to select the data with redundancy output mode. 0 = No redundancy (data only mode) selected (default) 1 = Data with redundancy mode selected
6	MPEGSEL	MPEG interface serial output select	The MPEG interface serial output select is used by the host processor to select the serial versus parallel output mode for the MPEG interface. 0 = 8-bit parallel data output mode selected (default) 1 = Serial data output mode selected
5	DCLKPS	MPEG interface data clock output polarity select	The MPEG interface data clock output polarity select is used by the host processor to select the polarity of the DCLK output pin. 0 = All MPEG interface output signals transition with respect to the rising edge of DCLK 1 = All MPEG interface output signals transition with respect to the falling edge of DCLK (default)
4	BYSTPS	MPEG interface byte start output polarity select	The MPEG interface byte start output polarity select is used by the host processor to select the polarity of the BYTESTART output pin. 0 = BYTESTART is active high (default) 1 = BYTESTART is active low
3	DERRPS	MPEG interface data error output polarity select	The MPEG interface data error output polarity select is used by the host processor to select the polarity of the DERROR output pin. 0 = DERROR is active high (default) 1 = DERROR is active low
2	PCLKPS	MPEG interface packet clock output polarity select	The MPEG interface packet clock output polarity select is used by the host processor to select the polarity of the PACCLK output pin. 0 = PACCLK is active high (default) 1 = PACCLK is active low
1:0	DMDSEL	VSB or QAM demodulation mode select	The VSB or QAM mode select bits are used by the host processor to select the demodulation type to be used by the TVP9900 receiver device. 00 = 8 VSB mode selected (default) 01 = Reserved 10 = 64 QAM mode selected 11 = 256 QAM mode selected



6.2.2 Receiver Control Register 2

A Soft Reset is required to enable any changes made to this register. A Soft Reset is initiated by writing to register 00h.

Address	01h							
Default	11h							
Bit	7	6	5	4	3	2	1	0
Mnemonic	Reserved	Reserved	IQSWAP	Reserved	DNF	CTRL	DAFBYP	Reserved
Туре	R	R	R	R/W	R/W		R/W	R/W
Default	0	0	0	1	C	00	0	1

BIT	MNEMONIC	NAME	DESCRIPTION
7:6	_	Reserved	Reserved for future use
5	IQSWAP	IQ swap	Timing recovery spectral shift 0 = Shift spectrum positive frequency (default) 1 = Shift spectrum negative frequency. For QAM mode, this bit swaps I and Q.
4	_	Reserved	Reserved for future use. Always set to 1.
3:2	DNFCTRL	NTSC detection circuit control	NTSC detection circuit control for VSB (always bypassed for QAM) 00 = Use detection circuit (default) 01 = Force bypass of NTSC filter 10 = Force insertion of NTSC filter 11 = Reserved
1	DAFBYP	Adjacent channel filter bypass	Adjacent channel filter bypass for VSB (always bypassed for QAM) 0 = Enable the adjacent channel filter (default) 1 = Bypass the adjacent channel filter
0	_	Reserved	Reserved for future use. Always set to 1.

6.2.3 VSB Control Register

A Soft Reset is required to enable any changes made to this register. A Soft Reset is initiated by writing to register 00h.

Address	03h							
Default	02h							
Bit	7	6	5	4	3	2	1	0
Mnemonic	Reserved	Reserved	Reserved	RSTDIS	Reserved	Reserved	Reserved	Reserved
Туре	R	R	R	R/W	R	R	R	R
Default	0	0	0	0	0	0	1	0

BIT	MNEMONIC	NAME	DESCRIPTION
7:5	_	Reserved	Reserved for future use
4	RSTDIS	Auto restart disable	Disable VSB automatic soft reset mode. 0 = Firmware automatically restarts acquisition when there are too many segment errors (default) 1 = Disable automatic restarts
3:0	_	Reserved	Reserved for future use. Always set to 2h.



6.2.4 AGC Control Register

A Soft Reset is required to enable any changes made to this register. A Soft Reset is initiated by writing to register 00h.

Address	04h							
Default	07h							
Bit	7	6	5	4	3	2	1	0
Mnemonic	Reserved	Reserved	Reserved	Reserved	Reserved	DAGINV	Rese	erved
Туре	R	R	R	R	R	R/W	R	
Default	0	0	0	0	0	1	11	

BIT	MNEMONIC NAME		DESCRIPTION
7:3	_	Reserved	Reserved for future use
2	DAGINV	AGC output signal invert select	The Automatic Gain Control output signal (AGCOUT) invert select bit is used by the host processor to change the polarity of the output signal. 0 = AGCOUT is non-inverted 1 = AGCOUT is inverted (default)
1:0	_	Reserved	Reserved for future use. Always set to 3h.

6.2.5 VSB FEC Time Counter Register 1

A Soft Reset is required to enable any changes made to this register. A Soft Reset is initiated by writing to register 00h.

Address	1Bh									
Default	BCh									
Bit	7	6	5	4	3	2	1	0		
Mnemonic				FCSFRSTIN	IECOUNT1					
Туре		R/W								
Default				0xl	3C					

BIT	MNEMONIC	NAME	DESCRIPTION				
7:0	FCSFRSTIMECOUNT1	VSB update interval count, bits (7:0)	Update interval count value (RS blocks) for segment error count; bits (7:0) of 24-bit value. The remaining bits are stored in registers 1Ch and 1Dh.				



6.2.6 VSB FEC Time Counter Register 2

A Soft Reset is required to enable any changes made to this register. A Soft Reset is initiated by writing to register 00h.

Address	1Ch							
Default	64h							
Bit	7	6	5	4	3	2	1	0
Mnemonic				FCSFRSTIM	IECOUNT2			
Туре				R/	W			
Default				0x6	64			

BIT	MNEMONIC	NAME	DESCRIPTION				
7:0	FCSFRSTIMECOUNT2	VSB update interval count, bits (15:8)	Update interval count value (RS blocks) for segment error count; bits (15:8) of 24-bit value				

6.2.7 VSB FEC Time Counter Register 3

A Soft Reset is required to enable any changes made to this register. A Soft Reset is initiated by writing to register 00h.

Address	1Dh							
Default	00h							
Bit	7	6	5	4	3	2	1	0
Mnemonic				FCSFRSTIM	IECOUNT3			
Туре				RΛ	N			
Default				0x0	00			

BIT	T MNEMONIC NAME		DESCRIPTION
7:0	FCSFRSTIMECOUNT3	VSB update interval count, bits (23:16)	Update interval count value (RS blocks) for segment error count; bits (23:16) of 24-bit value



6.2.8 QAM FEC Time Counter Register 1

A Soft Reset is required to enable any changes made to this register. A Soft Reset is initiated by writing to register 00h.

Address	1Eh								
Default	00h								
Bit	7	6	5	4	3	2	1	0	
Mnemonic				JCSJRSTI	MECOUNT1				
Туре		R/W							
Default				0>	(08				

BIT	MNEMONIC NAME		DESCRIPTION				
7:0	JCSJRSTIMECOUNT1		Update interval count value (RS blocks) for segment error count; bits (7:0) of 24-bit value. The remaining bits are stored in registers 1Fh and 20h.				

6.2.9 QAM FEC Time Counter Register 2

A Soft Reset is required to enable any changes made to this register. A Soft Reset is initiated by writing to register 00h.

Address	1Fh								
Default	08h								
Bit	7	6	5	4	3	2	1	0	
Mnemonic				JCSJRSTIN	MECOUNT2				
Туре		R/W							
Default				0x	08				

BIT	BIT MNEMONIC NAME		DESCRIPTION
7:0	JCSJRSTIMECOUNT2	QAM Update interval count, bits (15:8)	Update interval count value (RS blocks) for segment error count; bits (15:8) of 24-bit value

6.2.10 QAM FEC Time Counter Register 3

A Soft Reset is required to enable any changes made to this register. A Soft Reset is initiated by writing to register 00h.

Address	20h							
Default	00h							
Bit	7	6	5	4	3	2	1	0
Mnemonic				JCSJRSTIN	IECOUNT3			
Туре		R/W						
Default				0x	00			

BIT	MNEMONIC NAME		DESCRIPTION
7:0	JCSJRSTIMECOUNT3	QAM Update interval count, bits (23:16)	Update interval count value (RS blocks) for segment error count; bits (23:16) of 24-bit value



6.2.11 VSB FEC Segment Error Count Threshold Register 1

A Soft Reset is required to enable any changes made to this register. A Soft Reset is initiated by writing to register 00h.

Address	21h								
Default	05h								
Bit	7	6	5	4	3	2	1	0	
Mnemonic				UNCO	RRINT1				
Туре		R/W							
Default				0x	05				

BIT	MNEMONIC NAME		DESCRIPTION
7:0	UNCORRINT1		Segment error count threshold; bits (7:0) of a 12-bit value. The remaining bits are stored in register 22h.

6.2.12 VSB FEC Segment Error Count Threshold Register 2

A Soft Reset is required to enable any changes made to this register. A Soft Reset is initiated by writing to register 00h.

Address	22h							
Default	00h							
Bit	7	6	5	4	3	2	1	0
Mnemonic	Reserved	Reserved	Reserved	Reserved		UNCO	RRINT2	
Туре	R	R	R	R	R/W			
Default	0	0	0	0	0h			

BIT	MNEMONIC NAME		DESCRIPTION
7:4	Reserved	Reserved	Reserved for future use
3:0	UNCORRINT2	Segment error count threshold, bits (11:8)	Segment error count threshold; bits (11:8) of a 12-bit value

6.2.13 Update Status Control Register

-			3					
Address	25h							
Default	00h							
Bit	7	6	5	4	3	2	1	0
Mnemonic	Reserved	UPDATE						
Туре	R	R	R	R	R	R	R	R/W
Default	0	0	0	0	0	0	0	0

BIT	MNEMONIC NAME		DESCRIPTION		
7:1	_	Reserved	Reserved for future use		
0	UPDATE	Update status registers	Update all status registers (26h to 45h) Host writes a 1 to this bit to update all the status registers. Host should then read this bit until it reads 0; the status update is then complete, and it is safe to read any/all of the status registers.		





SLEA064-MARCH 2007

6.2.14 Receiver Status Register

Address	26h							
Bit	7	6	5	4	3	2	1	0
Mnemonic	Reserved	Rese	Reserved		ERRCNT	Reserved	SLCERR	FLDSYNC
Туре	R	F	₹	R	R	R	R	R
Default	0	N/A		N/A	N/A	N/A	N/A	N/A

BIT	MNEMONIC	NAME	DESCRIPTION			
7:4	_	Reserved	Reserved for future use			
3	ERRCNT	Reed Solomon segment error count status	Immediate RS segment error count threshold status bit 0 = RS segment error count is below threshold 1 = RS segment error count is above threshold			
2	_	Reserved	Reserved for future use			
1	SLCERR	Slicer error status	Immediate slicer error threshold status bit 0 = Slicer error is below threshold 1 = Slicer error is above threshold			
0	FLDSYNC	Field sync lock status	Immediate field sync lock status bit 0 = Field sync is lost 1 = Field sync is locked (not lost)			

6.2.15 AGC Status Register 1

Address	27h										
Bit	7	7 6 5 4 3 2 1 0									
Mnemonic	R										
Туре											
Default											


BIT	MNEMONIC	NAME	DESCRIPTION
7:0	DAGLFACC1STAT		Bits (7:0) of the 20-bit AGC loop filter accumulator output. The remaining bits are stored in registers 28h and 29h. These register values are updated by writing a 1 to register 25h, bit 0.

6.2.16 AGC Status Register 2

Address	28h									
Bit	7	6	5	4	3	2	1	0		
Mnemonic		DAGLFACC2STAT								
Туре		R								
Default		N/A								

BIT	MNEMONIC	NAME	DESCRIPTION
7:0	DAGLFACC2STAT	AGC accumulator output, bits (15:8)	Bits (15:8) of the 20-bit AGC loop filter accumulator output

VSB/QAM Receiver





6.2.17 AGC Status Register 3

Address	29h							
Bit	7	6	5	4	3	2	1	0
Mnemonic	Reserved	Reserved	Reserved	Reserved	DAGLFACC3STAT			
Туре	R	R	R	R	R			
Default	0	0	0	0	N/A			

BIT	MNEMONIC	NAME	DESCRIPTION		
7:4	_	Reserved	Reserved for future use		
3:0	DAGLFACC3STAT	AGC accumulator output, bits (19:16)	Bits (19:16) of the 20-bit AGC loop filter accumulator output		

6.2.18 NTSC Rejection Filter Status Register

			_					
Address	2Ah							
Bit	7	6	5	4	3	2	1	0
Mnemonic	Reserved	DNFDETECT						
Туре	R	R	R	R	R	R	R	R
Default	0	0	0	0	0	0	0	N/A

BIT	MNEMONIC	NAME	DESCRIPTION
7:1	_	Reserved	Reserved for future use
0	DNFDETECT	NIISC detection circuit	NTSC detection circuit status 0 = NTSC is NOT detected 1 = NTSC is detected

6.2.19 Timing Recovery Status Register 1

Address	2Bh									
Bit	7	6	5	4	3	2	1	0		
Mnemonic				DTRLFAC	CC1STAT					
Туре		R								
Default				N	/A					

BIT	MNEMONIC	NAME	DESCRIPTION		
7:0	DTRLFACC1STAT		Bits (7:0) of the 44-bit timing recovery loop filter accumulator output. The remaining bits are stored in registers 2Ch to 30h. These register values are updated by writing a 1 to register 25h, bit 0.		

6.2.20 Timing Recovery Status Register 2

Address	2Ch								
Bit	7	6	5	4	3	2	1	0	
Mnemonic				DTRLFAC	CC2STAT				
Туре				F	₹				
Default		N/A							

BIT	MNEMONIC	NAME	DESCRIPTION
7:0	DTRLFACC2STAT	Timing recovery accumulator output, bits (15:8)	Bits (15:8) of the 44-bit timing recovery loop filter accumulator output



6.2.21 Timing Recovery Status Register 3

Address	2Dh									
Bit	7	6	5	4	3	2	1	0		
Mnemonic				DTRLFAC	CC3STAT					
Туре		R								
Default				N,	/A					

BIT	MNEMONIC	NAME	DESCRIPTION
7:0	DTRLFACC3STAT	Timing recovery accumulator output, bits (23:16)	Bits (23:16) of the 44-bit timing recovery loop filter accumulator output

6.2.22 Timing Recovery Status Register 4

Address	2Eh									
Bit	7	6	5	4	3	2	1	0		
Mnemonic		DTRLFACC4STAT								
Туре		R								
Default				N.	/A					

BIT	MNEMONIC	NAME	DESCRIPTION
7:0	DTRLFACC4STAT	Timing recovery accumulator output, bits (31:24)	Bits (31:24) of the 44-bit timing recovery loop filter accumulator output

6.2.23 Timing Recovery Status Register 5

Address	2Fh								
Bit	7	6	5	4	3	2	1	0	
Mnemonic				DTRLFAC	C5STAT				
Туре		R							
Default				N	Ά				

BIT	MNEMONIC	NAME	DESCRIPTION
7:0	DTRLFACC5STAT	Timing recovery accumulator output, bits (39:32)	Bits (39:32) of the 44-bit timing recovery loop filter accumulator output

6.2.24 Timing Recovery Status Register 6

		<u> </u>	<u> </u>					
Address	30h							
Bit	7	6	5	4	3	2	1	0
Mnemonic	Reserved	Reserved	Reserved	Reserved		DTRLFA	CC6STAT	
Туре	R	R	R	R			R	
Default	0	0	0	0		Ν	I/A	

BIT	MNEMONIC	NAME	DESCRIPTION
7:4	_	Reserved	Reserved for future use
3:0	DTRLFACC6STAT	Timing recovery accumulator output, bits (43:40)	Bits (43:40) of the 44-bit timing recovery loop filter accumulator output



6.2.25 Pilot Tracking Status Register 1

Address	34h							
Bit	7	6	5	4	3	2	1	0
Mnemonic	<u> </u>	DPTLFACC1STAT						
Туре		R						
Default				N/	Ά			

BIT	MNEMONIC	NAME	DESCRIPTION
7:0	DPTLFACC1STAT	Pilot tracking accumulator output, bits (7:0)	Bits (7:0) of the 20-bit pilot tracking loop filter accumulator output. The remaining bits are stored in registers 35h and 36h. These register values are updated by writing a 1 to register 25h, bit 0.

6.2.26 Pilot Tracking Status Register 2

Address	35h							
Bit	7	6	5	4	3	2	1	0
Mnemonic		DPTLFACC2STAT						
Туре		R						
Default				N	/A			

BIT	MNEMONIC	NAME	DESCRIPTION
7:0	DPTLFACC2STAT	Pilot tracking accumulator output, bits (15:8)	Bits (15:8) of the 20-bit pilot tracking loop filter accumulator output

6.2.27 Pilot Tracking Status Register 3

Address	36h							
Bit	7	6	5	4	3	2	1	0
Mnemonic	Reserved	Reserved	Reserved	Reserved		DPTLFA	CC3STAT	
Туре	R	R	R	R		1	R	
Default	0	0	0	0		N	I/A	

BIT	MNEMONIC	NAME	DESCRIPTION
7:4	_	Reserved	Reserved for future use
3:0	DPTLFACC3STAT	Pilot tracking accumulator output, bits (19:16)	Bits (19:16) of the 20-bit pilot tracking loop filter accumulator output

6.2.28 Carrier Recovery Status Register 1

Address	39h		_					
Bit	7	6	5	4	3	2	1	0
Mnemonic				DCLAVGE	RR1STAT			
Туре		R						
Default				N	/A			

BIT	MNEMONIC	NAME	DESCRIPTION
7:0	DCLAVGERR1ST AT	/7:0\	Bits (7:0) of the 20-bit DCL average error (derotator SNR) value. The remaining bits are stored in registers 3Ah and 3Bh. These register values are updated by writing a 1 to register 25h, bit 0.





6.2.29 Carrier Recovery Status Register 2

Address	3Ah							
Bit	7	6	5	4	3	2	1	0
Mnemonic		DCLAVGERR2STAT DCLAVGERR2STAT						
Туре		R						
Default				N.	/A			

BIT	MNEMONIC	NAME	DESCRIPTION
7:0	DCLAVGERR2ST AT	DCL average error, bits (15:8)	Bits (15:8) of the 20-bit DCL average error (derotator SNR) value

6.2.30 Carrier Recovery Status Register 3

Address	3Bh							
Bit	7	6	5	4	3	2	1	0
Mnemonic	Reserved	Reserved	Reserved	Reserved		DCLAVGE	RR3STAT	
Туре	R	R	R	R		F	₹	
Default	0	0	0	0		N	/A	

BIT	MNEMONIC	NAME	DESCRIPTION
7:4	_	Reserved	Reserved for future use
3:0	DCLAVGERR3ST AT	DCL average error, bits (19:16)	Bits (19:16) of the 20-bit DCL average error (derotator SNR) value

6.2.31 Carrier Recovery Status Register 4

Address	3Ch							
Bit	7	6	5	4	3	2	1	0
Mnemonic		DCLLFACC1STAT						
Туре		R						
Default				N.	/A			

BIT	MNEMONIC	NAME	DESCRIPTION
7:0		QAM DCL loop filter accumulator output, bits (7:0)	Bits (7:0) of the 20-bit DCL loop filter accumulator output for QAM. The remaining bits are stored in registers 3Dh and 3Eh. These register values are updated by writing a 1 to register 25h, bit 0.

6.2.32 Carrier Recovery Status Register 5

Address	3Dh							
Bit	7	6	5	4	3	2	1	0
Mnemonic		DCLLFACC2STAT						
Туре		R						
Default	N/A							

BIT	MNEMONIC	NAME	DESCRIPTION
7:0	DCLLFACC2STAT	QAM DCL loop filter accumulator output, bits (15:8)	Bits (15:8) of the 20-bit DCL loop filter accumulator output for QAM.

VSB/QAM Receiver





6.2.33 Carrier Recovery Status Register 6

Address	3Eh							
Bit	7	6	5	4	3	2	1	0
Mnemonic	Reserved	Reserved	Reserved	Reserved		DCLLFAG	CC3STAT	
Туре	R	R	R	R		F	₹	
Default	0	0	0	0		N	/A	

BIT	MNEMONIC	NAME	DESCRIPTION			
7:4	_	Reserved	Reserved for future use			
3:0	DCLLFACC3STAT	QAM DCL loop filter accumulator output, bits (19:16)	Bits (19:16) of the 20-bit DCL loop filter accumulator output for QAM.			

6.2.34 FEC Status Register 1

6.2.34.1 VSB Mode

Address	41h							
Bit	7	6	5	4	3	2	1	0
Mnemonic		FECSADDR1						
Туре		R						
Default				N/	A			

BIT	MNEMONIC	NAME	DESCRIPTION		
7:2		Reserved	Reserved for future use		
1:0	FECSADDR1		FEC synchronizer status bits 00 = Searching for sync (data not valid) 01 = Locked sync (data valid) 10 = Reserved 11 = Sync lost (data not valid)		

6.2.34.2 QAM Mode

Address	41h							
Bit	7	6	5	4	3	2	1	0
Mnemonic				FECSA	ADDR1			
Туре		R						
Default				N.	/A			

BIT	MNEMONIC	NAME	DESCRIPTION
7:6		Trellis sync status	Trellis sync status bits 00 = Sync locked, error under threshold 01 = Reserved 10 = Sync locked, error above threshold 11 = Hunting for sync
5:2	FECSADDR1	Current deinterleaver control work value	Current deinterleaver control work value
1:0		FEC synchronizer status	FEC synchronizer status bits 00 = Searching for sync (data not valid) 01 = Locked sync (data valid) 10 = Reserved 11 = Sync lost (data not valid)





SLEA064-MARCH 2007

6.2.35 FEC Status Register 2

Address	43h							
Bit	7	6	5	4	3	2	1	0
Mnemonic		FECSADDR2						
Туре		R						
Default				N	/A			

BIT	MNEMONIC	NAME	DESCRIPTION
7:0	FECSADDR2	FEC segment error count, bits (7:0)	Bits (7:0) of the 12-bit FEC segment error count value. Bits (11:8) are stored in register 44h, bits (7:4). These register values are updated by writing a 1 to register 25h, bit 0.

6.2.36 FEC Status Register 3

Address	44h							
Bit	7	6	5	4	3	2	1	0
Mnemonic				FECSA	ADDR3			
Туре		R						
Default		N/A						

BIT	MNEMONIC	NAME	DESCRIPTION
7:4	FECSADDR3	FEC segment error count, bits (11:8)	Bits (11:8) of the 12-bit FEC segment error count value
3:0		Reserved	Reserved for future use

6.2.37 FEC Status Register 4

6.2.37.1 VSB Mode

Address	45h							
Bit	7	6	5	4	3	2	1	0
Mnemonic				FECSA	ADDR4			
Туре		R						
Default				N	/A			

BIT	MNEMONIC	NAME	DESCRIPTION
7:0	FECSADDR4	Reserved	Reserved for future use

6.2.37.2 QAM Mode

Address	45h							
Bit	7	6	5	4	3	2	1	0
Mnemonic		FECSADDR4						
Туре				F	र			
Default		N/A						

BIT	MNEMONIC	NAME	DESCRIPTION
7:5		Reserved	Reserved for future use
4	FECSADDR4	Deframer synchronization	Deframer synchronization 0 = Sync not locked 1 = Sync locked
3:0		Frame error maximum	Maximum number of frame errors encountered



6.2.38 GPIO Alternate Function Select Register

				9				
Address	4Fh							
Default	00h							
Bit	7	6	5	4	3	2	1	0
Mnemonic	GPIO7FS	GPIO6FS	Reserved	Reserved	Reserved	Reserved	Reserved	Reserved
Туре	R/W	R/W	R	R	R	R	R	R
Default	0	0	0	0	0	0	0	0

BIT	MNEMONIC	NAME	DESCRIPTION
7	GPIO7FS	GPIO bit 7 function select	The GPIO bit 7 function select bit is used by the host processor to select the alternate function of the GPIO7 device pin. 0 = Configures the GPIO7 pin as General Purpose IO bit 7 (default). 1 = Configures the GPIO7 pin as the host processor INTREQ output.
6	GPIO6FS	GPIO bit 6 and GPIO bit 5 function select	The GPIO bit 6 and GPIO bit 5 function select bit is used by the host processor to select the alternate function for both the GPIO6 and GPIO5 device pins. 0 = Configures the GPIO6 pin as General Purpose IO bit 6 and GPIO5 pin as General Purpose IO bit 5 (default). 1 = Configures the GPIO5 pin as the SYNCOUT output. The GPIO6 pin is reserved.
5:2	_	Reserved	Reserved for future use
1	_	Reserved	NOTE: The GPIO1 pin is dedicated to Smart Antenna support. This pin outputs the direction of the signal on pin 29 in Smart Antenna 1-pin mode (see register 5Fh, bit 0). If GPIO1 = 0, signal input from antenna to TVP9900 pin 29 If GPIO1 = 1, signal output from TVP9900 pin 29 to antenna
0	_	Reserved	NOTE: The GPIO0 pin has an alternate function, which is the Antenna Control Interface input (ANTCNTLIN) when 2-pin mode is selected for this interface. See the Antenna Control Interface Control and Status Register (5Fh), bit 0 (pin mode select), for information on how to select this alternate function.

6.2.39 GPIO Output Data Register

Address	50h							
Default	00h							
Bit	7	6	5	4	3	2	1	0
Mnemonic	GPDO7	GPDO6	GPDO5	GPDO4	GPDO3	GPDO2	Reserved	GPDO0
Туре	R/W	R/W						
Default	0	0	0	0	0	0	0	0

BIT	MNEMONIC	NAME	DESCRIPTION
7	GPDO7	General purpose data output bit 7	General purpose data output bit 7 is used by the host processor to set the data value on the GPIO7 device pin.
6	GPDO6	General purpose data output bit 6	General purpose data output bit 6 is used by the host processor to set the data value on the GPIO6 device pin.
5	GPDO5	General purpose data output bit 5	General purpose data output bit 5 is used by the host processor to set the data value on the GPIO5 device pin.
4	GPDO4	General purpose data output bit 4	General purpose data output bit 4 is used by the host processor to set the data value on the GPIO4 device pin.
3	GPDO3	General purpose data output bit 3	General purpose data output bit 3 is used by the host processor to set the data value on the GPIO3 device pin.
2	GPDO2	General purpose data output bit 2	General purpose data output bit 2 is used by the host processor to set the data value on the GPIO2 device pin.
1	_	Reserved	Reserved for future use
0	GPDO0	General purpose data output bit 0	General purpose data output bit 0 is used by the host processor to set the data value on the GPIO0 device pin.



6.2.40 GPIO Output Enable Register

			•					
Address	51h							
Default	FFh							
Bit	7	6	5	4	3	2	1	0
Mnemonic	GPIO7OE	GPIO6OE	GPIO5OE	GPIO4OE	GPIO3OE	GPIO2OE	Reserved	GPIO00E
Туре	R/W	R/W						
Default	1	1	1	1	1	1	1	1

BIT	MNEMONIC	NAME	DESCRIPTION
7	GPIO7OE	General purpose IO bit 7 output enable	General purpose IO bit 7 output enable is used by the host processor to configure the GPIO7 device pin as either an input or output. 0 = Configures GPIO7 as an output 1 = Configures GPIO7 as an input (default)
6	GPIO6OE	General purpose IO bit 6 output enable	General purpose IO bit 6 output enable is used by the host processor to configure the GPIO6 device pin as either an input or output. 0 = Configures GPIO6 as an output 1 = Configures GPIO6 as an input (default)
5	GPIO5OE	General purpose IO bit 5 output enable	General purpose IO bit 5 output enable is used by the host processor to configure the GPIO5 device pin as either an input or output. 0 = Configures GPIO5 as an output 1 = Configures GPIO5 as an input (default)
4	GPIO4OE	General purpose IO bit 4 output enable	General purpose IO bit 4 output enable is used by the host processor to configure the GPIO4 device pin as either an input or output. 0 = Configures GPIO4 as an output 1 = Configures GPIO4 as an input (default)
3	GPIO3OE	General purpose IO bit 3 output enable	General purpose IO bit 3 output enable is used by the host processor to configure the GPIO3 device pin as either an input or output. 0 = Configures GPIO3 as an output 1 = Configures GPIO3 as an input (default)
2	GPIO2OE General purpose IO bit 2 output enable		General purpose IO bit 2 output enable is used by the host processor to configure the GPIO2 device pin as either an input or output. 0 = Configures GPIO2 as an output 1 = Configures GPIO2 as an input (default)
1	_	Reserved	Reserved for future use
0	GPIO00E	General purpose IO bit 0 output enable	General purpose IO bit 0 output enable is used by the host processor to configure the GPIO0 device pin as either an input or output. 0 = Configures GPIO0 as an output 1 = Configures GPIO0 as an input (default)

6.2.41 GPIO Input Data Register

Address	52h							
Default	00h							
Bit	7	6	5	4	3	2	1	0
Mnemonic	GPDI7	GPDI7	GPDI7	GPDI7	GPDI7	GPDI7	Reserved	GPDI7
Туре	R	R	R	R	R	R	R	R
Default	0	0	0	0	0	0	0	0

BIT	MNEMONIC	NAME	DESCRIPTION		
7	GPDI7	General purpose data input bit 7	General purpose data input bit 7 is used by the host processor to read the data value on the GPIO7 device pin.		
6	GPDI6	General purpose data input bit 6	General purpose data input bit 6 is used by the host processor to read the data value on the GPIO6 device pin.		
5	GPDI5	General purpose data input bit 5	General purpose data input bit 5 is used by the host processor to read the data value on the GPIO5 device pin.		
4	GPDI4	General purpose data input bit 4	General purpose data input bit 4 is used by the host processor to read the data value on the GPIO4 device pin.		

VSB/QAM Receiver





BIT	MNEMONIC	NAME	DESCRIPTION					
3	GPDI3 General purpose data input bit 3		General purpose data input bit 3 is used by the host processor to read the data value on the GPIO3 device pin.					
2	GPDI2	General purpose data input bit 2	General purpose data input bit 2 is used by the host processor to read the data value on the GPIO2 device pin.					
1	_	Reserved	Reserved for future use					
0	GPDI0	General purpose data input bit 0	General purpose data input bit 0 is used by the host processor to read the data value on the GPIO0 device pin.					

6.2.42 MPEG Interface Output Enable Register 1

Address	53h							
Default	00h							
Bit	7	6	5	4	3	2	1	0
Mnemonic	DO7OE	DO6OE	DO5OE	DO4OE	DO3OE	DO2OE	DO10E	DO0OE
Туре	R/W							
Default	0	0	0	0	0	0	0	0

BIT	MNEMONIC	NAME	DESCRIPTION
7	DO7OE	MPEG data output bit 7 output enable	MPEG data output bit 7 output enable is used by the host processor to enable the output. After power-on reset, the output is disabled. 0 = Output is disabled (default) 1 = Output is enabled
6	DO6OE	MPEG data output bit 6 output enable	MPEG data output bit 6 output enable is used by the host processor to enable the output. After power-on reset, the output is disabled. 0 = Output is disabled (default) 1 = Output is enabled
5	DO5OE	MPEG data output bit 5 output enable	MPEG data output bit 5 output enable is used by the host processor to enable the output. After power-on reset, the output is disabled. 0 = Output is disabled (default) 1 = Output is enabled
4	DO4OE	MPEG data output bit 4 output enable	MPEG data output bit 4 output enable is used by the host processor to enable the output. After power-on reset, the output is disabled. 0 = Output is disabled (default) 1 = Output is enabled
3	DO3OE	MPEG data output bit 3 output enable	MPEG data output bit 3 output enable is used by the host processor to enable the output. After power-on reset, the output is disabled. 0 = Output is disabled (default) 1 = Output is enabled
2	DO2OE	MPEG data output bit 2 output enable	MPEG data output bit 2 output enable is used by the host processor to enable the output. After power-on reset, the output is disabled. 0 = Output is disabled (default) 1 = Output is enabled
1	DO10E	MPEG data output bit 1 output enable	MPEG data output bit 1 output enable is used by the host processor to enable the output. After power-on reset, the output is disabled. 0 = Output is disabled (default) 1 = Output is enabled
0	DO00E	MPEG data output bit 0 output enable	MPEG data output bit 0 output enable is used by the host processor to enable the output. After power-on reset, the output is disabled. 0 = Output is disabled (default) 1 = Output is enabled



SLEA064-MARCH 2007

6.2.43 MPEG Interface Output Enable Register 2

Address	54h							
Default	00h							
Bit	7	6	5	4	3	2	1	0
Mnemonic	Reserved	Reserved	Reserved	Reserved	Reserved	Reserved	SYNCSOE	DCLKOE
Туре	R	R	R	R	R	R	R/W	R/W
Default	0	0	0	0	0	0	0	0

BIT	MNEMONIC	NAME	DESCRIPTION
7:2	_	Reserved	Reserved for future use
1	SYNCSOE	MPEG sync signals output enable	MPEG sync signals output enable is used by the host processor to enable the MPEG interface sync signals, which are packet clock (PACCLK), byte start (BYTESTART) and data error (DERROR). After power-on reset, the outputs are disabled. 0 = Outputs are disabled (default) 1 = Outputs are enabled
0	DCLKOE	MPEG data clock output enable	MPEG data clock output enable is used by the host processor to enable the clock output. After power-on reset, the output is disabled. 0 = Output is disabled (default) 1 = Output is enabled

6.2.44 Tuner Control Interface – FC Slave Device Address Register

The I²C slave device address register contains the 7-bit I²C slave device address and the read/write transaction control bit to be used for the tuner device.

Address	55h							
Default	00h							
Bit	7	6	5	4	3	2	1	0
Mnemonic	A6	A5	A4	А3	A2	A1	A0	RW
Туре	R/W							
Default	0	0	0	0	0	0	0	0

BIT	MNEMONIC	NAME	DESCRIPTION
7:1	A(6:0)	Slave device address	The slave device address bits are set by the host processor with the 7-bit I ² C slave address of the Tuner device to be accessed.
0	RW	Read/write control	The read/write control bit value is set by the host processor to program the type of Tuner Control Interface I ² C transaction to be done. 1 = Read transaction 0 = Write transaction (default)

6.2.45 Tuner Control Interface – Data Register 1 Through 8

Address	56h to 5Dh							
Default	00h							
Bit	7	6	5	4	3	2	1	0
Mnemonic	D7	D6	D5	D4	D3	D2	D1	D0
Туре	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0	0	0	0

BIT	MNEMONIC	NAME	DESCRIPTION
7:0	D(7:0)	Data (7:0)	Data register 1 through data register 8 contain the data bytes to be sent to the tuner for a write transaction or the data bytes received from the tuner for a read transaction. The data byte contained in data register 1 (56h) shall be the first byte sent to or read from the tuner.



6.2.46 Tuner Control Interface – Control and Status Register

Address	5Eh							
Default	00h							
Bit	7	6	5	4	3	2	1	0
Mnemonic	BCNT2	BCNT2	BCNT2	Reserved	Reserved	START	Reserved	MODE
Туре	R/W	R/W	R/W	R	R	R/W	R	R/W
Default	0	0	0	0	0	0	0	0

BIT	MNEMONIC	NAME	DESCRIPTION
7:5	BCNT(2:0)	Byte count	The byte count is used by the host processor to set the number of data bytes to be transferred to/from the tuner device. The byte count should not include the tuner I ² C slave address byte. 000b = 1 byte, 001b = 2 bytes,, 110b = 7 bytes, 111b = 8 bytes
4:3	_	Reserved	Reserved for future use
2	START	Transaction start	The transaction start bit is set to 1 by the host processor to indicate to the MCU to start the transaction to the tuner. The MCU clears this bit at the end of the transaction.
1	_	Reserved	Reserved for future use
0	MODE	I ² C mode	The mode bit is used by the host processor to set the I ² C transfer mode and rate. 0 = Standard mode and 100-kbps transfer rate (default) 1 = Fast mode and 400-kbps transfer rate

6.2.47 Antenna Control Interface – Control and Status Register

Address	5Fh							
Default	00h							
Bit	7	6	5	4	3	2	1	0
Mnemonic	Reserved	Reserved	RXERR	MODE	TXSTART	TXRXSEL	TXDINV	PINSEL
Туре	R	R/W	R/W	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0	0	0	0

BIT	MNEMONIC	NAME	DESCRIPTION
7:6	_	Reserved	Reserved for future use
5	RXERR	Receive data error	The receive data error bit is set to 1 by the MCU to indicate an error occurred when receiving data from a mode B antenna. The MCU clears this bit at the beginning of the next transaction.
4	MODE	Auto receive mode	The auto receive mode bit is set to 1 by the host processor to enable the antenna control interface logic to automatically set-up the receive mode after a transmit data transaction.
3	TXSTART	Transmit start	This bit is set to 1 by the host processor to start the transmit data transaction to the antenna. The MCU clears this bit when the transaction is complete.
2	TXRXSEL	Transmit/receive select	This bit is used by the host processor to select the next type of transaction to be done by the antenna control interface. In manual mode, the host processor controls this bit. In auto receive mode, the host processor sets this bit to 1 for the transmit data transaction, and the MCU sets this bit to 0 after the completion of the transmit transaction to enable the receive transaction. 0 = Receive data transaction 1 = Transmit data transaction
1	TXDINV	Transmit data polarity	The transmit data polarity bit is set to 1 by the host processor to invert the transmit data output. 0 = Normal polarity in conformance with CEA909 1 = Invert the transmit data output





VSB/QAM Receiver SLEA064-MARCH 2007

BIT	MNEMONIC	NAME	DESCRIPTION
0	PINSEL	Pin mode select	The pin mode select bit is used by the host processor to select the antenna control interface pin configuration. Before the 2-pin mode is selected, the GPIO0 pin must be configured as an input in register 51h, bit 0. 0 = 2-pin mode (separate input and output pins are used, input = pin 72, output = pin 29) (default) 1 = 1-pin mode (one bidirectional pin is used, pin 29)

6.2.48 Antenna Control Interface - Transmit Data Register 1

Address	60h							
Default	00h							
Bit	7	6	5	4	3	2	1	0
Mnemonic	TXD7	TXD6	TXD5	TXD4	TXD3	TXD2	TXD1	TXD0
Туре	R/W							
Default	0	0	0	0	0	0	0	0

BIT	MNEMONIC	NAME	DESCRIPTION
7:0	TXD(7:0)	Transmit data (7:0)	The least significant 8 bits of the 14-bit data word to be transmitted to the antenna. Bits (13:8) are stored in register 61h, bits (5:0). The data word is set by the host processor.

6.2.49 Antenna Control Interface – Transmit Data Register 2

Address	61h							
Default	00h							
Bit	7	6	5	4	3	2	1	0
Mnemonic	Reserved	Reserved	TXD13	TXD12	TXD11	TXD10	TXD9	TXD8
Туре	R	R	R/W	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0	0	0	0


BIT	MNEMONIC	NAME	DESCRIPTION
7:6	_	Reserved	Reserved for future use
5:0	TXD(13:8)	Transmit data (13:8)	The most significant 6 bits of the 14-bit data word to be transmitted to the antenna. The data word is set by the host processor.

6.2.50 Antenna Control Interface – Receive Data Register 1

Address	62h							
Default	00h							
Bit	7	6	5	4	3	2	1	0
Mnemonic	RXD7	RXD6	RXD5	RXD4	RXD3	RXD2	RXD1	RXD0
Туре	R/W							
Default	0	0	0	0	0	0	0	0

BIT	MNEMONIC	NAME	DESCRIPTION
7:0	RXD(7:0)	Receive data (7:0)	The least significant 8-bits of the 10-bit program code received from a mode B antenna. Bits (9:8) are stored in register 63h, bits (1:0).

VSB/QAM Receiver





6.2.51 Antenna Control Interface – Receive Data Register 2

					•			
Address	63h							
Default	00h							
Bit	7	6	5	4	3	2	1	0
Mnemonic	Reserved	Reserved	Reserved	Reserved	Reserved	Reserved	RXD9	RXD8
Туре	R	R	R	R	R	R	R/W	R/W
Default	0	0	0	0	0	0	0	0

BIT	MNEMONIC NAME		DESCRIPTION		
7:2	Reserved		Reserved for future use		
1:0	RXD(9:8)	Receive data (9:8)	The most significant 2 bits of the 10-bit program code received from a mode B antenna.		

6.2.52 Firmware ID – ROM Version Register

Address	70h							
Default	02h							
Bit	7	6	5	4	3	2	1	0
Mnemonic				ROM	VER			
Туре		R						
Default		0x02						

BIT	MNEMONIC	NAME	DESCRIPTION
7:0	ROMVER	ROM version	Version identification for ROM code

6.2.53 Firmware ID - RAM Major Version Register

Address	71h							
Default	00h							
Bit	7	6	5	4	3	2	1	0
Mnemonic				RAM1	VER			
Туре				R				
Default				0x0	00			

BIT	MNEMONIC	NAME	DESCRIPTION
7:0	RAM1VER	Major RAM version	Major version identification for RAM code

6.2.54 Firmware ID – RAM Minor Version Register

Address	72h							
Default	00h							
Bit	7	6	5	4	3	2	1	0
Mnemonic		RAM2VER						
Туре		R						
Default		0x00						

BIT	MNEMONIC	NAME	DESCRIPTION
7:0	RAM2VER	Minor RAM version	Minor version identification for RAM code

SLEA064-MARCH 2007

6.2.55 Device ID LSB Register

Address	80h	-						
Default	00h							
Bit	7	6	5	4	3	2	1	0
Mnemonic				DEV	/ID1			
Туре		R						
Default		0x00						

BIT	MNEMONIC	NAME	DESCRIPTION
7:0	DEVID1	Device ID LSB	The LSB of the device ID

6.2.56 Device ID MSB Register

Address	81h							
Default	99h							
Bit	7	6	5	4	3	2	1	0
Mnemonic				DEV	ID2			
Туре		R						
Default				0x:	99			

В	IT	MNEMONIC	NAME	DESCRIPTION
7:	:0	DEVID2	Device ID MSB	The MSB of the device ID

6.2.57 Miscellaneous Control Register

			•					
Address	EEh							
Default	00h							
Bit	7	6	5	4	3	2	1	0
Mnemonic	Reserved	Reserved	Reserved	Reserved	Reserved	INTRQPS	MCUMDE	MCURST
Туре	R	R	R	R	R	R/W	R/W	R/W
Default	0	0	0	0	0	0	0	0

BIT	MNEMONIC	NAME	DESCRIPTION
7:3	_	Reserved	Reserved for future use
2	INTRQPS	Interrupt request pin polarity select	The interrupt request pin polarity select bit is used by the host processor to select either an active low or active high INTREQ output. Note that when active low is selected, the output goes tri-state when inactive (not driven high). Hence a pullup resistor needs to be used on the PCB. This is done so interrupt request sources from multiple ICs can be wired together. 0 = INTREQ output pin is active low (default) 1 = INTREQ output pin is active high
1	MCUMDE	MCU memory mode	The MCU memory mode is used by the host processor to select ROM or RAM as the code memory for the internal TVP9900 MCU. 0 = MCU executes from ROM (default) 1 = MCU executes from RAM
0	MCURST	MCU reset	The MCU reset bit is used by the host processor to do a soft reset of the internal TVP9900 MCU. 0 = MCU not in reset mode (default) 1 = MCU in reset mode



6.2.58 Software Interrupt Raw Status Register

The raw status bits in this register are cleared by the host processor by writing a 1 to the corresponding bit in the Software Interrupt Clear Register (FFh). The intended use of the raw status registers is for events to be monitored by the host processor via polling instead of interrupt driven.

Address	F9h							
Default	00h							
Bit	7	6	5	4	3	2	1	0
Mnemonic	Reserved	Reserved	ACIRXCT	ACITXCT	ACIRXTO	Reserved	TCIERROR	TCIDONE
Туре	R	R	R	R	R	R	R	R
Default	0	0	0	0	0	0	0	0

BIT	MNEMONIC	NAME	DESCRIPTION
7:6	_	Reserved	Reserved for future use
5	ACIRXCT	Antenna Control Interface receive transaction complete	The Antenna Control Interface receive transaction complete raw status bit is set to 1 by the MCU when the receive transaction from a mode B antenna is complete. This means an entire 10-bit data word was received. If an incomplete receive transaction (less than 10-bits) occurs, then this bit is not set; instead the ACIRXTO (bit 3) occurs. After the receive transaction is complete, the host processor should also check the receive data error status bit (RXERR) in the Antenna Control Interface Control and Status Register (5Fh) to ensure that an error was not detected while receiving the data.
4	ACITXCT	Antenna Control Interface transmit transaction complete	The Antenna Control Interface transmit transaction complete raw status bit is set to 1 by the MCU when the transmit transaction to the antenna is complete.
3	ACIRXTO	Antenna Control Interface receive timeout	The Antenna Control Interface receive timeout raw status bit is set to 1 by the MCU when the 100-ms timeout has occurred. If a 100-ms timeout occurs, then the antenna either did not reply to the transmit transaction (it is a mode A antenna) or an incomplete (less than 10-bits) receive transaction occurred. If an incomplete transaction occurred, then the receive error status bit (RXERR) in the Antenna Control Interface Control and Status Register (5Fh) is also set.
2	_	Reserved	Reserved for future use
1	TCIERROR	Tuner Control Interface transaction error	The Tuner Control Interface transaction error raw status bit is set to 1 by the MCU to indicate to the host processor that the tuner device did not respond to the I ² C transaction or that a NO ACK was received from the tuner when an ACK was expected.
0	TCIDONE	Tuner Control Interface transaction done	The Tuner Control Interface transaction done raw status bit is set to 1 by the MCU at the end of a normal transaction to indicate to the host processor that the tuner I ² C transaction completed successfully. If an error occurs during a transaction to the tuner, the MCU does not set this bit to 1.

6.2.59 Software Interrupt Status Register

The status bits in this register are the result of the logical AND of the corresponding raw status bits and mask bits. A status bit is also automatically cleared when the corresponding raw status bit is cleared. Unmasked status bits in this register assert the host processor interrupt request output pin, INTREQ, of the TVP9900 when the status bit is set to 1. All unmasked hardware and software status bits are ORed together to drive the INTREQ output pin.

Address	FBh							
Default	00h							
Bit	7	6	5	4	3	2	1	0
Mnemonic	Reserved	Reserved	ACIRXCT	ACITXCT	ACIRXTO	Reserved	TCIERROR	TCIDONE
Туре	R	R	R	R	R	R	R	R
Default	0	0	0	0	0	0	0	0



ВІТ	MNEMONIC	NAME	DESCRIPTION
7:6	_	Reserved	Reserved for future use
5	ACIRXCT	Antenna Control Interface receive transaction complete	The Antenna Control Interface receive complete status bit is set to 1 (if unmasked) when the receive transaction from a mode B antenna is complete and the bit is unmasked.
4	ACITXCT	Antenna Control Interface transmit transaction complete	The Antenna Control Interface transmit complete status bit is set to 1 (if unmasked) when the transmit transaction to the antenna is complete and the bit is unmasked.
3	ACIRXTO	Antenna Control Interface receive timeout	The Antenna Control Interface receive timeout status bit is set to 1 (if unmasked) when the 100-ms timeout has occurred and the bit is unmasked.
2	_	Reserved	Reserved for future use
1	TCIERROR	Tuner Control Interface transaction error	The Tuner Control Interface transaction error status bit is set to 1 (if unmasked) to indicate to the host processor that the tuner device did not respond to the I ² C transaction or that a NO ACK was received from the tuner when an ACK was expected.
0	TCIDONE	Tuner Control Interface transaction done	The Tuner Control Interface transaction done status bit is set to 1 (if unmasked) at the end of a normal transaction to indicate to the host processor that the tuner I ² C transaction completed successfully. If an error occurs during a transaction to the tuner, the MCU does not set this bit to 1.

6.2.60 Software Interrupt Mask Register

The interrupt mask registers are used by the host processor to mask unused interrupt sources. When an interrupt status bit is masked, the event results in the raw status bit being set but does not result in the status bit being set or the assertion of the interrupt request output pin, INTREQ.

Address	FDh							
Default	00h							
Bit	7	6	5	4	3	2	1	0
Mnemonic	Reserved	Reserved	ACIRXCT	ACITXCT	ACIRXTO	Reserved	TCIERROR	TCIDONE
Туре	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0	0	0	0

BIT	MNEMONIC	NAME	DESCRIPTION
7:6	_	Reserved	Reserved for future use
5	ACIRXCT	Antenna Control Interface receive transaction complete interrupt mask	This bit is used by the host processor to enable the Antenna Control Interface receive transaction complete interrupt. 0 = Interrupt disabled (default) 1 = Interrupt enabled
4	ACITXCT	Antenna Control Interface transmit transaction complete interrupt mask	This bit is used by the host processor to enable the Antenna Control Interface transmit transaction complete interrupt. 0 = Interrupt disabled (default) 1 = Interrupt enabled
3	ACIRXTO	Antenna Control Interface receive timeout interrupt mask	This bit is used by the host processor to enable the Antenna Control Interface receive timeout interrupt. 0 = Interrupt disabled (default) 1 = Interrupt enabled
2	_	Reserved	Reserved for future use
1	TCIERROR	Tuner Control Interface transaction error interrupt mask	This bit is used by the host processor to enable the Tuner Control Interface transaction error interrupt. 0 = Interrupt disabled (default) 1 = Interrupt enabled
0	TCIDONE	Tuner Control Interface transaction done interrupt mask	This bit is used by the host processor to enable the Tuner Control Interface transaction done interrupt. 0 = Interrupt disabled (default) 1 = Interrupt enabled



6.2.61 Software Interrupt Clear Register

The interrupt clear registers are used by the host processor to clear the interrupt raw status and status bits. To clear an interrupt, a 1 must be written to the corresponding bit in this register. The interrupt clear bits are automatically reset to 0 by the TVP9900 hardware. When all unmasked interrupts are cleared, the INTREQ device output pin is inactive.

Address	FFh							
Default	00h							
Bit	7	6	5	4	3	2	1	0
Mnemonic	Reserved	Reserved	ACIRXCT	ACITXCT	ACIRXTO	Reserved	TCIERROR	TCIDONE
Туре	W	W	W	W	W	W	W	W
Default	0	0	0	0	0	0	0	0

BIT	MNEMONIC	NAME	DESCRIPTION
7:6	_	Reserved	Reserved for future use
5	ACIRXCT	Antenna Control Interface receive transaction complete interrupt clear	This bit should be set to 1 by the host processor to clear the Antenna Control Interface receive transaction complete raw status bit, which also clears the status bit and interrupt if unmasked.
4	ACITXCT	Antenna Control Interface transmit transaction complete interrupt clear	This bit should be set to 1 by the host processor to clear the Antenna Control Interface transmit transaction complete raw status bit, which also clears the status bit and interrupt if unmasked.
3	ACIRXTO	Antenna Control Interface receive timeout interrupt clear	This bit should be set to 1 by the host processor to clear the Antenna Control Interface receive timeout raw status bit, which also clears the status bit and interrupt if unmasked.
2	_	Reserved	Reserved for future use
1	TCIERROR	Tuner Control Interface transaction error interrupt clear	This bit should be set to 1 by the host processor to clear the Tuner Control Interface transaction error raw status bit, which also clears the status bit and interrupt if unmasked.
0	TCIDONE	Tuner Control Interface transaction done interrupt clear	This bit should be set to 1 by the host processor to clear the Tuner Control Interface transaction done raw status bit, which also clears the status bit and interrupt if unmasked.



7 Electrical Specifications

This section provides the absolute maximum ratings and the recommended operating conditions for the TVP9900 device.

All electrical and timing characteristics in this specification shall be valid over the recommended operating conditions, unless otherwise noted.

7.1 Absolute Maximum Ratings⁽¹⁾

over operating free-air temperature range (unless otherwise noted)

			<u> </u>	
.5 V to 2.1 V	-0.5	1.5 V digital core supply	Supply voltage range	DVDD_1_5
.5 V to 4.2 V	-0.5	3.3 V IO cell supply	Supply voltage range	IOVDD_3_3
.5 V to 2.1 V	-0.5	1.5 V analog core supply	Supply voltage range	AVDD_1_5
.5 V to 4.2 V	-0.5	3.3 V analog core supply	Supply voltage range	AVDD_3_3
.5 V to 4.2 V	-0.5	3.3 V reference supply	Supply voltage range	AVDD_REF_3_3
.5 V to 2.1 V	-0.5	1.5 V PLL supply	Supply voltage range	AVDD_PLL_1_5
1_5 + 0.5 V	-0.5 V to AVDD_PLL_1_	XTALIN, oscillator input		
3_3 + 0.5 V	-0.5 V to IOVDD_3_	Fail-safe LVCMOS	Input voltage range	V_{I}
3_3 + 0.5 V	-0.5 V to AVDD_3_	Differential IF inputs: AIFIN_P, AIFIN_N		
1_5 + 0.5 V	-0.5 V to AVDD_PLL_1_	XTALOUT, oscillator output	Output valtage range	V
3_3 + 0.5 V	-0.5 V to IOVDD_3_	Fail-safe LVCMOS	Output voltage range	v _O
±20 mA		$V_I < 0$ or $V_I > V_{CC}$	Input clamp current	I_{lK}
±20 mA		$V_O < 0$ or $V_O > V_{CC}$	Output clamp current	I _{OK}
0°C to 70°C	0°0	ge	Operating free-air temperature rar	T _A
°C to 150°C	-65°C		Storage temperature range	T _{stg}
	-0.5 V to AVDD_PLL_ -0.5 V to IOVDD_3 -0.5 V to AVDD_3 -0.5 V to AVDD_PLL_3 -0.5 V to IOVDD_3	XTALIN, oscillator input Fail-safe LVCMOS Differential IF inputs: AIFIN_P, AIFIN_N XTALOUT, oscillator output Fail-safe LVCMOS $V_1 < 0$ or $V_1 > V_{CC}$ $V_0 < 0$ or $V_0 > V_{CC}$	Input voltage range Output voltage range Input clamp current Output clamp current Operating free-air temperature range	V _I V _O I _{IK} I _{OK} T _A

⁽¹⁾ Stresses beyond those listed under "absolute maximum ratings" may cause permanent damage to the device. These are stress ratings only, and functional operation of the device at these or any other conditions beyond those indicated under "recommended operating conditions" is not implied. Exposure to absolute-maximum-rated conditions for extended periods may affect device reliability.

VSB/QAM Receiver

SLEA064-MARCH 2007



7.2 Recommended Operating Conditions

			MIN	NOM	MAX	UNIT	
DVDD_1_5	1.5-V digital core supply voltage	ge	1.35	1.5	1.65	V	
IOVDD_3_3	3.3-V IO cell supply voltage		3	3.3	3.6	V	
AVDD_1_5	1.5-V analog core supply volta	ige	1.35	1.5	1.65	V	
AVDD_3_3	3.3-V analog core supply volta	ige	3	3.3	3.6	V	
AVDD_PLL_1_5	1.5-V PLL supply voltage		1.35	1.5	1.65	V	
AVDD_REF_3_3	3.3-V reference supply voltage	9	3	3.3	3.6	V	
	lancit caltana	XTALIN	0		AVDD_PLL_1_5	V	
V _I	Input voltage	LVCMOS	0		IOVDD_3_3	V	
\/	Output valtage	XTALOUT	0		AVDD_PLL_1_5	V	
V _O	Output voltage	LVCMOS	0		IOVDD_3_3	V	
\/	High lavel inner colleges	XTALIN	0.7(AVDD_PLL_1_5)		AVDD_PLL_1_5	V	
V_{IH}	High-level input voltage	LVCMOS	0.7(IOVDD_3_3)		IOVDD3_3	V	
\/	Low lovel input valtage	XTALIN	0		0.3(AVDD_PLL_1_5)	V	
V_{IL}	Low-level input voltage	LVCMOS	0		0.3(IOVDD_3_3)	V	
I _{OH}	High-level output current	LVCMOS			-8	mA	
I _{OL}	Low-level output current	LVCMOS			8	mA	
	Clash inner frances	XTALIN		25		N 41 1-	
f _{clock}	Clock input frequency	CLKIN		25		MHz	
t _t	Input transition, rise and fall tir	ne, 10% to 90%	0		25	ns	
T _A	Operating free-air temperature	;	0	25	70	°C	
T _J	Operating junction temperature	е	0	25	105	°C	

7.3 DC Electrical Characteristics

over recommended operating conditions (unless otherwise noted)

	PARAMETER		TEST CONDITIONS	MIN	TYP	MAX	UNIT
V _{OH}	High-level output voltage	LVCMOS	$I_{OH} = -8 \text{ mA}$	0.8(IOVDD_3_3)			V
V _{OL}	Low-level output voltage	LVCMOS	I _{OL} = 8 mA			0.22(IOVDD_3_3)	V
I _{IL}	Low-level input current		$V_I = V_{IL}$ (min)			±1	μΑ
I _{IH}	High-level input current		$V_I = V_{IH} $ (max)			±1	μΑ
I _{OZ}	High-impedance output curre	nt				±20	μΑ
I _{DVDD_1_5}	1.5-V digital core supply curre	ent	(1)		630		mA
I _{IOVDD_3_3}	3.3-V IO cell supply current		(1)		3		mA
I _{AVDD_1_5}	1.5-V analog core supply cur	rent	(1)		0.2		mA
I _{AVDD_3_3}	3.3-V analog core supply cur	rent	(1)		45		mA
I _{AVDD_PLL_1_5}	1.5-V analog PLL supply curr	ent	(1)		5		mA
I _{AVDD_REF_3_3}	3.3-V analog reference suppl	y current	(1)		22		mA
P _D	Power dissipation		8-VSB mode with parallel MPEG output ⁽¹⁾		1.2		W
			Power-down mode		0.45		mW
C _i	Input capacitance				8		pF
C _o	Output capacitance				8		pF

⁽¹⁾ For typical values: nominal voltages, $T_A = 25^{\circ}C$



7.4 Analog Input Characteristics

over recommended operating conditions (unless otherwise noted)

	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
V_{I}	Differential input voltage	$C_{coupling} = 0.1 \mu F$			1	Vp-p
R_{l}	Input resistance			2.4		kΩ
C _I	Differential input capacitance				10	pF
	Input gain control		-6	0	6	dB
	Input gain control ratio		-3		3	%

Submit Documentation Feedback



7.5 Timing Characteristics

over recommended operating conditions (unless otherwise noted)

7.5.1 Crystal and Input Clock

The TVP9900 can be used with an external crystal with a frequency of 25 MHz or with an external clock source with a frequency of 4 MHz or 25 MHz. The on-chip oscillator in the TVP9900 is designed to work with an external crystal with a frequency range of 15 MHz to 35 MHz. Therefore, if a clock frequency of 4 MHz is required, an external clock source, not an external crystal, must be used. When an external clock source is used, the on-chip oscillator simply functions as an input buffer.

Table 7-1. Crystal and Input Clock Timing

	PARAMETER	MIN	TYP	MAX	UNIT
f _{XTALIN}	Frequency, XTALIN (external crystal or clock source)		25		MHz
t _{cyc1}	Cycle time, XTALIN (external crystal or clock source) ⁽¹⁾		40		ns
f _{XTALIN}	Frequency, XTALIN (external clock source only)		4		MHz
t _{cyc1}	Cycle time, XTALIN (external clock source only) ⁽¹⁾		250		ns
	Frequency stability	-50		50	ppm

(1) Worst-case duty cycle is 45/55.



Figure 7-1. Crystal or Clock Timing Waveform

7.5.2 Device Reset

The power-on reset signal, RESETZ, is an active-low asynchronous reset that is used to initialize the device at power-up. The RESETZ signal may be low during power-up but must remain active low for a minimum of 1 ms after all power-supply voltages are stable at the recommended operating voltage. Internal circuits synchronize the power-on reset with internal clocks; therefore, the RESETZ signal must remain active low for a minimum of 1 µs after the crystal oscillator and clocks are stable.

Table 7-2. Device Reset Timing

	PARAMETER	MIN	TYP	MAX	UNIT
t _{w1(L)}	Pulse duration, RESETZ low after all power supplies are stable at the recommended operating voltage and the crystal oscillator is stable	1			ms

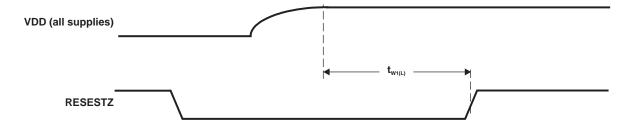


Figure 7-2. Device Reset Signal Timing Waveforms

54 Electrical Specifications Submit Documentation Feedback



7.5.3 MPEG Interface

7.5.3.1 Parallel Mode (Data Only)

The polarity of DCLK, BYTE_START, PACCLK and DERROR are programmable. The timing waveforms in Figure 7-3 are shown with BYTE_START, PACCLK, and DERROR as active-high signals and with the output signals transitioning with respect to the falling edge of DCLK. In this mode, PACCLK is always active. If an error occurs, the DERROR signal is active for the length of the entire packet. The packet length is 188 bytes.

Table 7-3. Parallel Mode (Data Only) Timing

$C_{L} = 30$	pF					
	PARAMETER		MIN	TYP	MAX	UNIT
		8 VSB mode		2.42408		
f _{DCLK}	Frequency, DCLK	64 QAM mode		3.37129		MHz
		256 QAM mode		4.85133	-	
d _{cyc}	Duty cycle, DCLK			50		%
t _{pd1}	Propagation delay time, DCLK falling (or rising) ed	ge to DATAOUT [7:0] valid	-2		3	ns
t _{pd2}	Propagation delay time, DCLK falling (or rising) ed	ge to BYTE_START high	-2		3	ns
t _{pd3}	Propagation delay time, DCLK falling (or rising) ed	ge to BYTE_START low	-2		3	ns
t _{pd4}	Propagation delay time, DCLK falling (or rising) ed	ge to DERROR high	-2		3	ns
t _{pd5}	Propagation delay time, DCLK falling (or rising) ed	ge to DERROR low	-2		3	ns

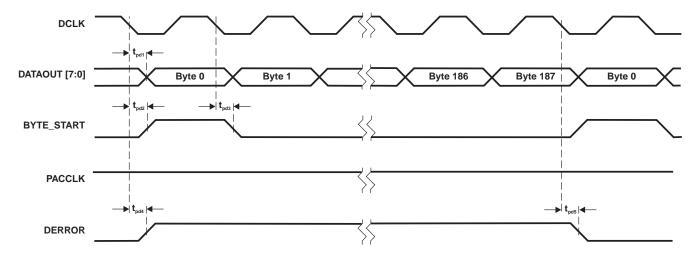


Figure 7-3. MPEG Interface - Parallel Mode (Data Only) Timing Waveforms

Submit Documentation Feedback

Electrical Specifications



7.5.3.2 Serial Mode (Data Only)

The polarity of DCLK, BYTE_START, PACCLK and DERROR are programmable. The timing waveforms in Figure 7-4 are shown with BYTE_START, PACCLK, and DERROR as active-high signals and with the output signals transitioning in respect to the falling edge of DCLK. BYTE_START is active for the eight clock cycles corresponding to the eight bits of the first byte of data. In this mode, PACCLK is always active. If an error occurs, the DERROR signal is active for the length of the entire packet. The packet length is 188 bytes.

Table 7-4. Serial Mode (Data Only) Timing

\sim	_	30	n	ᆮ
\circ	=	SU	ν	Г

	PARAMETER		MIN	TYP	MAX	UNIT
		8 VSB mode	19	39266		
f _{DCLK}	Frequency, DCLK	64 QAM mode	26	97035		MHz
		256 QAM mode	38	81070	3 3 3 3 3	
d _{cyc}	Duty cycle, DCLK			50		%
t _{pd1}	Propagation delay time, DCLK falling (or risi	ng) edge to SERDATAO valid	-2		3	ns
t _{pd2}	Propagation delay time, DCLK falling (or risi	ng) edge to BYTE_START high	-2		3	ns
t _{pd3}	Propagation delay time, DCLK falling (or risi	ng) edge to BYTE_START low	-2		3	ns
t _{pd4}	Propagation delay time, DCLK falling (or risi	ng) edge to DERROR high	-2		3	ns
t _{pd5}	Propagation delay time, DCLK falling (or risi	ng) edge to DERROR low	-2		3	ns

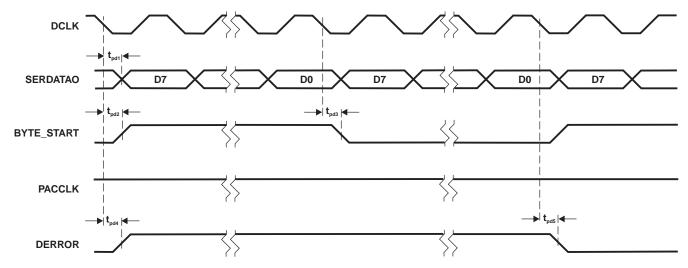


Figure 7-4. MPEG Interface - Serial Mode (Data Only) Timing Waveforms

56 Electrical Specifications Submit Documentation Feedback



7.5.3.3 Parallel Mode (Data With Redundancy)

The polarity of DCLK, BYTE START, PACCLK and DERROR are programmable. The timing waveforms in Figure 7-5 are shown with BYTE_START, PACCLK and DERROR as active high signals and with the output signals transitioning with respect to the falling edge of DCLK. PACCLK is only active during the time period that the 188 bytes of data are being transferred. If an error occurs, the DERROR signal is active for the length of the entire packet.

Table 7-5. Parallel Mode (Data With Redundancy) Timing

C_L	= 30 pF	

	PARAMETE	R	MIN	TYP	MAX	UNIT
		8 VSB mode		2.68196		
f _{DCLK}	Frequency, DCLK	64 QAM mode		3.65821		MHz
		256 QAM mode		5.26422		
d _{cyc}	Duty cycle, DCLK			50		%
t _{pd1}	Propagation delay time, DCLK falling (or ri	sing) edge to DATAOUT [7:0] valid	-2		3	ns
t _{pd2}	Propagation delay time, DCLK falling (or ri	sing) edge to BYTE_START high	-2		3	ns
t _{pd3}	Propagation delay time, DCLK falling or ris	sing edge to BYTE_START low	-2		3	ns
t _{pd4}	Propagation delay time, DCLK falling (or ri	sing) edge to PACCLK high	-2		3	ns
t _{pd5}	Propagation delay time, DCLK falling (or ri	sing) edge to PACCLK low	-2		3	ns
t _{pd6}	Propagation delay time, DCLK falling (or ri	sing) edge to DERROR high	-2		3	ns
t _{pd7}	Propagation delay time, DCLK falling (or ri	sing) edge to DERROR low	-2		3	ns

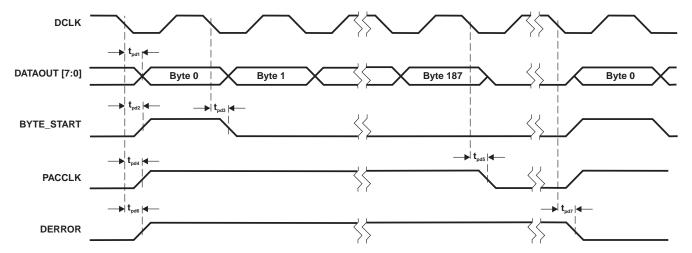


Figure 7-5. MPEG Interface - Parallel Mode (Data With Redundancy) Timing Waveforms

Submit Documentation Feedback

Electrical Specifications



7.5.3.4 Serial Mode (Data With Redundancy)

The polarity of DCLK, BYTE_START, PACCLK and DERROR are programmable. The timing waveforms in Figure 7-6 are shown with BYTE_START, PACCLK, and DERROR as active-high signals and with the output signals transitioning in respect to the falling edge of DCLK. BYTE_START is active for the eight clock cycles corresponding to the eight bits of the first byte of data. PACCLK is only active during the time period that the 188 bytes of data are being transferred. If an error occurs, the DERROR signal is active for the length of the entire packet.

Table 7-6. Serial Mode (Data With Redundancy) Timing

$C_L = 30$	pF				
	PARAMET	ER	MIN T	YP MAX	UNIT
		8 VSB mode	2.424	108	
f _{DCLK}	Frequency, DCLK	64 QAM mode	3.371	37129 35133	MHz
		256 QAM mode	4.851		
d _{cyc}	Duty cycle, DCLK	·		50	%
t _{pd1}	Propagation delay time, DCLK falling (or	rising) edge to DATAOUT [7:0] valid		3	ns
t _{pd2}	Propagation delay time, DCLK falling (or	rising) edge to BYTE_START high		3	ns
t _{pd3}	Propagation delay time, DCLK falling (or	rising) edge to BYTE_START low		3	ns
t _{pd4}	Propagation delay time, DCLK falling (or	rising) edge to DERROR high		3	ns
t _{pd5}	Propagation delay time, DCLK falling (or	rising) edge to DERROR low		3	ns

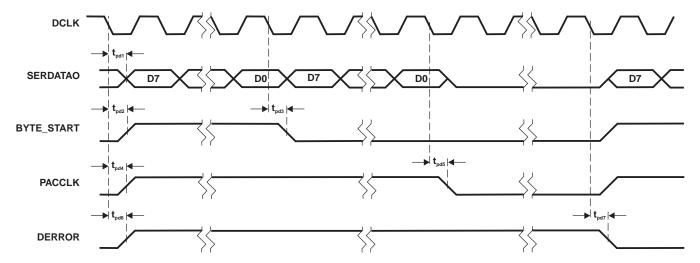


Figure 7-6. MPEG Interface – Serial Mode (Data with Redundancy) Timing Waveforms

58 Electrical Specifications Submit Documentation Feedback



7.5.4 Host and Tuner & Interface

Host processor communication with the TVP9900 device is done via an I^2C slave interface. The TVP9900 also has an I^2C master interface that is used by the TVP9900 to communicate with the system tuner. Both of these I^2C interfaces are designed to work for both standard and fast modes of operation. The timing parameters and the timing waveforms below pertain to both I^2C interfaces.

Table 7-7. Host and Tuner I ²C Interface Timing

	PARAMETER	STAND/ MOD	FAST MODE		UNIT	
		MIN	MAX	MIN	MAX	
f_{SCL}	Frequency, SCL	0	100	0	400	kHz
t _{W(H)}	Pulse duration, SCL high	4		0.6		μs
t _{W(L)}	Pulse duration, SCL low	4.7		1.3		μs
t _r	Rise time, SCL and SDA		1000		300	ns
t _f	Fall time, SCL and SDA		300		300	ns
t _{su1}	Setup time, SDA to SCL	250		100		ns
t _{h1}	Hold time, SCL to SDA ⁽¹⁾	0		0		ns
t _{buf}	Bus free time between stop and start condition	4.7		1.3		μs
t _{su2}	Setup time, SCL to start condition	4.7		0.6		μs
t _{h2}	Hold time, start condition to SCL	4		0.6		μs
t _{su3}	Setup time, SCL to stop condition	4		0.6		μs
C _L	Load capacitance for each bus line		400		400	pF

⁽¹⁾ The TVP9900 internally provides a minimum hold time of 300 ns for the SDA signal in order to bridge the undefined region of the falling edge of SCL.

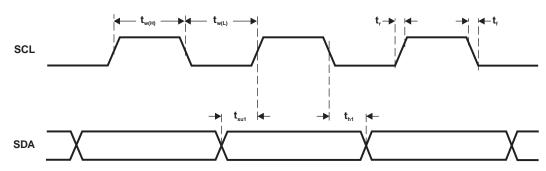


Figure 7-7. I²C SCL and SDA Timing Waveforms


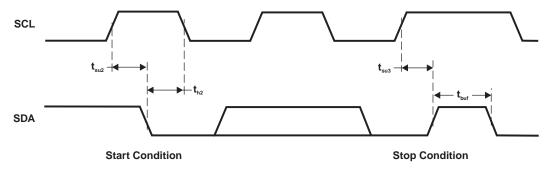


Figure 7-8. I²C Start and Stop Conditions Timing Waveforms

Submit Documentation Feedback



8 Application Circuit

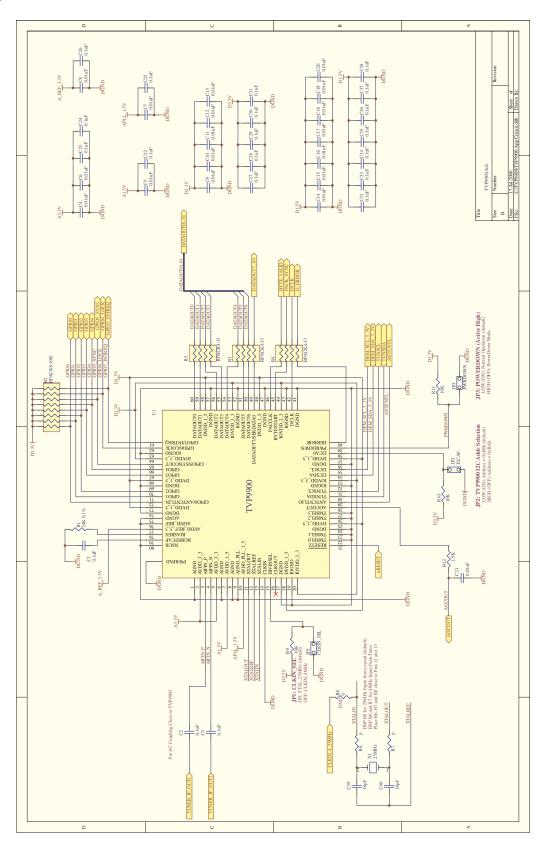



PACKAGE OPTION ADDENDUM

12-Apr-2007

PACKAGING INFORMATION

Orderable Device	Status ⁽¹⁾	Package Type	Package Drawing	Pins P	Package Qty	e Eco Plan ⁽²⁾	Lead/Ball Finish	MSL Peak Temp ⁽³⁾
TVP9900PFP	ACTIVE	HTQFP	PFP	80	96	Green (RoHS & no Sb/Br)	CU NIPDAU	Level-4-260C-72 HR
TVP9900PFPR	ACTIVE	HTQFP	PFP	80	1000	Green (RoHS & no Sb/Br)	CU NIPDAU	Level-4-260C-72 HR

⁽¹⁾ The marketing status values are defined as follows:

ACTIVE: Product device recommended for new designs.

LIFEBUY: TI has announced that the device will be discontinued, and a lifetime-buy period is in effect.

NRND: Not recommended for new designs. Device is in production to support existing customers, but TI does not recommend using this part in a new design.

PREVIEW: Device has been announced but is not in production. Samples may or may not be available.

OBSOLETE: TI has discontinued the production of the device.

(2) Eco Plan - The planned eco-friendly classification: Pb-Free (RoHS), Pb-Free (RoHS Exempt), or Green (RoHS & no Sb/Br) - please check http://www.ti.com/productcontent for the latest availability information and additional product content details.

TBD: The Pb-Free/Green conversion plan has not been defined.

Pb-Free (RoHS): TI's terms "Lead-Free" or "Pb-Free" mean semiconductor products that are compatible with the current RoHS requirements for all 6 substances, including the requirement that lead not exceed 0.1% by weight in homogeneous materials. Where designed to be soldered at high temperatures, TI Pb-Free products are suitable for use in specified lead-free processes.

Pb-Free (RoHS Exempt): This component has a RoHS exemption for either 1) lead-based flip-chip solder bumps used between the die and package, or 2) lead-based die adhesive used between the die and leadframe. The component is otherwise considered Pb-Free (RoHS compatible) as defined above.

Green (RoHS & no Sb/Br): TI defines "Green" to mean Pb-Free (RoHS compatible), and free of Bromine (Br) and Antimony (Sb) based flame retardants (Br or Sb do not exceed 0.1% by weight in homogeneous material)


(3) MSL, Peak Temp. -- The Moisture Sensitivity Level rating according to the JEDEC industry standard classifications, and peak solder temperature.

Important Information and Disclaimer: The information provided on this page represents TI's knowledge and belief as of the date that it is provided. TI bases its knowledge and belief on information provided by third parties, and makes no representation or warranty as to the accuracy of such information. Efforts are underway to better integrate information from third parties. TI has taken and continues to take reasonable steps to provide representative and accurate information but may not have conducted destructive testing or chemical analysis on incoming materials and chemicals. TI and TI suppliers consider certain information to be proprietary, and thus CAS numbers and other limited information may not be available for release.

In no event shall TI's liability arising out of such information exceed the total purchase price of the TI part(s) at issue in this document sold by TI to Customer on an annual basis.

PFP (S-PQFP-G80)

PowerPAD™ PLASTIC QUAD FLATPACK

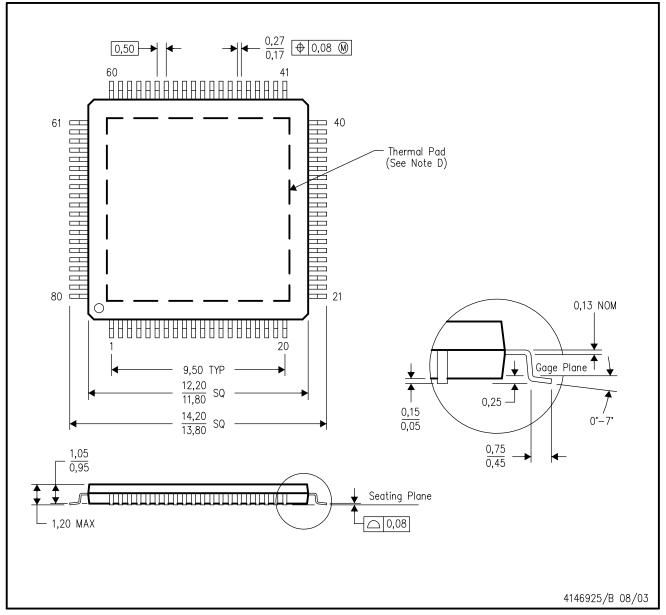

NOTES:

- A. All linear dimensions are in millimeters.
- B. This drawing is subject to change without notice.
- C. Body dimensions do not include mold flash or protrusion
- D. This package is designed to be soldered to a thermal pad on the board. Refer to Technical Brief, PowerPad Thermally Enhanced Package, Texas Instruments Literature No. SLMA002 for information regarding recommended board layout. This document is available at www.ti.com www.ti.com.
- E. Falls within JEDEC MS-026

PowerPAD is a trademark of Texas Instruments.






THERMAL INFORMATION

This PowerPADTM package incorporates an exposed thermal pad that is designed to be attached directly to an external heatsink. When the thermal pad is soldered directly to the printed circuit board (PCB), the PCB can be used as a heatsink. In addition, through the use of thermal vias, the thermal pad can be attached directly to a ground or power plane (whichever is applicable), or alternatively, a special heatsink structure designed into the PCB. This design optimizes the heat transfer from the integrated circuit (IC).


For additional information on the PowerPAD package and how to take advantage of its heat dissipating abilities, refer to Technical Brief, PowerPAD Thermally Enhanced Package, Texas Instruments Literature No. SLMA002 and Application Brief, PowerPAD Made Easy, Texas Instruments Literature No. SLMA004. Both documents are available at www.ti.com.

The exposed thermal pad dimensions for this package are shown in the following illustration.

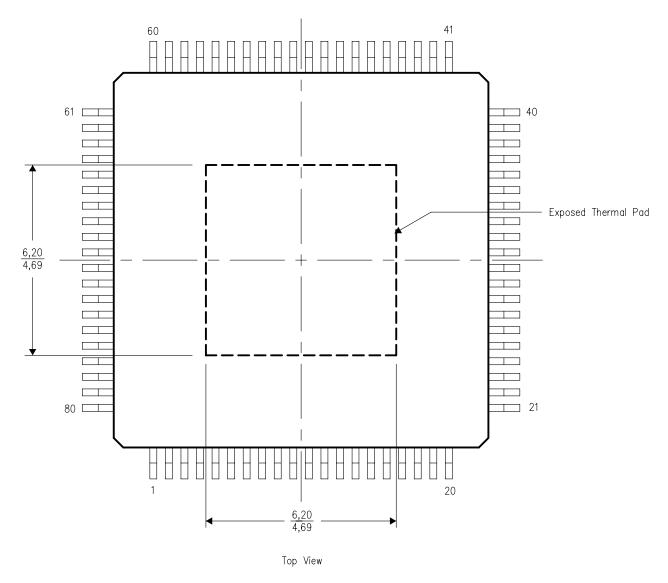

NOTE: All linear dimensions are in millimeters

PFP (S-PQFP-G80) PowerPAD™

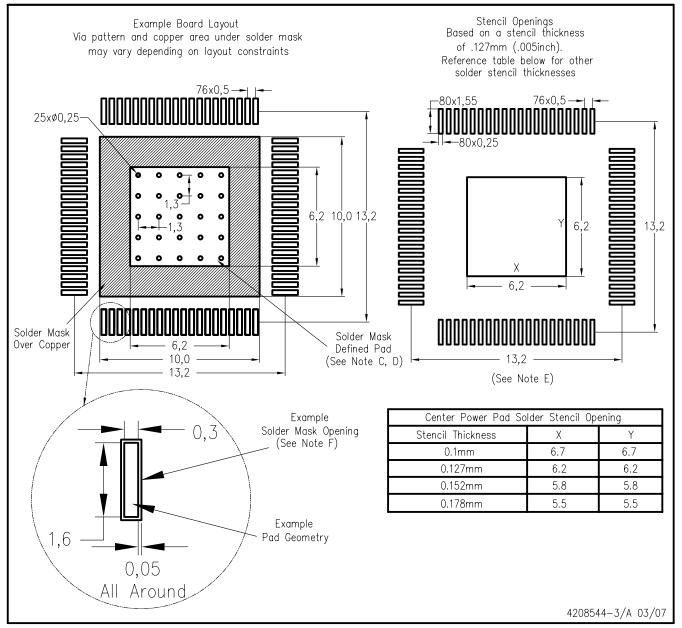

NOTES:

- A. All linear dimensions are in millimeters.
- B. This drawing is subject to change without notice.
- C. Customers should place a note on the circuit board fabrication drawing not to alter the center solder mask defined pad.
- D. This package is designed to be soldered to a thermal pad on the board. Refer to Technical Brief, PowerPad Thermally Enhanced Package, Texas Instruments Literature No. SLMA002, SLMA004, and also the Product Data Sheets for specific thermal information, via requirements, and recommended board layout. These documents are available at www.ti.com http://www.ti.com. Publication IPC-SM-782 is recommended for alternate designs.
- E. Laser cutting apertures with trapezoidal walls and also rounding corners will offer better paste release. Customers should contact their board assembly site for stencil design recommendations. Example stencil design based on a 50% volumetric metal load solder paste. Refer to IPC-7525 for other stencil recommendations.
- F. Customers should contact their board fabrication site for solder mask tolerances between and around signal pads.



IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice. Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All products are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its hardware products to the specifications applicable at the time of sale in accordance with TI's standard warranty. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by government requirements, testing of all parameters of each product is not necessarily performed.

TI assumes no liability for applications assistance or customer product design. Customers are responsible for their products and applications using TI components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any TI patent right, copyright, mask work right, or other TI intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information published by TI regarding third-party products or services does not constitute a license from TI to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. Reproduction of this information with alteration is an unfair and deceptive business practice. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI products or services with statements different from or beyond the parameters stated by TI for that product or service voids all express and any implied warranties for the associated TI product or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

TI products are not authorized for use in safety-critical applications (such as life support) where a failure of the TI product would reasonably be expected to cause severe personal injury or death, unless officers of the parties have executed an agreement specifically governing such use. Buyers represent that they have all necessary expertise in the safety and regulatory ramifications of their applications, and acknowledge and agree that they are solely responsible for all legal, regulatory and safety-related requirements concerning their products and any use of TI products in such safety-critical applications, notwithstanding any applications-related information or support that may be provided by TI. Further, Buyers must fully indemnify TI and its representatives against any damages arising out of the use of TI products in such safety-critical applications.

TI products are neither designed nor intended for use in military/aerospace applications or environments unless the TI products are specifically designated by TI as military-grade or "enhanced plastic." Only products designated by TI as military-grade meet military specifications. Buyers acknowledge and agree that any such use of TI products which TI has not designated as military-grade is solely at the Buyer's risk, and that they are solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI products are neither designed nor intended for use in automotive applications or environments unless the specific TI products are designated by TI as compliant with ISO/TS 16949 requirements. Buyers acknowledge and agree that, if they use any non-designated products in automotive applications, TI will not be responsible for any failure to meet such requirements.

Following are URLs where you can obtain information on other Texas Instruments products and application solutions:

	Applications		
amplifier.ti.com	Audio	www.ti.com/audio	
dataconverter.ti.com	Automotive	www.ti.com/automotive	
dsp.ti.com	Broadband	www.ti.com/broadband	
interface.ti.com	Digital Control	www.ti.com/digitalcontrol	
logic.ti.com	Military	www.ti.com/military	
power.ti.com	Optical Networking	www.ti.com/opticalnetwork	
microcontroller.ti.com	Security	www.ti.com/security	
www.ti-rfid.com	Telephony	www.ti.com/telephony	
www.ti.com/lpw	Video & Imaging	www.ti.com/video	
	Wireless	www.ti.com/wireless	
	dataconverter.ti.com dsp.ti.com interface.ti.com logic.ti.com power.ti.com microcontroller.ti.com www.ti-rfid.com	amplifier.ti.com dataconverter.ti.com dsp.ti.com interface.ti.com logic.ti.com power.ti.com microcontroller.ti.com www.ti-rfid.com www.ti-com/lpw Audio Automotive Broadband Digital Control Military Optical Networking Security Telephony Video & Imaging	

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265 Copyright © 2007, Texas Instruments Incorporated