


ERTJ series




Features

- Surface Mount Device (0201 0402 0603)
- Highly reliable multilayer / monolithic structure
- Wide temperature operating range (-40 to 125 ℃)
- Environmentally-friendly lead-free
- RoHS compliant


Recommended applications

- Mobile Phone
 - ·Temperature compensation for crystal oscillator
 - ·Temperature compensation for semiconductor devices
- Personal Computer and Peripheral Device
 - ·Temperature detection for CPU and memory device
 - ·Temperature compensation for ink-viscosity (Inkjet Printer)
- Battery Pack (secondary battery)
 - ·Temperature detection of battery cells
- Liquid Crystal Display
 - ·Temperature compensation of display contrast
 - ·Temperature compensation of display backlighting (CCFL)

Explanation of part numbers

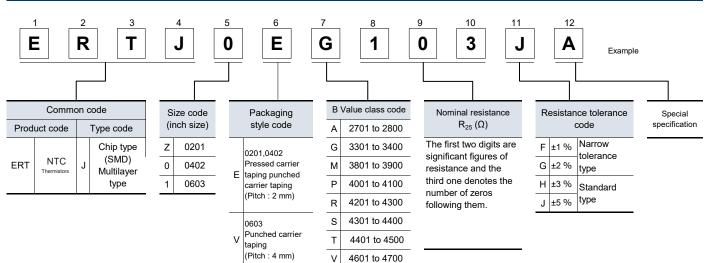

Construction

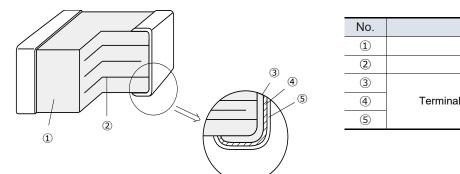

No.	Name			
1	Semiconduc	Semiconductive ceramics		
2	Internal	Internal electrode		
3		Substrate electrode		
4	Terminal electrode	Intermediate electrode		
(5)		External electrode		

Ratings						
Size code (inch size)	Z(0201)	0(0402)	1(0603)			
Operating temperature range		–40 to 125 ℃				
Rated maximum power dissipation ^{*1}	33 mW	66 mW	100 mW			
Dissipation factor ^{*2}	Approximately 1 mW / $^{\circ}$	Approximately 2 mW / $^{\circ}$ C	Approximately 3 mW / ℃			

*1: Rated Maximum Power Dissipation : The maximum power that can be continuously applied at the rated ambient temperature.

•The maximum value of power, and rated power is same under the condition of ambient temperature 25 °C or less. If the temperature

exceeds 25 $^\circ\!\!\!\mathrm{C},$ rated power depends on the decreased power dissipation curve.

·Please see "Operating Power" for details.

*2: Dissipation factor : The constant amount power required to raise the temperature of the Thermistor 1 °C through self heat generation under stable temperatures.

·Dissipation factor is the reference value when mounted on a glass epoxy board (1.6 mmT).

Part number list of narrow tolerance type (Resistance tolerance : ±2 %, ±1 %)

• 0201 inch size

Part number	Nominal resistance at 25 ℃ (Ω)	Resistance tolerance	B Value at 25/50 (K)	B Value at 25/85 (K)
ERTJZEG103 A	10 kΩ		(3380 K)	3435 K±1 %
ERTJZEP473	47 kΩ		4050 K±1 %	(4100 K)
ERTJZEP683	68 kΩ	±1 %(F)	4050 K±1 %	(4100 K)
ERTJZER683	68 kΩ	or	4250 K±1 %	(4300 K)
ERTJZER104	100 kΩ	±2 %(G)	4250 K±1 %	(4300 K)
ERTJZET104	100 kΩ		4500 K±1 %	(4550 K)
ERTJZEV104	100 kΩ		4700 K±1 %	(4750 K)

• 0402 inch size

Part number	Nominal resistance at 25 ℃ (Ω)	Resistance tolerance	B Value at 25/50 (K)	B Value at 25/85 (K)
ERTJ0EG103	10 kΩ		(3380 K)	3435 K±1 %
ERTJ0EP333	33 kΩ		4050 K±1 %	(4100 K)
ERTJ0EP473	47 kΩ		4050 K±1 %	(4100 K)
ERTJ0EP683	68 kΩ	±1 %(F)	4050 K±1 %	(4100 K)
ERTJ0ER104	100 kΩ	or ±2 %(G)	4250 K±1 %	(4300 K)
ERTJ0ES104	100 kΩ		4330 K±1 %	(4390 K)
ERTJ0EV104	100 kΩ		4700 K±1 %	(4750 K)
ERTJ0EV224	220 kΩ		4700 K±1 %	(4750 K)

• 0603 inch size

Part number	Nominal resistance at 25 ℃ (Ω)	Resistance tolerance	B Value at 25/50 (K)	B Value at 25/85 (K)
ERTJ1VG103 A	10 kΩ	±1 %(F)	(3380 K)	3435 K±1 %
ERTJ1VS104 A	100 kΩ	or ±2 %(G)	(4330 K)	4390 K±1 %

 \Box : Resistance tolerance code

Part number list of standard type (Resistance tolerance : ±5 %, ±3 %)

• 0201 inch size

Part number	Nominal resistance	Resistance tolerance	B Value	B Value
Fait number	at 25 °C (Ω)	Resistance tolerance	at 25/50 (K)	at 25/85 (K)
ERTJZET202	2.0 kΩ		4500 K±2 %	(4450 K)
ERTJZET302	3.0 kΩ		4500 K±2 %	(4450 K)
ERTJZET472	4.7 kΩ		4500 K±2 %	(4450 K)
ERTJZEG103 A	10 kΩ	-	(3380 K)	3435 K±1 %
ERTJZEP473	47 kΩ		4050 K±2 %	(4100 K)
ERTJZEP683	68 kΩ	±3 %(H)	4050 K±2 %	(4100 K)
ERTJZER683	68 kΩ	or ±5 %(J)	4250 K±2 %	(4300 K)
ERTJZER104	100 kΩ		4250 K±2 %	(4300 K)
ERTJZET104	100 kΩ	1	4500 K±2 %	(4550 K)
ERTJZEV104	100 kΩ	1	4700 K±2 %	(4750 K)
ERTJZET154	150 kΩ	1	4500 K±2 %	(4750 K)
ERTJZET224	ERTJZET224 220 kΩ		4500 K±2 %	(4750 K)

Part number list of standard type (Resistance tolerance : ±5 %, ±3 %)

• 0402 inch size

Part number	Nominal resistance at 25 ℃ (Ω)	Resistance tolerance	B Value at 25/50 (K)	B Value at 25/85 (K)
ERTJ0EA220	22 Ω		2750 K±3 %	(2700 K)
ERTJ0EA330	33 Ω		2750 K±3 %	(2700 K)
ERTJ0EA400	40 Ω	-	2750 K±3 %	(2700 K)
ERTJ0EA470	47 Ω		2750 K±3 %	(2700 K)
ERTJ0EA680	68 Ω		2800 K±3 %	(2750 K)
ERTJ0EA101	100 Ω		2800 K±3 %	(2750 K)
ERTJ0EA151	150 Ω		2800 K±3 %	(2750 K)
ERTJ0ET102	1.0 kΩ		4500 K±2 %	(4450 K)
ERTJ0ET152	1.5 kΩ		4500 K±2 %	(4450 K)
ERTJ0ET202	2.0 kΩ		4500 K±2 %	(4450 K)
ERTJ0ET222	2.2 kΩ	-	4500 K±2 %	(4450 K)
ERTJ0ET302	3.0 kΩ	-	4500 K±2 %	(4450 K)
ERTJ0ER332	3.3 kΩ	-	4250 K±2 %	(4300 K)
ERTJ0ET332	3.3 kΩ		4500 K±2 %	(4450 K)
ERTJ0ET472	4.7 kΩ	-	4500 K±2 %	(4450 K)
ERTJ0ER472	4.7 kΩ	-	4250 K±2 %	(4300 K)
ERTJ0ER682	6.8 kΩ	-	4250 K±2 %	(4300 K)
ERTJ0EG103 A	10 kΩ	-	(3380 K)	3435 K±1 %
ERTJ0EM103	10 kΩ	-	3900 K±2 %	(3970 K)
ERTJ0ER103	10 kΩ	±3 %(H)	4250 K±2 %	(4300 K)
ERTJ0ER153	15 kΩ	or	4250 K±2 %	(4300 K)
ERTJ0ER223	22 kΩ	±5 %(J)	4250 K±2 %	(4300 K)
ERTJ0EP333	33 kΩ	-	4050 K±2 %	(4100 K)
ERTJ0ER333	33 kΩ	-	4250 K±2 %	(4300 K)
ERTJ0ET333	33 kΩ	-	4500 K±2 %	(4580 K)
ERTJ0EP473	47 kΩ	-	4050 K±2 %	(4100 K)
ERTJ0ET473	47 kΩ	-	4500 K±2 %	(4550 K)
ERTJ0EV473	47 kΩ	-	4700 K±2 %	(4750 K)
ERTJ0EP683	68 kΩ	-	4050 K±2 %	(4100 K)
ERTJ0ER683	68 kΩ	-	4250 K±2 %	(4300 K)
ERTJ0EV683	68 kΩ	-	4700 K±2 %	(4750 K)
ERTJ0EP104	100 kΩ	-	4050 K±2 %	(4100 K)
ERTJ0ER104	100 kΩ		4250 K±2 %	(4300 K)
ERTJ0ES104	100 kΩ		4330 K±2 %	(4390 K)
ERTJ0ET104	100 kΩ		4500 K±2 %	(4580 K)
ERTJ0EV104	100 kΩ		4700 K±2 %	(4750 K)
ERTJ0ET154	150 kΩ		4500 K±2 %	(4580 K)
ERTJ0EV154	150 kΩ		4700 K±2 %	(4750 K)
ERTJ0EV224	220 kΩ		4700 K±2 %	(4750 K)
ERTJ0EV334	330 kΩ		4700 K±2 %	(4750 K)
ERTJ0EV474	470 kΩ		4700 K±2 %	(4750 K)

 \Box : Resistance tolerance code

Part number list of standard type (Resistance tolerance : ±5 %, ±3 %)

• 0603 inch size

Part number	Nominal resistance at 25 ℃ (Ω)	Resistance tolerance	B Value at 25/50 (K)	B Value at 25/85 (K)
ERTJ1VA220	22 Ω		2750 K±3 %	(2700 K)
ERTJ1VA330	33 Ω	-	2750 K±3 %	(2700 K)
ERTJ1VA400	40 Ω	-	2800 K±3 %	(2750 K)
ERTJ1VA470	47 Ω	-	2800 K±3 %	(2750 K)
ERTJ1VA680	68 Ω	-	2800 K±3 %	(2750 K)
ERTJ1VA101	100 Ω	-	2800 K±3 %	(2750 K)
ERTJ1VT102	1.0 kΩ	-	4500 K±2 %	(4450 K)
ERTJ1VT152	1.5 kΩ	-	4500 K±2 %	(4450 K)
ERTJ1VT202	2.0 kΩ	-	4500 K±2 %	(4450 K)
ERTJ1VT222	2.2 kΩ	-	4500 K±2 %	(4450 K)
ERTJ1VT302	3.0 kΩ		4500 K±2 %	(4450 K)
ERTJ1VT332	3.3 kΩ	-	4500 K±2 %	(4450 K)
ERTJ1VR332	3.3 kΩ	-	4250 K±2 %	(4300 K)
ERTJ1VR472	4.7 kΩ	-	4250 K±2 %	(4300 K)
ERTJ1VT472	4.7 kΩ	±3 %(H)	4500 K±2 %	(4450 K)
ERTJ1VR682	6.8 kΩ	– or ±5 %(J)	4250 K±2 %	(4300 K)
ERTJ1VG103 A	10 kΩ	-	(3380 K)	3435 K±1 %
ERTJ1VR103	10 kΩ	-	4250 K±2 %	(4300 K)
ERTJ1VR153	15 kΩ	-	4250 K±2 %	(4300 K)
ERTJ1VR223	22 kΩ	-	4250 K±2 %	(4300 K)
ERTJ1VR333	33 kΩ	-	4250 K±2 %	(4300 K)
ERTJ1VP473	47 kΩ	-	4100 K±2 %	(4150 K)
ERTJ1VR473	47 kΩ		4250 K±2 %	(4300 K)
ERTJ1VV473	47 kΩ		4700 K±2 %	(4750 K)
ERTJ1VR683	68 kΩ	-	4250 K±2 %	(4300 K)
ERTJ1VV683	68 kΩ		4700 K±2 %	(4750 K)
ERTJ1VS104 A	100 kΩ		(4330 K)	4390 K±1 %
ERTJ1VV104	100 kΩ		4700 K±2 %	(4750 K)
ERTJ1VV154	150 kΩ		4700 K±2 %	(4750 K)
ERTJ1VT224	220 kΩ		4500 K±2 %	(4580 K)

□ : Resistance tolerance code

Part number list of standard type (Resistance tolerance : ±5 %, ±3 %)

• Temperature and Resistance value (the resistance value at 25 °C is set to 1)/ Reference values

	ERTJ	□□A to	ERTJ G to	ERTJ M to	ERTJ D P to	ERTJ CR to	ERTJ0ES to	ERTJ1VS to	ERTJ T to	ERTJ . T to	ERTJ UV to
B _{25/50}	2750 K	2800 K	(3375 K)	3900 K	4050 K	4250 K	4330 K	(4330 K)	4500 K	4500 K	4700 K
B _{25/85}	(2700 K)	(2750 K)	3435 K	(3970 K)	(4100 K)	(4300 K)	(4390 K)	4390 K	(4450 K)	(4580 K)	(4750 K)
T(℃)									*1	*2	
-40	13.05	13.28	20.52	32.11	33.10	43.10	45.67	45.53	63.30	47.07	59.76
-35	10.21	10.40	15.48	23.29	24.03	30.45	32.08	31.99	42.92	33.31	41.10
-30	8.061	8.214	11.79	17.08	17.63	21.76	22.80	22.74	29.50	23.80	28.61
-25	6.427	6.547	9.069	12.65	13.06	15.73	16.39	16.35	20.53	17.16	20.14
-20	5.168	5.261	7.037	9.465	9.761	11.48	11.91	11.89	14.46	12.49	14.33
-15	4.191	4.261	5.507	7.147	7.362	8.466	8.743	8.727	10.30	9.159	10.31
-10	3.424	3.476	4.344	5.444	5.599	6.300	6.479	6.469	7.407	6.772	7.482
-5	2.819	2.856	3.453	4.181	4.291	4.730	4.845	4.839	5.388	5.046	5.481
0	2.336	2.362	2.764	3.237	3.312	3.582	3.654	3.650	3.966	3.789	4.050
5	1.948	1.966	2.227	2.524	2.574	2.734	2.778	2.776	2.953	2.864	3.015
10	1.635	1.646	1.806	1.981	2.013	2.102	2.128	2.126	2.221	2.179	2.262
15	1.38	1.386	1.474	1.567	1.584	1.629	1.642	1.641	1.687	1.669	1.710
20	1.171	1.174	1.211	1.247	1.255	1.272	1.277	1.276	1.293	1.287	1.303
25	1	1	1	1	1	1	1	1	1	1	1
30	0.8585	0.8565	0.8309	0.8072	0.8016	0.7921	0.7888	0.7890	0.7799	0.7823	0.7734
35	0.7407	0.7372	0.6941	0.6556	0.6461	0.6315	0.6263	0.6266	0.6131	0.6158	0.6023
40	0.6422	0.6376	0.5828	0.5356	0.5235	0.5067	0.5004	0.5007	0.4856	0.4876	0.4721
45	0.5595	0.5541	0.4916	0.4401	0.4266	0.4090	0.4022	0.4025	0.3874	0.3884	0.3723
50	0.4899	0.4836	0.4165	0.3635	0.3496	0.3319	0.3251	0.3254	0.3111	0.3111	0.2954
55	0.4309	0.4238	0.3543	0.3018	0.2881	0.2709	0.2642	0.2645	0.2513	0.2504	0.2356
60	0.3806	0.3730	0.3027	0.2518	0.2386	0.2222	0.2158	0.2161	0.2042	0.2026	0.1889
65	0.3376	0.3295	0.2595	0.2111	0.1985	0.1832	0.1772	0.1774	0.1670	0.1648	0.1523
70	0.3008	0.2922	0.2233	0.1777	0.1659	0.1518	0.1463	0.1465	0.1377	0.1348	0.1236
75	0.2691	0.2600	0.1929	0.1504	0.1393	0.1264	0.1213	0.1215	0.1144	0.1108	0.1009
80	0.2417	0.2322	0.1672	0.1278	0.1174	0.1057	0.1011	0.1013	0.09560	0.09162	0.08284
85	0.2180	0.2081	0.1451	0.1090	0.09937	0.08873	0.08469	0.08486	0.08033	0.07609	0.06834
90	0.1974	0.1871	0.1261	0.09310	0.08442	0.07468	0.07122	0.07138	0.06782	0.06345	0.05662
95	0.1793	0.1688	0.1097	0.07980	0.07200	0.06307	0.06014	0.06028	0.05753	0.05314	0.04712
100	0.1636	0.1528	0.09563	0.06871	0.06166	0.05353	0.05099	0.05112	0.04903	0.04472	0.03939
105	0.1498	0.1387	0.08357	0.05947	0.05306	0.04568	0.04340	0.04351	0.04198	0.03784	0.03308
110	0.1377	0.1263	0.07317	0.05170	0.04587	0.03918	0.03708	0.03718	0.03609	0.03218	0.02791
115	0.1270	0.1153	0.06421	0.04512	0.03979	0.03374	0.03179	0.03188	0.03117	0.02748	0.02364
120	0.1175	0.1056	0.0565	0.03951	0.03460	0.02916	0.02734	0.02742	0.02702	0.02352	0.02009
125	0.1091	0.09695	0.04986	0.03470	0.03013	0.02527	0.02359	0.02367	0.02351	0.02017	0.01712

*1: Apply to products with a B25/50 constant of 4500 K and a resistance value of 25 °C less than 10 kΩ.

*2: Apply to products with a B25/50 constant of 4500 K and a resistance value of 25 °C of 10 kΩ or more.

* Applied only to ERTJ0ET104

 $B_{25/50} = \frac{\ln (R_{25}/R_{50})}{\frac{1}{298.15 - 1}/323.15}$

 $B_{25/85} = \frac{\ln \left(R_{25} / R_{85} \right)}{1/298.15 - 1/358.15}$

R25=Resistance at 25.0±0.1 ℃ R50=Resistance at 50.0±0.1 ℃ R85=Resistance at 85.0±0.1 ℃


Specification an	d test method			
Item	Specifications		Testing method	
Rated Zero-power Resistance (R ₂₅)	Within the specified tolerance.	The value is measured at a power that the influence of sel heat generation can be negligible (0.1 mW or less), at the rated ambient temperature of $25.0 \pm 0.1 $ °C.		
	Shown in each Individual Specification. %Individual Specification shall specify B _{25/50} or B _{25/85} .	The Zero-power resistances; R_1 and R_2 , shall be meas respectively at T_1 (deg.C) T_2 (deg.C). The B value is calculated by the following equation.		
B Value		B _{T1/T2} = 1/(T ₁ +	In (R ₁)- In (R ₂) 273.15)–1/(T ₂ +273.15)	
		B _{25/50} B _{25/85}	T ₁ 25.0 ±0.1 ℃ 25.0 ±0.1 ℃	T ₂ 50.0 ±0.1 ℃ 85.0 ±0.1 ℃
	The terminal electrode shall be free from peeling or signs of peeling.		: 2 N 603 : 5 N s	
Adhesion		1.0 rzz	Test Sample	● 0.3/0201 0.5/0402 ● Board
		Size : 0603	o: F Tes San	
Bending Strength	There shall be no cracks and other mechanical damage. R25 change:within ±5 %	Bending distand Bending speed	: 1 mm/s	Unit : mm
Resistance to Soldering Heat	There shall be no cracks and other mechanical damage. (Nallow Tol. type) R25 change : within ±2 % B Value change : within ±1 % (Standard type) R25 change : within ±3 % B Value change : within ±2 % More than 95 % of the soldered area of	Soldering bath Solder tempera Dipping period Preheat conditi Step 1 2 Soldering bath	ture : 270 ±5 ℃ : 3.0 ±0.5 s on Temp (℃) 80 to 100 150 to 200	Period(s) 120 to 180 120 to 180
Solderability	both terminal electrodes shall be covered with fresh solder.	Solder tempera Dipping period Solder		jCu

Specification and test method


Item	Specifications		Testing method		
		Conditions of one	cycle		
		Step 1 : -40 ℃,	30±3 min		
Temperature cycling		Step 2 : Room t	emp., 3 min max.		
		Step 3 : 125 ℃,	30±3 min		
		Step 4 : Room t	emp., 3 min max.		
	(Nallow Tol. type)	Number of cycles	: 100 cycles		
	R25 change : within ±2 %	Temperature	: 85 ±2 ℃		
Humidity	B Value change : within ±1 %	Relative humidity	: 85 ±5 %		
		Test period	: 1000 +48/0 h		
	(Standard type)	Temperature	: 85 ±2 ℃		
Biased humidity	R25 change : within ±3 %	Relative humidity	: 85 ±5 %		
Diased number	B Value change : within ±2 %	Applied power	: 10 mW(D.C.)		
		Test period	: 500 +48/0 h		
Low temperature		Temperature	: -40 ±3 ℃		
exposure		Test period	: 1000 +48/0 h		
High temperature		Temperature	: 125 ±3 ℃		
exposure		Test period	: 1000 +48/0 h		

Typical application


 Temperature detection Writing current control of HDD

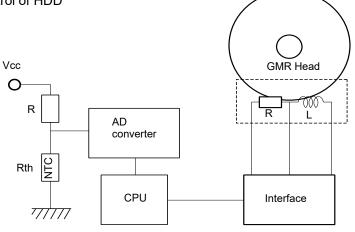


 Temperature compensation (Pseudo-linearization) Contrast level control of LCD

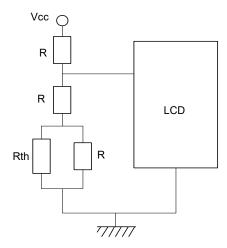

 Temperature compensation (RF circuit)
 Temperature compensation of TCXO

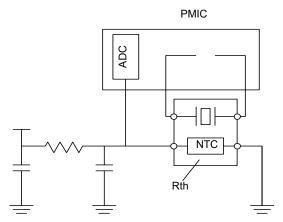

Dimensions in mm (not to scale)



				Unit : mr
Size code (inch size)	L	W	Т	L_1L_2
Z (0201)	0.60±0.03	0.30±0.03	0.30±0.03	0.15±0.05
0(0402)	1.0±0.1	0.50±0.05	0.50±0.05	0.25±0.15
1(0603)	1.60±0.15	0.8±0.1	0.8±0.1	0.3±0.2


Unit : mm

Packaging methods (Taping)

Standard packing quantities


	-			
Size code (inch size)	Thickness	Kind of taping	Pitch	Quantity (pcs/reel)
Z (0201)	0.3	Pressed Carrier Taping	2	15,000
0(0402)	0.5	Punched Carrier Taping	2	10,000
1(0603)	0.8	Functied Carrier Tapling	4	4,000

• 2 mm Pitch (Pressed carrier taping) Size 0201

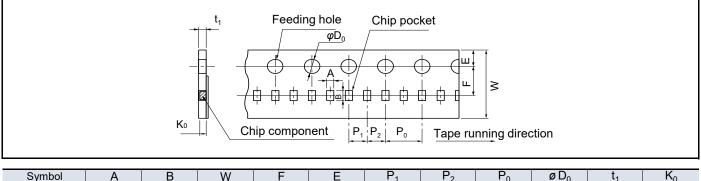


Symbol	A	В	W	F	E	P ₁	P ₂	P ₀	øD ₀	t ₁	K ₀
Unit	0.36	0.66	8.0	3.50	1.75	2.00	2.00	4.0	1.5	0.55	0.36
(mm)	±0.03	±0.03	±0.2	±0.05	±0.10	±0.05	±0.05	±0.1	+0.1/0	max.	±0.03

• 2 mm Pitch (Punched carrier taping) Size 0402

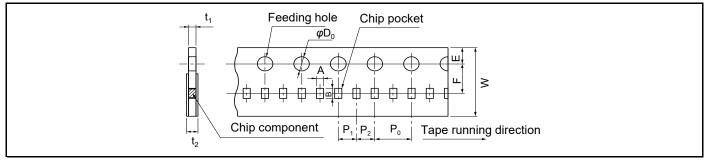


Symbol	A	В	W	F	E	P ₁	P ₂	P ₀	øD ₀	t ₁	t ₂
Unit	0.62	1.12	8.0	3.50	1.75	2.00	2.00	4.0	1.5	0.7	1.0
(mm)	±0.05	±0.05	±0.2	±0.05	±0.10	±0.05	±0.05	±0.1	+0.1/0	max.	max.

• 4 mm Pitch (Punched Carrier Taping) Size 0603

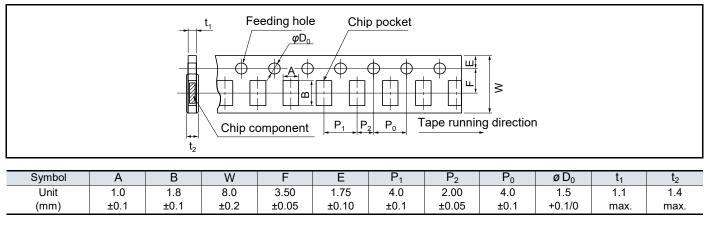

Packaging methods (Taping)


• Reel for taping

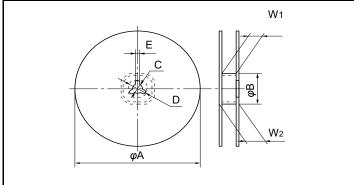


Symbol	øA	øВ	С	D
	180+0/-3	60.0+1.0/0	13.0±0.5	21.0±0.8
Unit (mm)	E	W ₁	W_2	
()	2.0±0.5	9.0+1.0/0	11.4±1.0	

• Leader part and taped end

Leader part



Taped end



Minimum quantity / Packing unit								
Part number (inch size)	Minimum quantity / Packing unit	Packing quantity in carton	Carton L×W×H (mm)					
ERTJZ (0201)	15,000	300,000	250×200×200					
ERTJ0 (0402)	10,000	200,000	250×200×200					
ERTJ1 (0603)	4,000	80,000	250×200×200					

Part No., quantity and country of origin are designated on outer packages in English.

Safety and Legal Matters to Be Observed

Product specifications and applications

- Please be advised that this product and product specifications are subject to change without notice for improvement purposes. Therefore, please request and confirm the latest delivery specifications that explain the specifications in detail before the final design, or purchase or use of the product, regardless of the application. In addition, do not use this product in any way that deviates from the contents of the company's delivery specifications.
- Unless otherwise specified in this catalog or the delivery specifications, this product is intended for use in general electronic equipment (AV products, home appliances, commercial equipment, office equipment, information and communication equipment, etc.).

When this product is used for the following special cases, please separately discuss the delivery specifications suited to each application with the company. These include applications requiring special quality and reliability, wherein their failures or malfunctions may directly threaten human life or cause harm to the human body (e.g.: space/aircraft equipment, transportation/traffic equipment, combustion equipment, medical equipment, disaster prevention/crime prevention equipment, safety equipment, etc.).

Safety design and product evaluation

- Please ensure safety through protection circuits, redundant circuits, etc., in the customer's system design so that a defect in our company's product will not endanger human life or cause other serious damage.
- This catalog shows the quality and performance of individual parts. The durability of parts varies depending on the usage environment and conditions. Therefore, please ensure to evaluate and confirm the state of each part after it has been mounted in your product in the actual operating environment before use. If you have any doubts about the safety of this product, then please notify us immediately, and be sure to conduct a technical review including the above protection circuits and redundant circuits at your company.

Laws / Regulations / Intellectual property

- The transportation of dangerous goods as designated by UN numbers, UN classifications, etc., does not apply to this product. In addition, when exporting products, product specifications, and technical information described in this catalog, please comply with the laws and regulations of the countries to which the products are exported, especially those concerning security export control.
- Each model of this product complies with the RoHS Directive (Restriction of the use of hazardous substances in electrical and electronic equipment) (2011/65/EU and (EU) 2015/863). The date of compliance with the RoHS Directive and REACH Regulation varies depending on the product model. Further, if you are using product models in stock and are not sure whether or not they comply with the RoHS Directive or REACH Regulation, please contact us by selecting "Sales Inquiry" from the inquiry form.
- During the manufacturing process of this product and any of its components and materials to be used, Panasonic does not intentionally use ozone-depleting substances stipulated in the Montreal Protocol and specific bromine-based flame retardants such as PBBs (Poly-Brominated Biphenyls) / PBDEs (Poly-Brominated Diphenyl Ethers). In addition, the materials used in this product are all listed as existing chemical substances based on the Act on the Regulation of Manufacture and Evaluation of Chemical Substances.
- With regard to the disposal of this product, please confirm the disposal method in each country and region where it is incorporated into your company's product and used.
- The technical information contained in this catalog is intended to show only typical operation and application circuit examples of this product. This catalog does not guarantee that such information does not infringe upon the intellectual property rights of Panasonic or any third party, nor imply that the license of such rights has been granted.

Panasonic Industry will assume no liability whatsoever if the use of our company's products deviates from the contents of this catalog or does not comply with the precautions. Please be advised of these restrictions.

Matters to Be Observed When Using This Product

(NTC thermistor / Chip-type)

Safety measures

- An NTC thermistor (chip-type) (hereinafter "the product" or "the thermistor") is intended for use in general-purpose and standard applications, such as temperature detection and temperature compensation in general electronic equipment. The thermistor may deteriorate in performance or fail (short or open modes) when used improperly.
- If the varistor in short mode is used, applied voltage may cause a large current to flow through the varistor. Consequently, the varistor heats up and may burn the circuit board. An abnormal state of the varistor that results from a problem with its service conditions (use environment, design conditions, mounting conditions, etc.) may lead to, in a worst case scenario, burnout of the circuit board, serious accident, etc. Sufficiently check for what is described below before using the varistor.


Use environments and cleaning conditions

- This product (varistor) is not designed for use in the specific environments described below. Using the product in such specific environments or service conditions, therefore, may affect the performance of the product. Please check the performance and reliability of the product first and then use the product.
 - (1) Used in liquid, such as water, oil, chemicals, and organic solvents.
 - (2) Used in a place exposed to direct sunlight, an outdoor place with no shielding, or a dusty place.
 - (3) Used in a place where the product is heavily exposed to sea breeze or a corrosive gas, such as Cl₂, H₂S, NH₃, SO₂, or NO_x.
 - (4) Used in an environment where electromagnetic waves and radiation are strong.
 - (5) Located close to a heating component or a flammable material, such as a vinyl cable.
 - (6) Sealed or coated with a resin, etc.
 - (7) Solder flux of the soldered product is cleansed with a solvent, water, and a water-soluble cleaner (be careful with solder flux soluble to water).
 - (8) Used in a place where dew concentrates on the product.
 - (9) Used in a contaminated state. (Example) Touching a varistor (with uncovered skin) mounted on a printed board leaves sebum on the varistor. Do not handle the varistor in this manner.
 - (10) Used in a place where excessive vibration or impact is applied to the product.
- Use the varistor within the range of its specified ratings/capabilities. Using the varistor under severe service conditions that are beyond the specified ratings/capabilities causes degraded performance or destruction of the varistor, which may lead to scattering of varistor fragments, smoke generation, ignition, etc. Do not use the varistor at a working temperature or maximum allowable circuit voltage that exceeds the specified working temperature or maximum allowable circuit voltage to combustible materials.
- In an improper cleaning solution, with which the varistor is cleaned, flux residues or other foreign matter may stick to the surface of the varistor, which degrades the performance (insulation resistance, etc.) of the varistor. In a polluted cleaning solution, the concentration of free halogen, etc., is high, and may result in poor/insufficient cleaning.
- Improper cleaning conditions (insufficient cleaning or excessive cleaning) may impair the performance of the varistor.
 - (1) Insufficient cleaning
 - (a) A halogenous substance in flux residues may corrode a metal element, such as a terminal electrode.
 - (b) A halogenous substance in flux residues may stick to the surface of the varistor and lower its insulation resistance.
 - (c) Tendencies described in (a) and (b) may be more notable with water-soluble flux than with rosin-based flux.
 - Be careful about insufficient cleaning.
 - (2) Excessive cleaning

Ultrasonic waves that are too powerful from an ultrasonic cleaner cause the board to resonate, in which case the vibration of the board may cause the varistor or a soldered part to crack or reduce the strength of the terminal electrode. Keep power output from the ultrasonic cleaner at 20 W/L or lower, its ultrasonic frequency at 40 kHz or lower, and an ultrasonic cleaning time at 5 minutes or less.

Response to anomalies and handling conditions

- Do not apply excessive mechanical impact to the varistor. Because the varistor body is made of ceramic, drop impact to the varistor readily damages or cracks the varistor. Once dropped on the floor, etc., the varistor may have lost its sound quality and become failure-prone. Do not use said varistor.
- When handling the board carrying the varistor, be careful not to let the varistor hit against another board. Take extra caution when handling or storing a stack of boards carrying varistors. There are cases where a corner of a board will hit against a varistor and damage or crack it, which may result in a failure of the varistor, such as a drop in its insulation resistance. Do not reuse a varistor that has been used on and removed from a board.

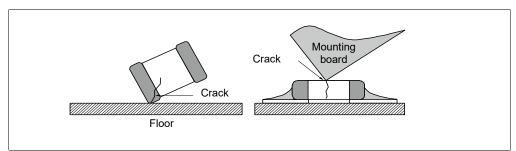

Circuit design and circuit board design

- A working temperature at which a varistor works in the circuit must be within the working temperature range specified in the specification sheet. A temperature at which a varistor incorporated in the circuit is kept in storage without operating must be within the storage temperature range specified in the specification sheet. Do not use the varistor at a higher temperature than the maximum working temperature.
- Ensure that a voltage applied across the terminals of the thermistor in use is equal to or lower than the maximum voltage (maximum power). When the thermistor is used in a condition where the thermistor is supplied with power exceeding the maximum power, self-heating by the thermistor becomes so intensive that the thermistor with high temperature may fail or burn out. Discuss safety measures, such as a protective circuit against an abnormal voltage, etc. The thermistor in use generates heat by itself even when supplied with power equal to or lower than the maximum power. This self-heating may make the thermistor incapable of exactly detecting the ambient temperature.


When using the thermistor, ensure that a voltage applied across the terminals of the thermistor is equal to or lower than the maximum voltage (maximum power) and take the heat dissipation constant of the thermistor into consideration.

Maximum power

It refers to the maximum of power that can be suppled consecutively to the thermistor in still air with a certain ambient temperature. Note that the maximum power when the ambient temperature is 25 °C or lower is equal to the rated power, and that the maximum power when the ambient temperature is higher than 25 °C follows a derating curve shown in a graph on the right.

·Heat dissipation constant


A heat dissipation constant represents power that the thermistor needs to raise its temperature by 1 °C by self-heating in a temperature steady state. Dividing power consumption by the thermistor by a temperature increment of the thermistor yields the heat dissipation constant. The heat dissipation constant is expressed in units of (mW/ °C).

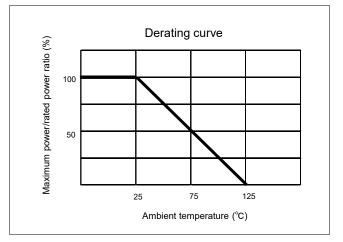


- The resistance of the thermistor changes with changes of the ambient temperature or by its self-heating. When measuring the resistance value of the thermistor in a circuit examination, acceptance inspection, etc., heed the following items.
 - ① Measurement
 - temperature ② Power
- Measurement temperature shall be 25 ±0.1 °C. We recommend measurement of the thermistor in a liquid (silicone oil, etc.) in which a measurement temperature is kept stable.
 Power supplied to the thermistor shall be 0.10 mW or less. We recommend resistance value measurement by a four-terminal measurement method, using a constant-current power supply.
- Using the varistor on an alumina board has an expectation of performance degradation due to thermal impact (temperature cycle). Before using the varistor, sufficiently confirm that the board does not affect the quality of the varistor.

Mounting conditions

The more solder deposited on the varistor, the greater the stress to the varistor, which leads to cracking of the varistor. When designing a land on the board, determine the shape and dimensions of the land so that a proper volume of solder is applied in the land. Design the land such that its left and right sides are equal in size. In a case where solder volumes are different between the left and right sides of the land, a greater volume of solder takes more time to cool and solidify. As a result, stress acts on one side which may crack the varistor.



<Recommended land dimensions (example)>

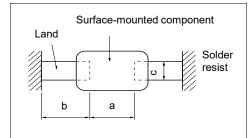


Shape symbol	Compo	nent dim	ensions	а	b	с
(JIS size)	L	W	Т	a	b	C
Z (0603)	0.6	0.3	0.3	0.2 to 0.3	0.25 to 0.30	0.2 to 0.3
0 (1005)	1.0	0.5	0.5	0.4 to 0.5	0.4 to 0.5	0.4 to 0.5
1 (1608)	1.6	0.8	0.8	0.8 to 1.0	0.6 to 0.8	0.6 to 0.8

Unit: mm


<Using solder resist>

- Use solder resist to evenly distribute solder volumes on the left and right sides.
- When a component is located close to the varistor, the varistor is mounted together with a lead-attached component, or a chassis is located close to the varistor, separate solder patterns from each other using the solder resist.
- * Refer to cases to avoid and recommended examples shown on the right table.

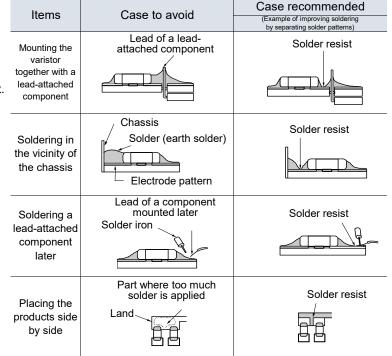

<Varistor placement that avoids stress caused by warp in the board>

- When the board warps during or after soldering of the varistor to the board, the warping of the board may cause the varistor to crack. Place the varistor so that stress caused by the warp is negligible to the varistor.
- * Refer to the case to avoid and a case recommended example shown on the right table.



Case to avoid


Case recommended

Set the varistor sidewise relative to the direction in which stress

<Mechanical stress near a breaking line of the board>

- Mechanical stresses to the varistor near a breaking line of the board vary depending on the mounting position of the varistor. Refer to the figure on the right.
- The varistor receives mechanical stresses different in size when the board is broken by different methods. The size of the stress the varistor receives is smaller in the following order: pushing back<breaking along a slit<breaking along a V groove<breaking along a perforated line. In addition


to varistor placement, consider the board breaking method as well.

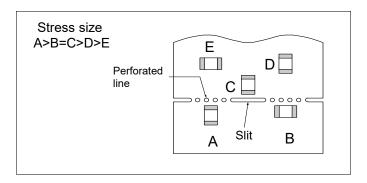

• When the thermistor is located near a heating element, such as a heater, if the thermistor is soldered directly to the heating element or is mounted together with the heating element on the same land, the thermistor exposed to a heat stress may crack. If you consider adopting such a layout, contact us first for consultation.

<Mounting density and space between components>

- When space between components is too narrow, solder bridges or solder balls have negative effects on the components. Be careful to provide proper space between the components.
- <Mounting on the board>
 - When the varistor is mounted on the board, an excessive impact load, such as pressure from a suction nozzle for mounting the varistor and mechanical impact/stress caused by a positional shift or positioning, may be applied to the varistor. Prevent application of such an excessive impact load to the varistor.
 - · A mounter needs to be checked and maintained regularly.
 - When the bottom dead center of the suction nozzle is too low, an excessively large force is applied to the varistor when it is mounted, which may crack the varistor. Heed the following instructions when using the suction nozzle.
 - (1) Set the bottom dead center of the suction nozzle at the upper surface of the straightened board.
 - (2) Set the pressure of the suction nozzle equal to a static load between 1 N to 3 N.
 - (3) In the case of double-face mounting, put a backup pin on the lower surface (back) of the board to prevent the board from warping. This keeps the impact of the suction nozzle as small as possible. Typical examples of using the backup pin are shown in the following table.

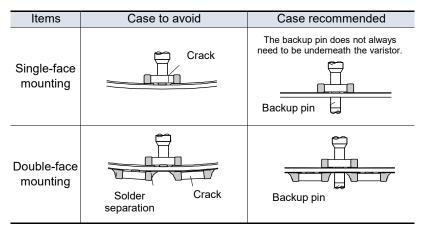

(4) Adjust the suction nozzle so that its bottom dead center is not too low.


- When positioning grippers wear out, they apply mechanical impact to part of the varistor when positioning it, thus chipping or cracking the varistor in some cases. Maintain the proper dimensions of the positioning grippers in their closed state and regularly carry out maintenance, check, or replacement of the positioning grippers.
- A varistor mounted on a heavily warped printed board, may crack or break. Put a backup pin on the back of the board to reduce the warp of the board to 0.5 mm or less with 90 mm span width.

<Selecting flux>

- Flux may have a great effect on the performance of the varistor. Before using the varistor, check whether the flux has
 any effect on the performance of the varistor.
 - Use flux containing a halogen-based substance of 0.1 wt% (in terms of chlorine) or less. Do not use highly acidic flux.
 - (2) Water-soluble flux remaining on the thermistor surface may impair its insulation resistance when cleaning work is insufficient. When using the water-soluble flux, clean the soldered part sufficiently to eliminate flux residues.

Reflow soldering

A temperature condition under which reflow soldering is performed is represented by a temperature curve consisting of a preheating part, a temperature-rising part, a main heating part, and a gradual cooling part. Heating the varistor rapidly creates excessive heat stress therein due to a large temperature difference and, because of this heat stress, the varistor may thermally crack. Be sufficiently careful with a temperature difference resulting from rapid heating. The preheating part is a temperature area that is important for preventing a tombstone (chip rising) phenomenon. Be sufficiently careful with temperature control.

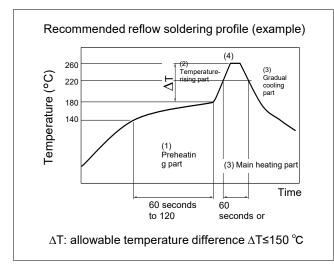

Items	Temperature condition	Time, heating rate
(1) Preheating part	140 °C to 180 °C	60 to 120 seconds
(2) Temperature- rising part	Preheating temperature to peak temperature	2 to 5 °C per second
(3) Main heating part	220 °C or higher	60 seconds or less
(4) Peak	260 °C or less	10 seconds or less
(5) Gradual cooling part	Peak temperature to 140 °C	1 to 4 °C per second

Avoid performing rapid cooling (forced cooling) during the gradual cooling part. Rapidly cooling the varistor may result in thermal cracking of the varistor. When dipping the varistor in the cleaning solution right after soldering the varistor, confirm that the surface temperature of the varistor is 100 °C or lower. There is no problem with two cycles of reflow soldering under the recommended reflow soldering profile (example) conditions shown in the above diagram. Be sufficiently careful with deflection or warping of the board.

Note that the recommended soldering conditions indicate conditions under which the degradation of the product characteristics does not occur but do not indicate conditions under which stable soldering can be performed. Check and set conditions under which stable soldering can be performed, on a case-by-case basis.

Varistor temperatures vary depending on the mounted state of the varistor. Make sure to confirm that the surface temperature of the varistor is within the specified temperature when the varistor is mounted and then use the varistor.


· Soldering-iron-used soldering

In soldering-iron soldering, stress created by a rapid temperature change is applied directly to the varistor. Be sufficiently careful in controlling the temperature of the soldering iron tip. Be careful not to let the soldering iron tip come in direct contact with the varistor or its terminal electrode. The varistor is particularly vulnerable to rapid heating and rapid cooling. When heated or cooled rapidly, the varistor develops excessive heat stress therein resulting from the large temperature difference and because of this heat stress, may thermally crack. Observe the following instructions on preheating, gradual cooling, etc.

Once a varistor soldered with a soldering iron is removed from the board, it cannot be used again.

(1) Condition 1 (preheating included)

.,	······································	
(a) Solder:	: Use wire solder (with less chloride content) that is meant for soldering precision electronic equipment. (Wire diameter: 1.0 mm or less)	Recom
(b) Preheating:	: Preheat the varistor sufficiently so that the difference between the solder temperature and the surface temperature of the varistor is 150°C or less.	Prehea 60 se
(c) Temperature of the soldering iron tip	: 300°C or lower (a required volume of solder is melted on the soldering iron tip in advance).	ΔT: allo
(d) Gradual coolin	: After soldering the varistor, leave it in normal temperature conditions to let it cool	gradually.

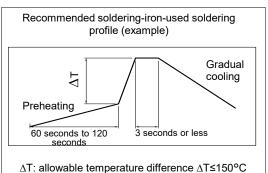


(2) Condition 2 (preheating not included)

If soldering iron tip conditions listed in the table on the right are met, the varistor can be soldered with the soldering iron without preheating the varistor.

- (a) Make sure that the soldering iron tip does not come in direct contact with the varistor or its terminal electrode.
- (b) After preheating the land sufficiently with the soldering-iron tip, slide the soldering-iron tip toward the terminal electrode of the varistor to solder the varistor.

<Inspection>

- When the printed board is inspected with measurement terminal pins after the varistor is mounted on the board, the measurement terminal pins pressed against the printed board cause the board to warp, which may cause a crack to form on the varistor.
 - (1) Put the backup pin on the back of the printed board to reduce the warp of the board to 0.5 mm or less with a 90 mm span width.
 - (2) Check whether the shape of the front ends of the measurement terminal pins poses no problem, whether the pins are equal in length, whether the pressure of the pins are not excessively high, and whether the set position of the pins is correct.




<Protective coat>

- When the varistor is coated with or embedded in a resin to improve the varistor's resistance to humidity and gas or to set the varistor stationary, it is expected that the following problems will arise. In such cases, confirm the performance and reliability of the varistor in advance.
 - (1) A solvent included in the resin infiltrates the varistor and impairs its characteristics.
 - (2) Heat from chemical reaction (curing heat) generated by the resin when it cures exerts a negative effect on the varistor.
 - (3) Expansion/shrinkage of the resin applies stress to the soldering part and causes it to crack.

<Splitting a multiple formation printed board>

 When splitting the board having components, including a mounted varistor into multiple pieces, be careful not to apply bending stress or torsional stress to the board. If bending stress or torsional stress, shown in the following diagram, is applied to the board when it is split, the varistor may develop a crack. Avoid, as much as possible, applying stress to the board.




• Avoid manually splitting the board so as to keep mechanical stress to the board as small as possible. When splitting the board, use a splitting jig or a board splitter.

•	v
Items	Condition
Temperature of the soldering iron tip	270 °C or lower
Wattage	20 W or less
Shape of the soldering iron tip	ø3 mm or less
Soldering-iron applying time	3 seconds or less

\cdot Example of a board splitting jig

An example of a board splitting jig is shown in the following diagram. Holding the part of the board that is far from the jig and applying a load bend the board excessively. Holding the part of the board that is closer to the jig and applying a load allow you to split the board with less bending.

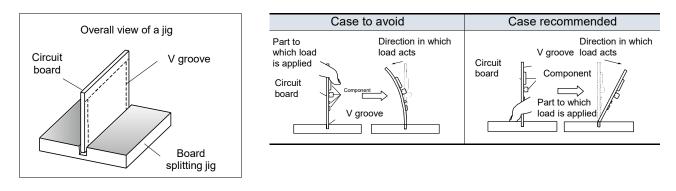

Storage conditions

- Avoid a high-temperature/high-humidity storage place and keep the varistor in a storage place where temperature ranges from 5 °C to 40 °C and relative humidity ranges from 20% to 70%.
- Do not store the varistor in a place where moisture, dust, or corrosive gas (hydrogen chloride, hydrogen sulfide, sulfur dioxide, ammonia, etc.) is present. It may impair the solderability of the terminal electrode. Also, in places where the varistor package is exposed to heat, direct sunlight, etc., packaging tape may deform or stick to the varistor which causes a problem when the varistor is mounted. Be careful in such cases.
- A varistor storage period shall be 12 months or less. When using a varistor kept in storage for more than 12 months, confirm its solderability before using it.