

Sticklers™ MPO CleanClicker™ 600


Fiber Optic Connector Cleaner

Product Features:

- Easy-to-use on data center & high density optical networks
- Cleans dust particulate & oil contamination
- 600+ cleanings for lowest cost-per-clean
- Fast click-to-clean MPO & MTP™ connectors in adapters, cassettes and trunk assemblies
- Cleans both male (with guide pins) MT ferrules and female (no guide pins) MT ferrules
- Adapter set available for use with CommScope® HMFOC and Corning OptiTip® hardened MPO connectors




MCC-CCMPO

 **Video:**
How to Use:
MPO CleanClicker™ 600
[@ SticklersCleaners.com](http://SticklersCleaners.com)

This rugged precision cleaner uses a smooth click-to-clean push-action, with light contact force to reduce the risk of end-face damage. With 600+ cleans, it is perfect for cleaning MPO connectors in high density network applications such as data centers, FTTH and central offices.

Engineered for MPO and MTP multifiber connectors, it cleans flat polished multimode and angled singlemode connectors.

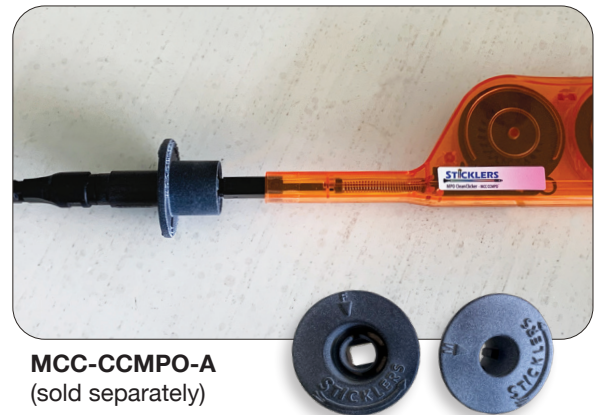

MCC-CCMPO-A
(sold separately)



TravelSafe
Packaging

For best results, use with:
Sticklers™ Fiber Optic Splice & Connector Cleaner

DESCRIPTION	PART NUMBER	CLEANS
MPO CleanClicker™ 600	MCC-CCMPO	600+
MPO CleanClicker™ Adapter Set (M/F) <i>(for Hardened Connector Interfaces: OptiTip® and HMFOC)</i>	MCC-CCMPO-A	--

When You Need Perfectly Clean Splices & Connectors

 SticklersCleaners.com

    Follow Us!

MicroCare Corporation
595 John Downey Drive
New Britain, CT 06051 USA
CAGE: OATV9
Tel: +1 860 827 0626
Toll Free: 1 800 638 0125
Email: TechSupport@MicroCare.com

MicroCare Europe BVBA
Vekestraat 29 B11
Industriezone 't Sas
1910 Kampenhout, Belgium
Tel: +32 2 251 95 05
Email: EuroSales@MicroCare.com

MicroCare U.K. Ltd
Seven Hills Business Park,
Morley,
Leeds, West Yorkshire, UK
LS27 8AT
Tel: +44 (0) 113 3501008
Email: mcceurope@microcare.com

MicroCare Asia Pte Ltd
102E Pasir Panjang Road
#03-01 Citilink Warehouse Complex
Singapore 118529
Tel: +65 6271 0182
Email: TechSupport@MicroCare.sg