FA-1210MB-S SHOCK ABSORBER - ADJUSTABLE

Bansbach easylift



| SPECIFICATIONS | | | | | | | | | | |
|-----------------------|--------------|--------------|---|-------------------------------|---------------------------|--------------------------------|-----------------------|-------------------------|-----------|--|
| Model | | Stroke mm | Max Energy Absorption J(kgf⋅m) | Max Equiv. Mass kg(kgf) | | Range of Impact Rate m/s | | Orifice Type | | |
| FA-1210MB-S | | 10 | 2.94(0.3) | 30(30) | | 0.3~1 | | Single- orifice type | | |
| COMMON SPECIFICATIONS | | | | | | | | | | |
| Max Drag N(kgf) | Drag Rate | | Max Energy Absorption per min. J/min(kgf·m/min) | | Extension Force N(kgf) | | Operating Temp. C° | | Mass g | |
| 1470(150) | 1470(150) 60 | | 98(10) | | | 9.8(1.0) -5 or lower | | ~70 | 44 | |

PRECAUTIONS FOR USE

- Do not use this product without carefully reading the attached owner's manual.
- Ensure that an external stopper (Stopper nut OP-020KB) is also used.
- Do not turn the oil inlet screw located at the bottom of the main unit.
- Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- Do not use this product in a vacuum or a location where it may come in contact with oil.
- Ensure that an eccentric load is not applied to the soft absorber. (Allowable eccentric angle: within ±2.5°)

ADJUSTMENT METHOD

- To adjust, turn the adjustment knob.
- Because the adjustment can be done in an analog manner, a value between two integers on the indicator can be set.
- It does not have a lock screw for locking the adjusted setting.


ABSORPTION CHARACTERISTICS


| Orifice type | Single-orifice type | Absorption characteristics | | | |
|--------------|---------------------|----------------------------|--|--|--|
| Model number | FA-1210MB Series | Resistance | | | |
| Application | For low speed | Stroke | | | |


OPTIONAL PARTS

Eccentric angle adaptor OP-010KB

- Screw the eccentric angle adaptor into the main unit until the cap for the eccentric angle and the piston rod form a tight connection. While maintaining this position, fasten the main unit's nut until it is secured.
- Use the eccentric angle adaptor when the eccentric angle is 2.5° or larger.
- The main unit can also be used as a stopper.
- Use it with a capless soft absorber.
- The maximum operating eccentric angle with an eccentric angle adaptor is ±10°.
- The caps and the guides for inclined use are not unbundled.

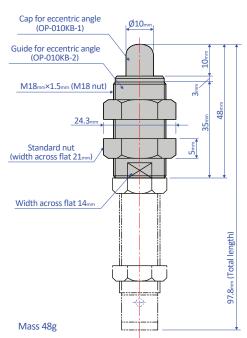


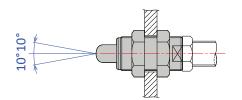

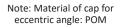

Stopper nut OP-020KB

 Adjust so that it stops 1 mm before the stroke end, and fasten with the main unit's nut until secured.

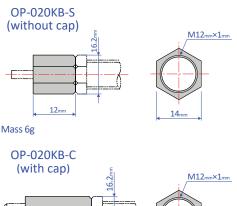


Mass 8g

Note: When attaching, make sure that the side without a bearing chamfer is the impact surface.

Standard nuts are sold separately as well - M12 Nut

Square flange OP-040KB


 Once the attachment site is determined, use the main unit's nut to securely fasten in place.

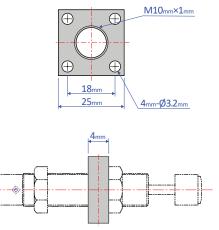

Mass 16g

Liquid-proof cap FA-1210MB-C-060

- Ideal for use in environments where oil splatter poses a problem.
- Ensure that the cap is facing upward. If the cap is facing sideways or downward, it cannot provide an effective means for liquid proofing.

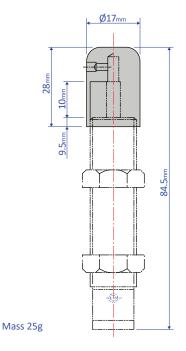

Holder with a switch OP-030KB-2

Although a holder with a switch can be ordered on its own, we strongly recommend ordering one with the main unit. Please include the main unit's model number when placing an order.

